


MEZO MZ-5

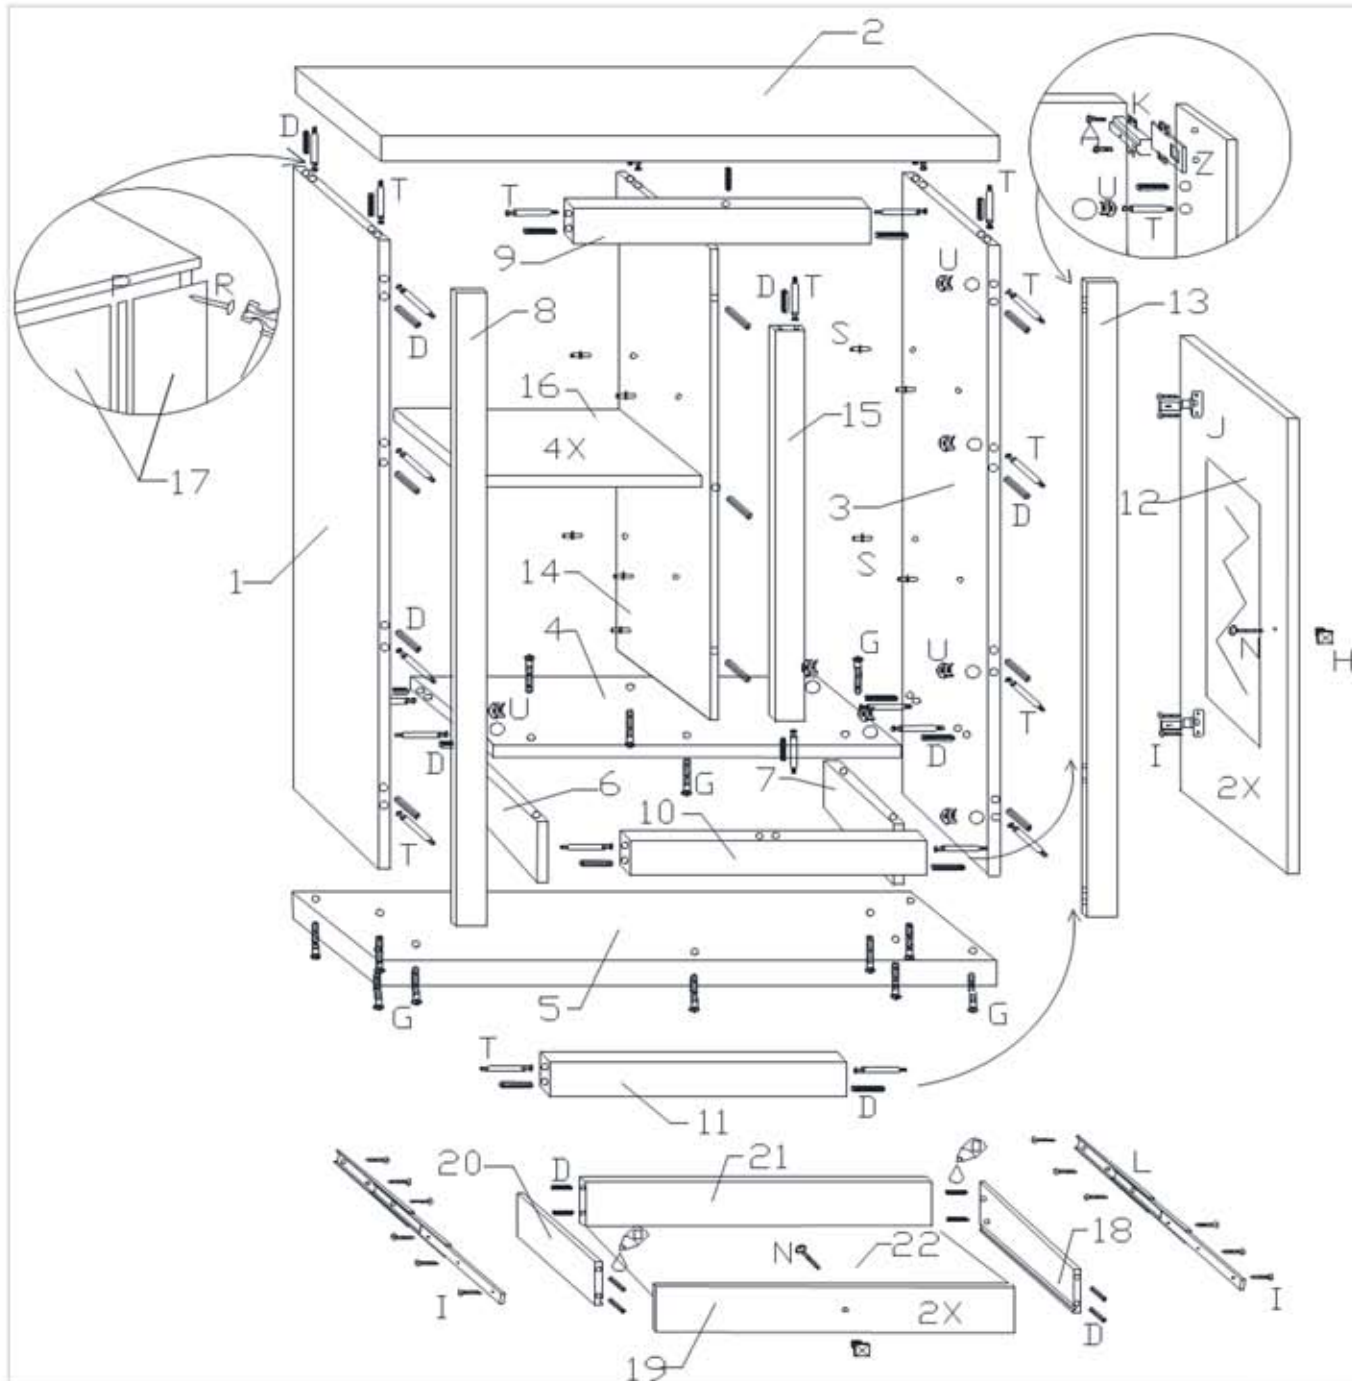

16x S	3x P	15x C	46x D	26x T	26x U	15x G	2x D	32x 3,5x16 I	6x E	4x Z	6x K
6x N	8x A	26x W	60x R	1x M	4x J	4x K	4x L	2x L			

Demontaż
przewodnicy

