

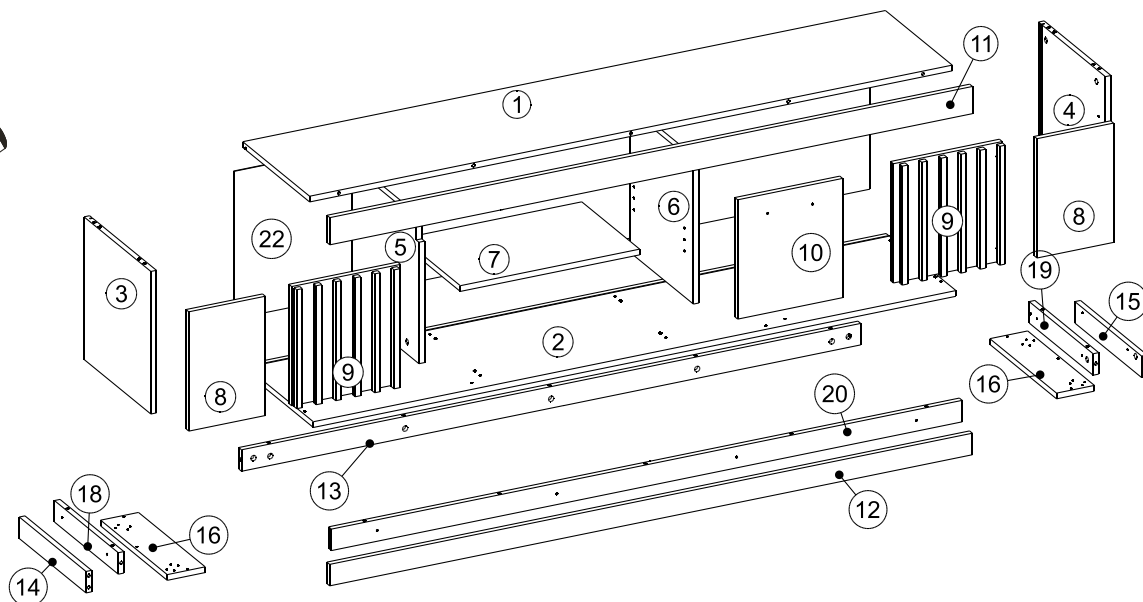
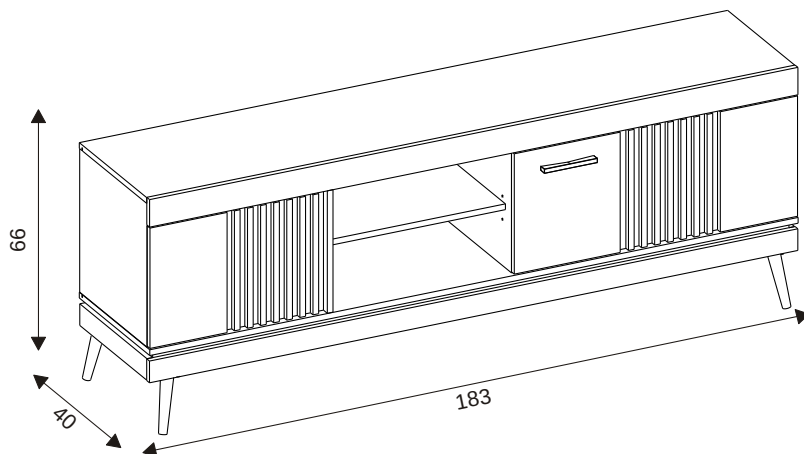
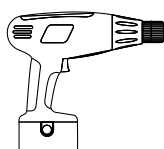
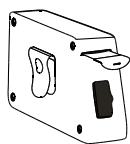
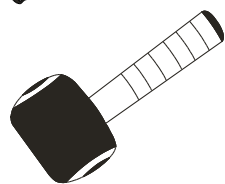
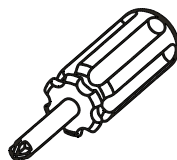
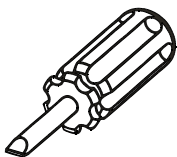
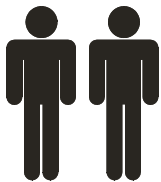
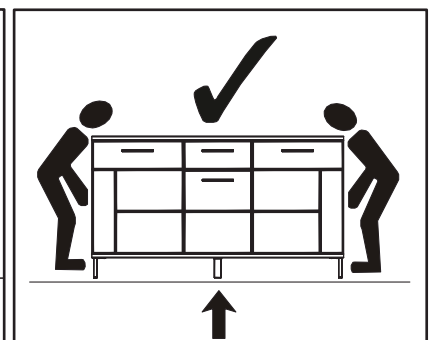
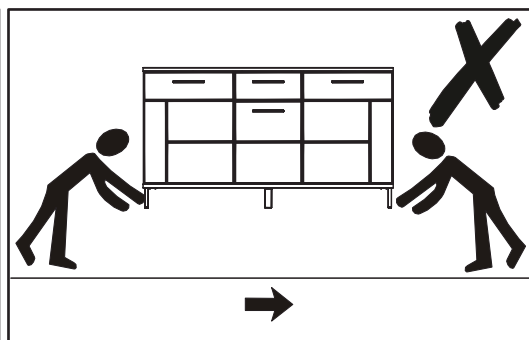
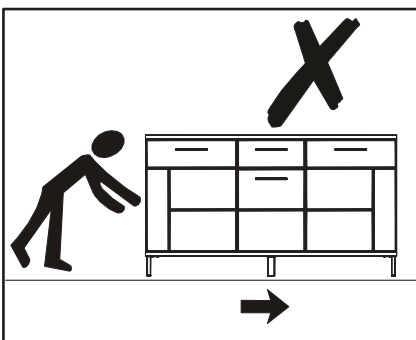
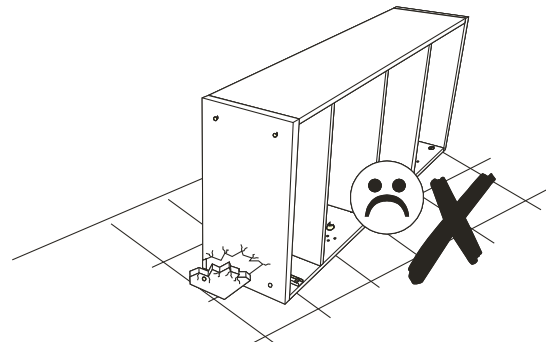
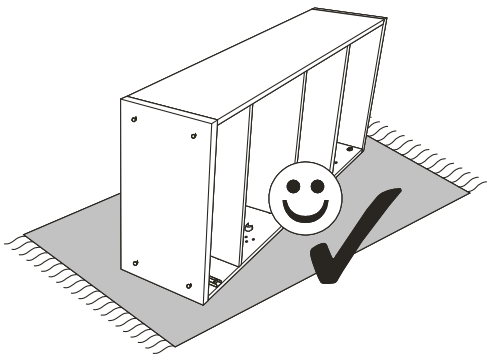
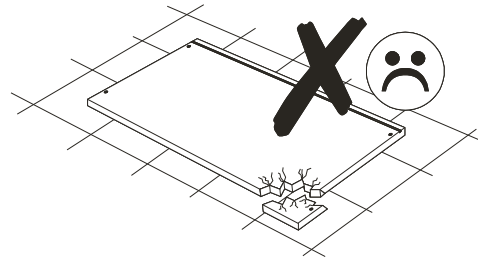
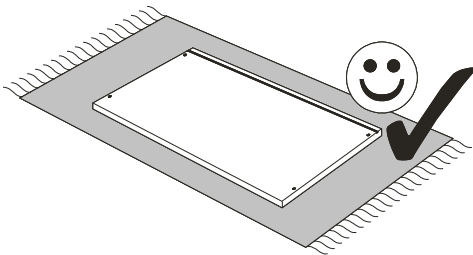
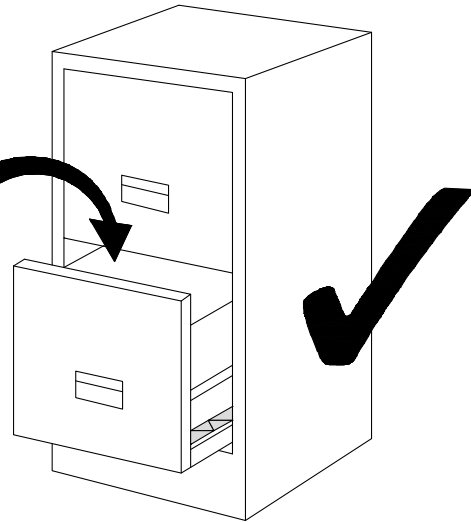







MODELL: M102









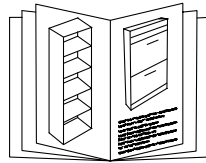


8	333x218	3/3	16	380x108	2/3			
7	511x330	2/3	15	380x60	1/3			
6	398x363	2/3	14	380x60	1/3	22	1812x412	1/3
5	398x379	2/3	13	1764x60	1/3	21		
4	398x381	2/3	12	1831x60	1/3	20	1797x60	1/3
3	398x381	2/3	11	1831x76	1/3	19	364x60	1/3
2	1831x398	1/3	10	333x299	3/3	18	364x60	1/3
1	1831x381	1/3	9	333x310	3/3	17		


16x #20/171 ZN1	16x 3.5x16 W3	10x ST1	6x 4x27 WP2	4x B1	10x 3.x20 W9	6x ZC90	14x 4x30 W4	
3x B2	22x 8x30 K1	4x N1	28x 15x16 ZN4	37x #15/15 M1	37x DU232T T1	16x 5x16 W8	6x 2x20 G1	1x U 1

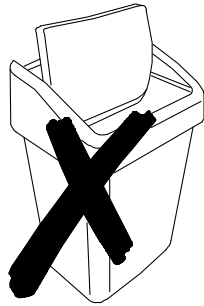

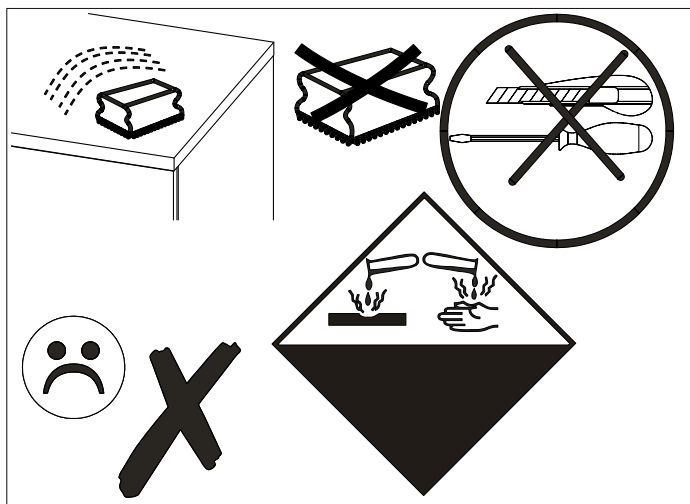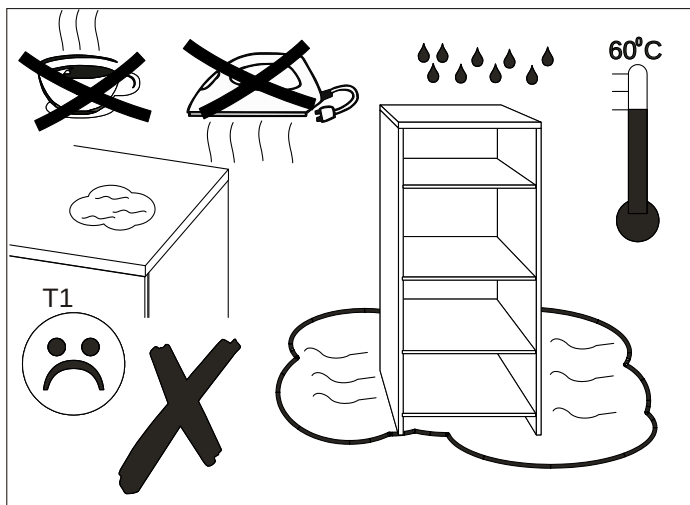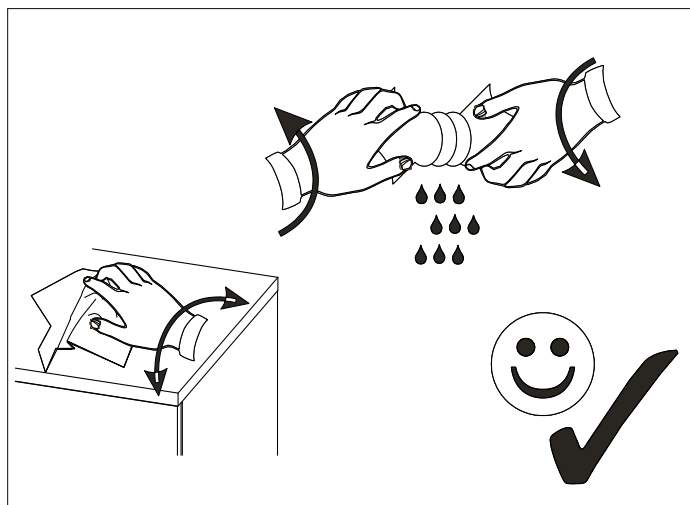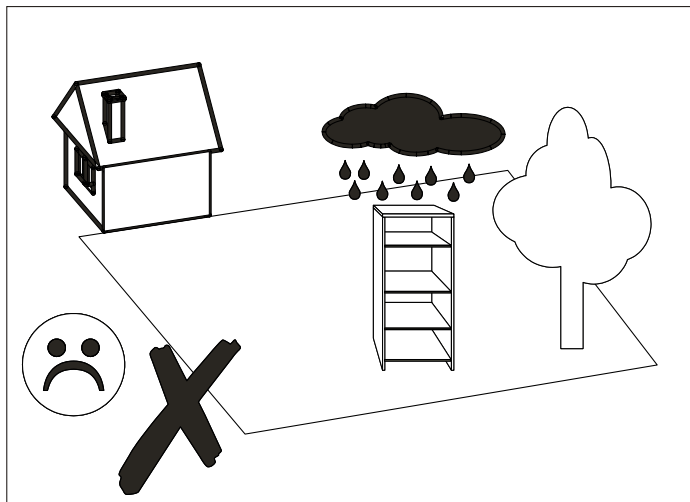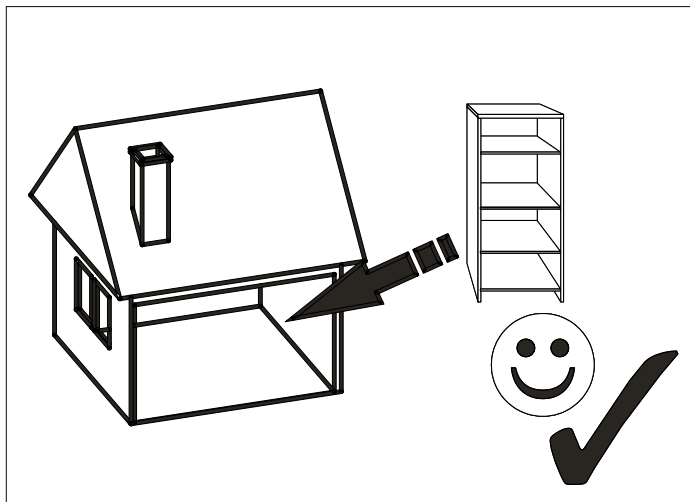


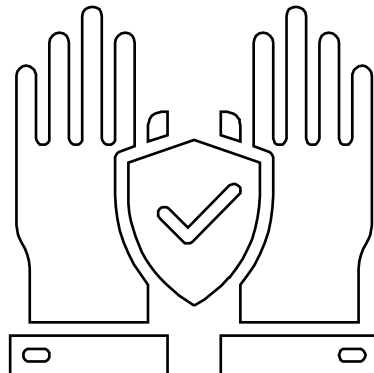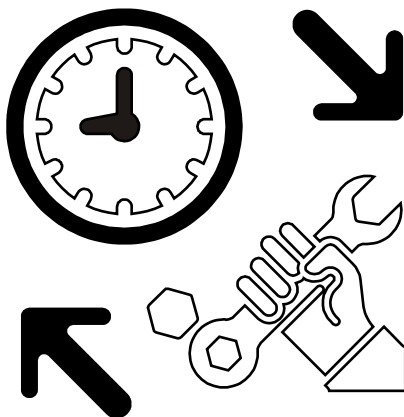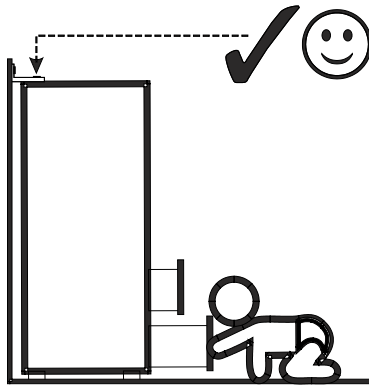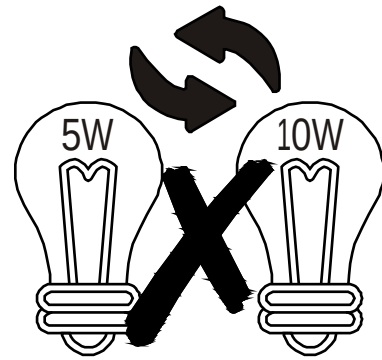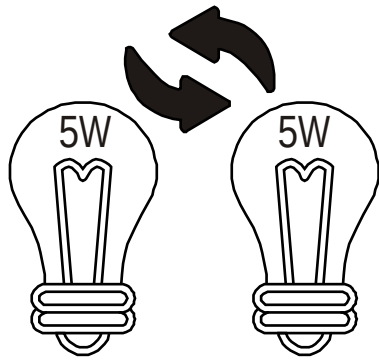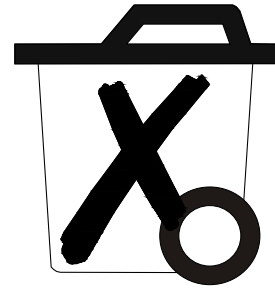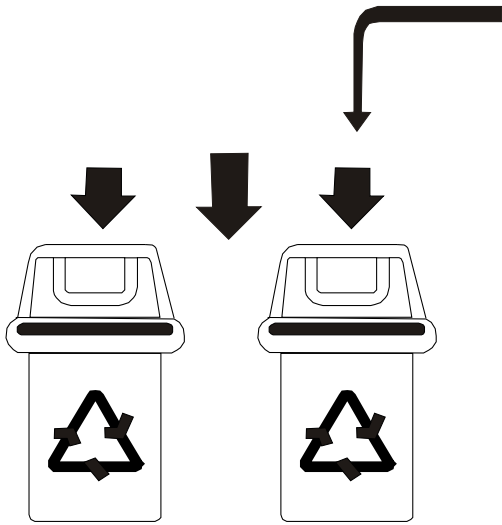



1▶

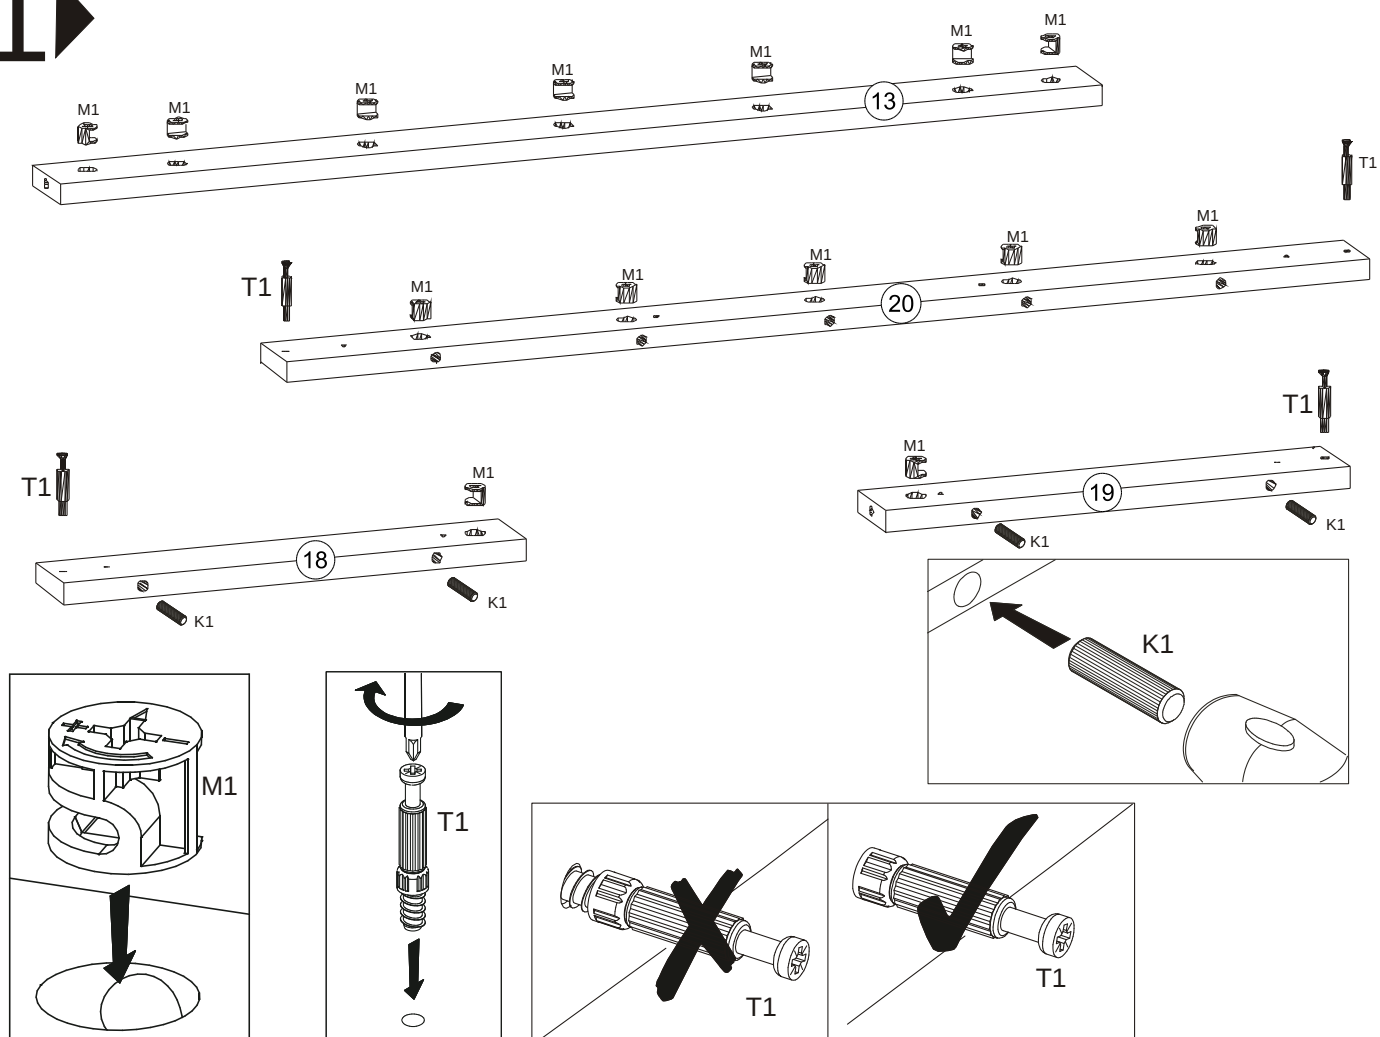



2▶

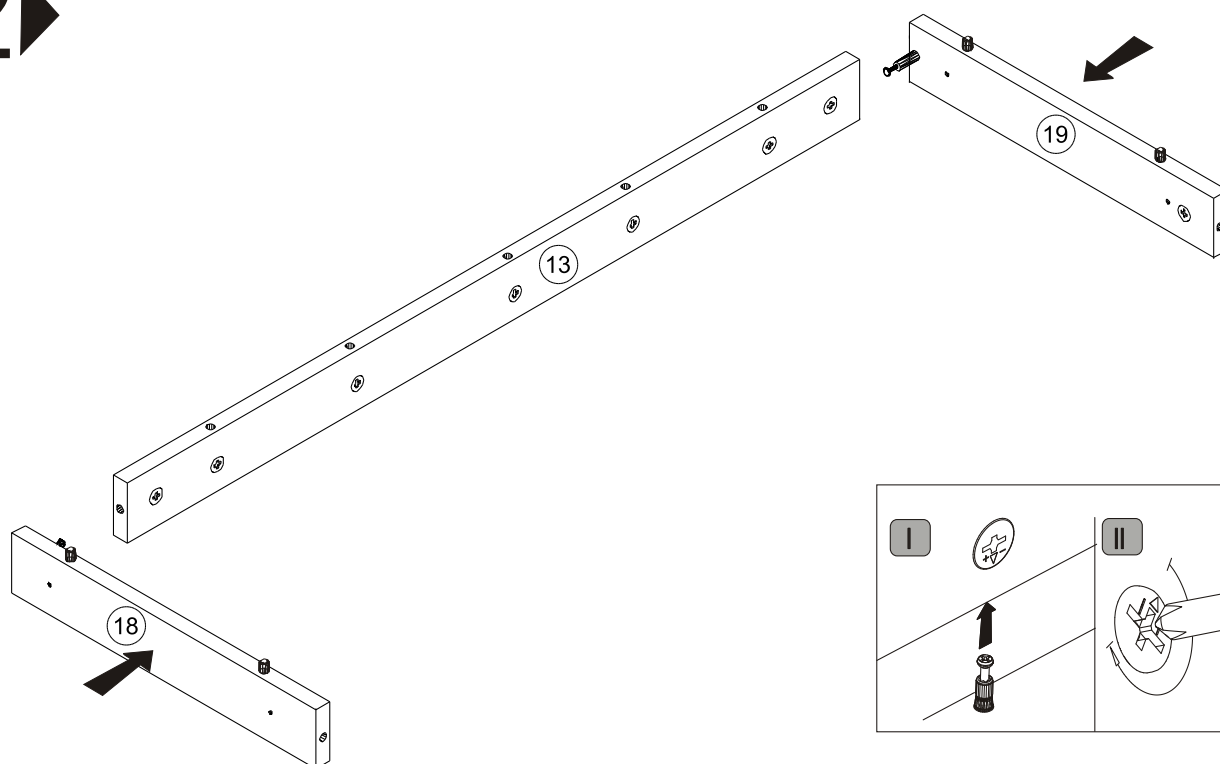






3▶

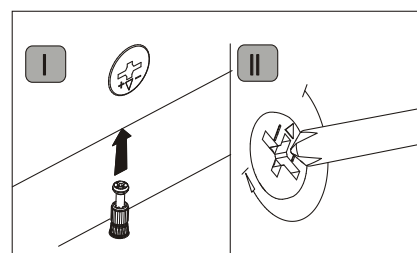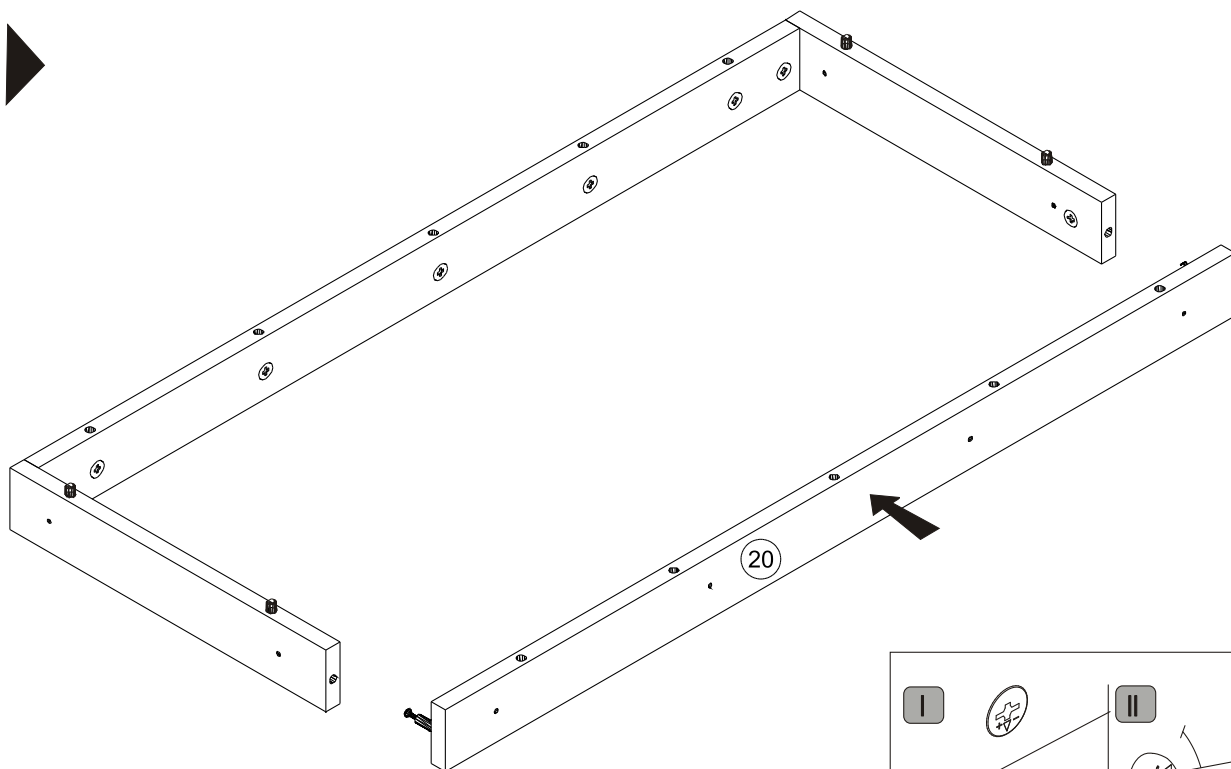


4▶

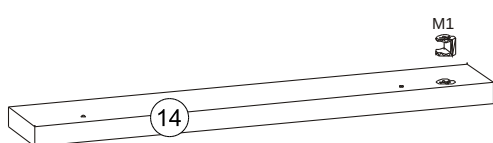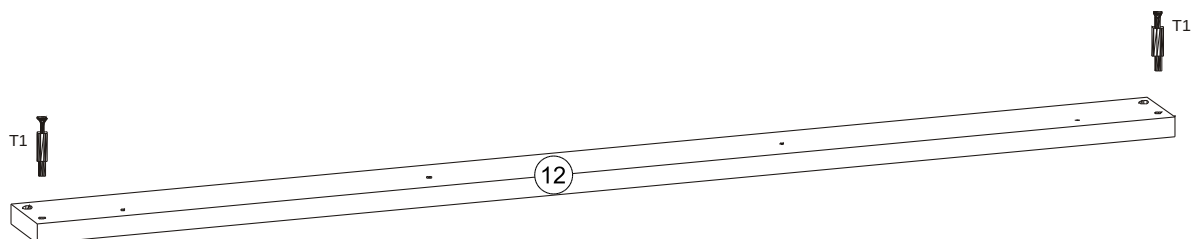




K1

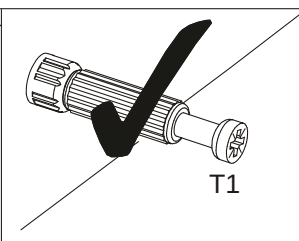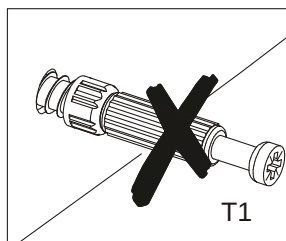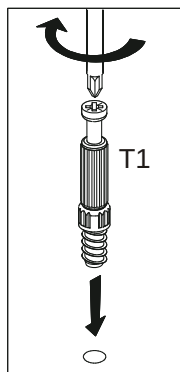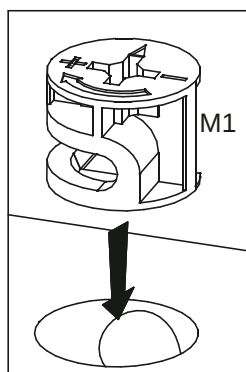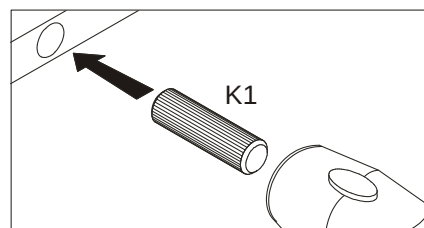



5▶

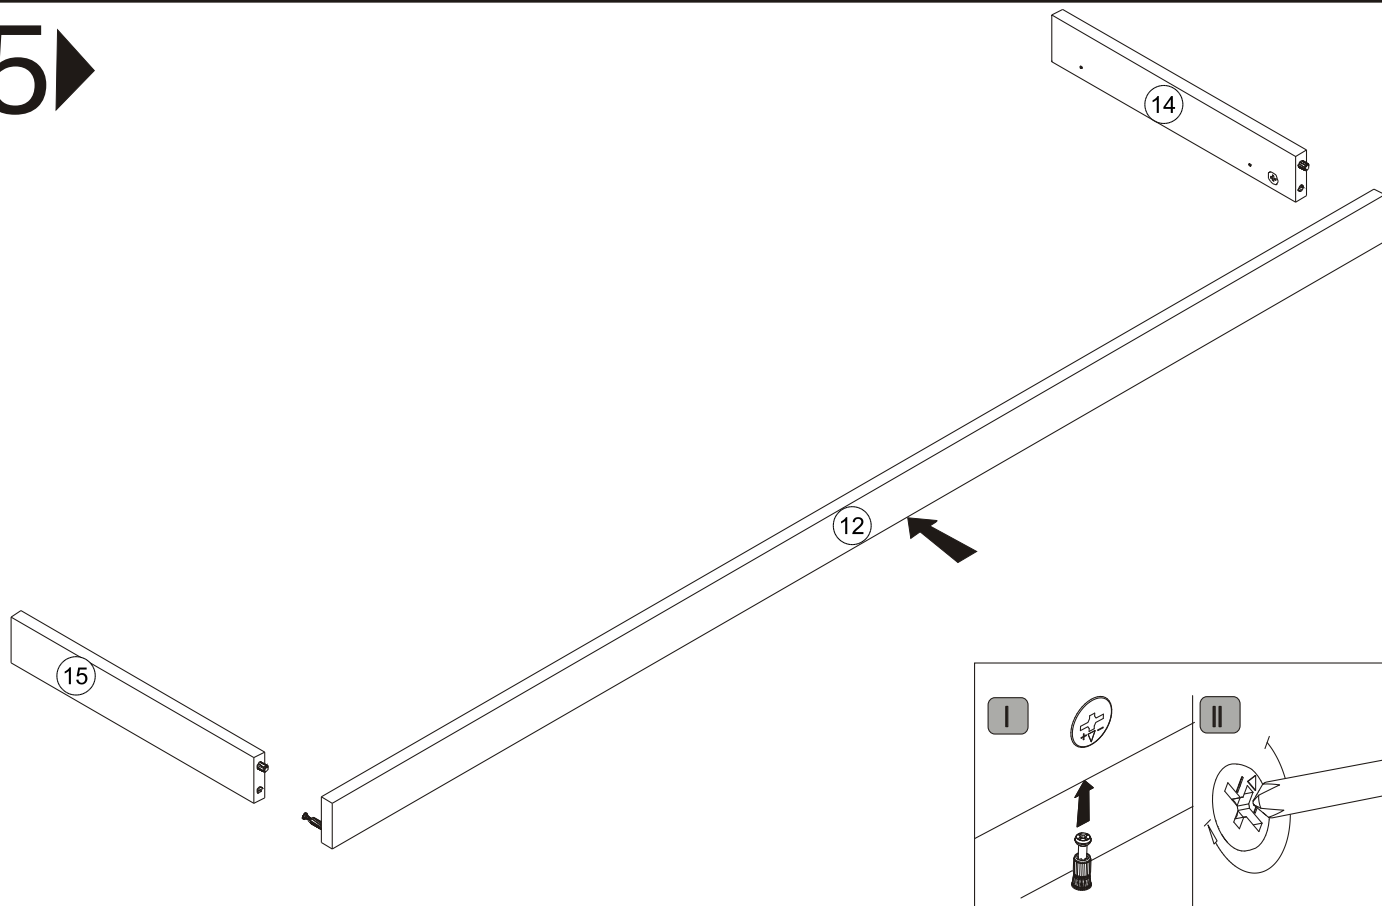



6▶

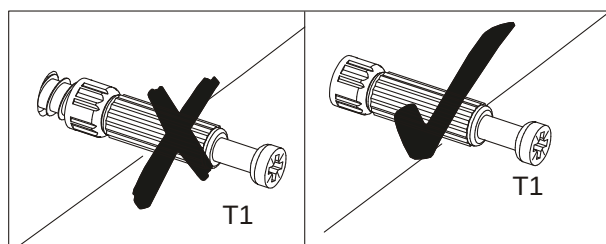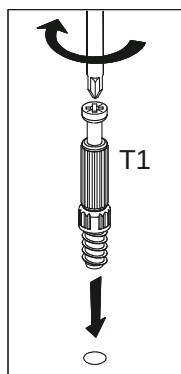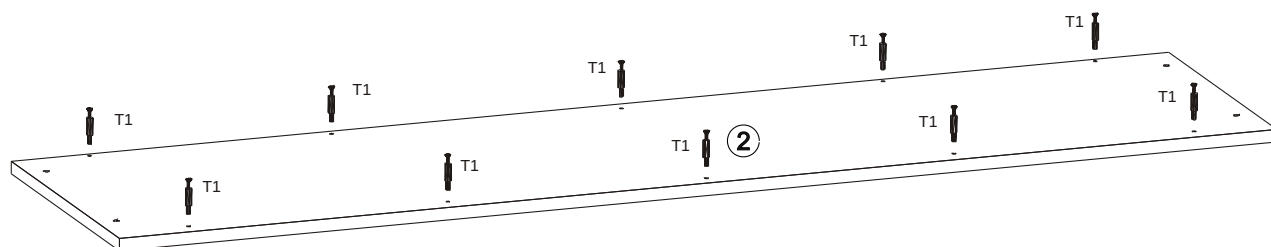


7▶

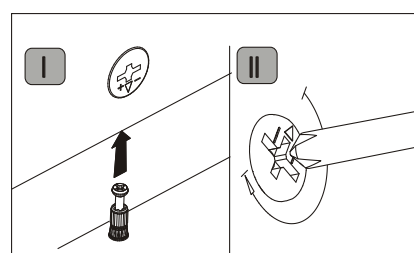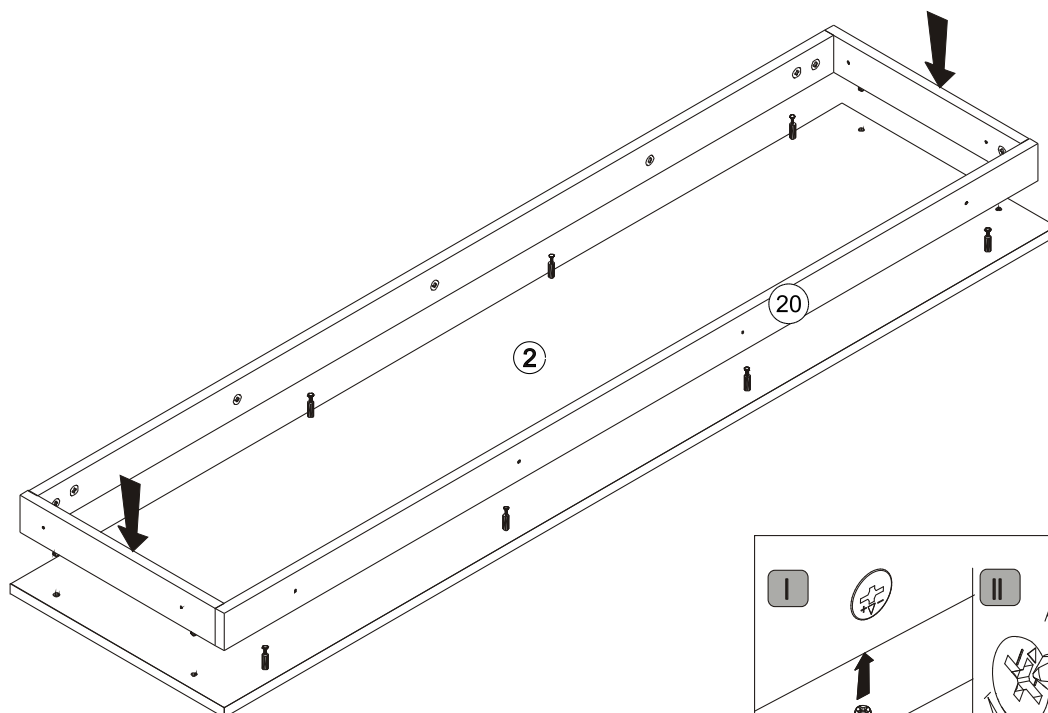


8▶

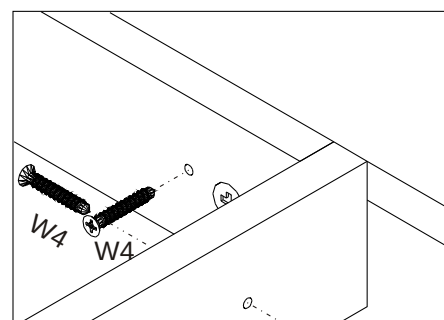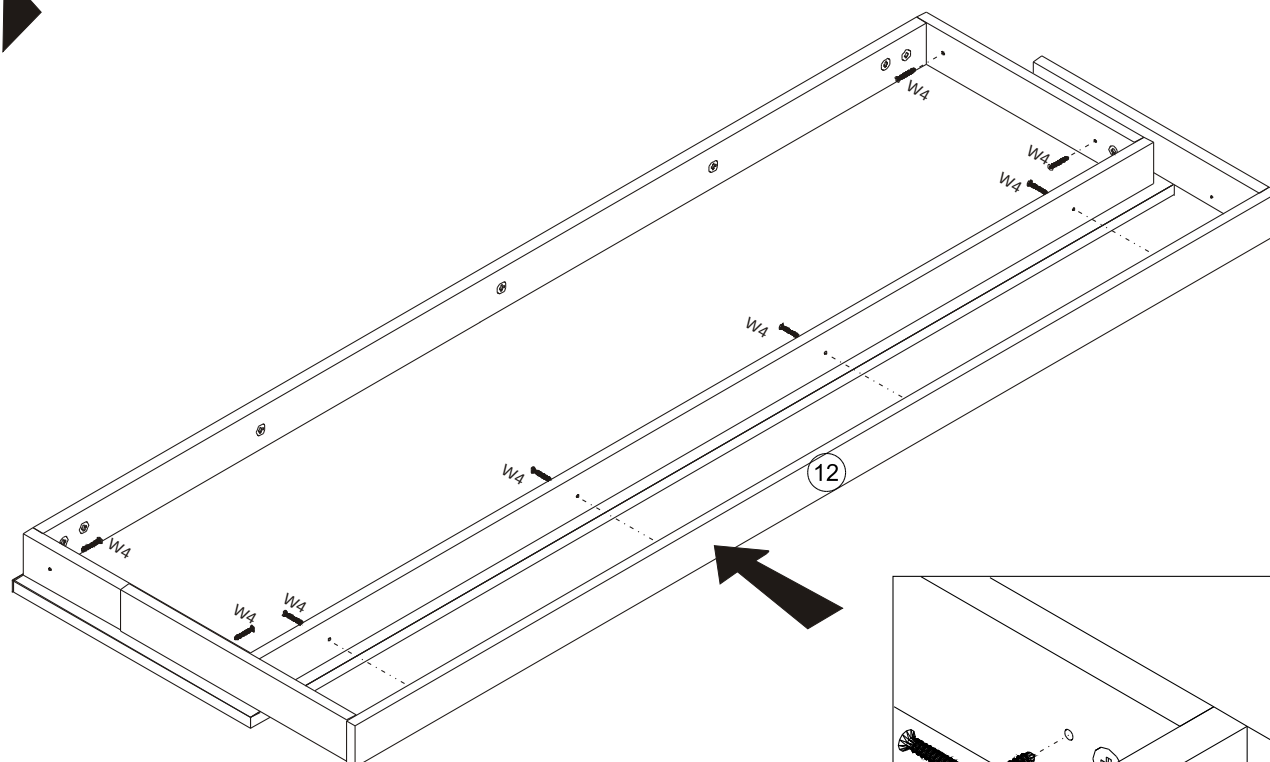





9▶

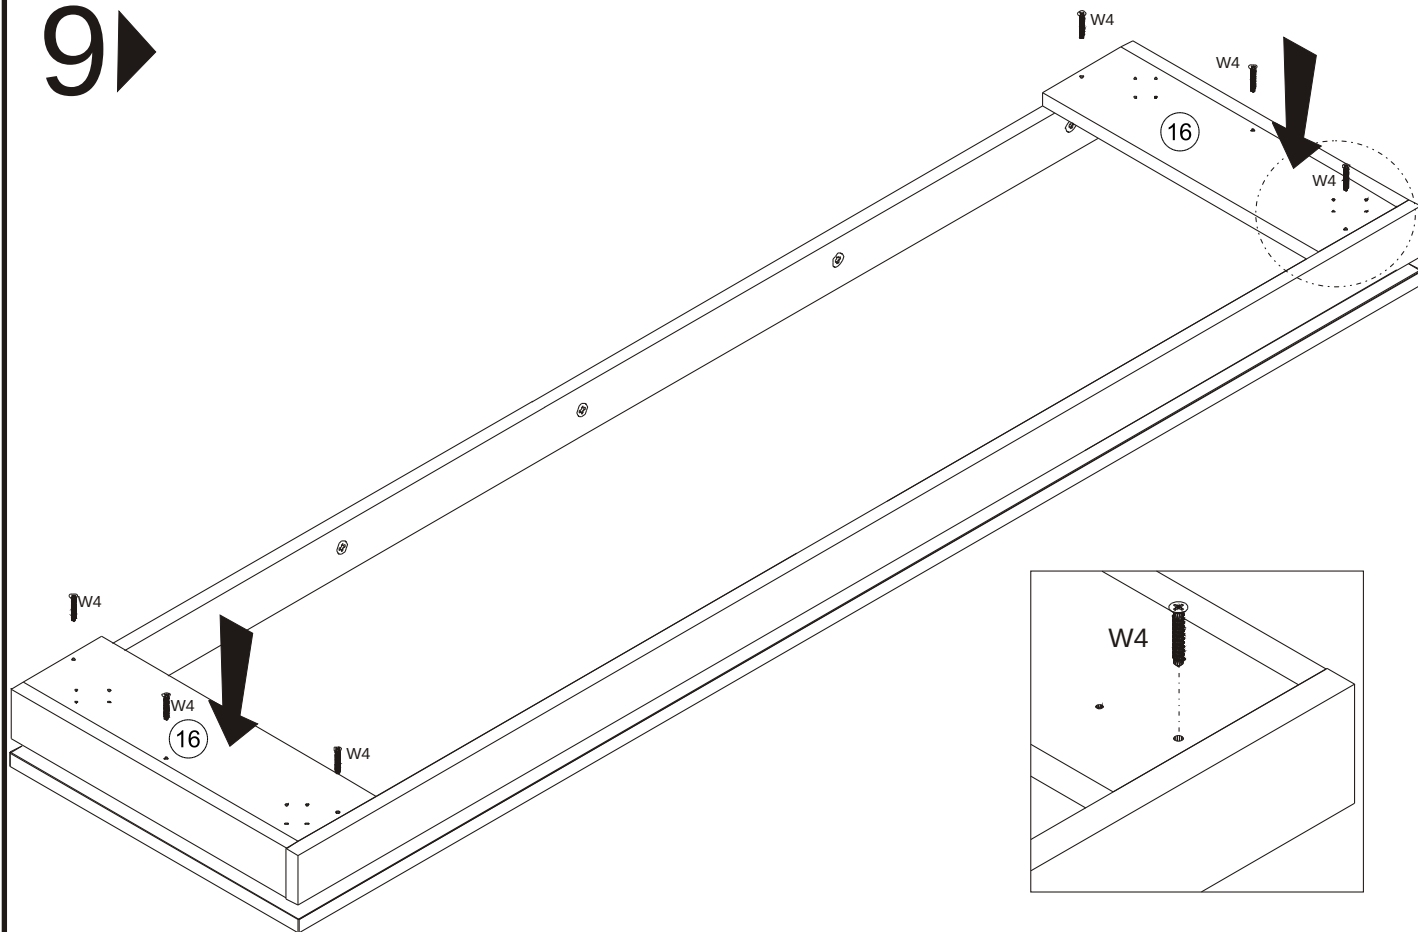







10▶

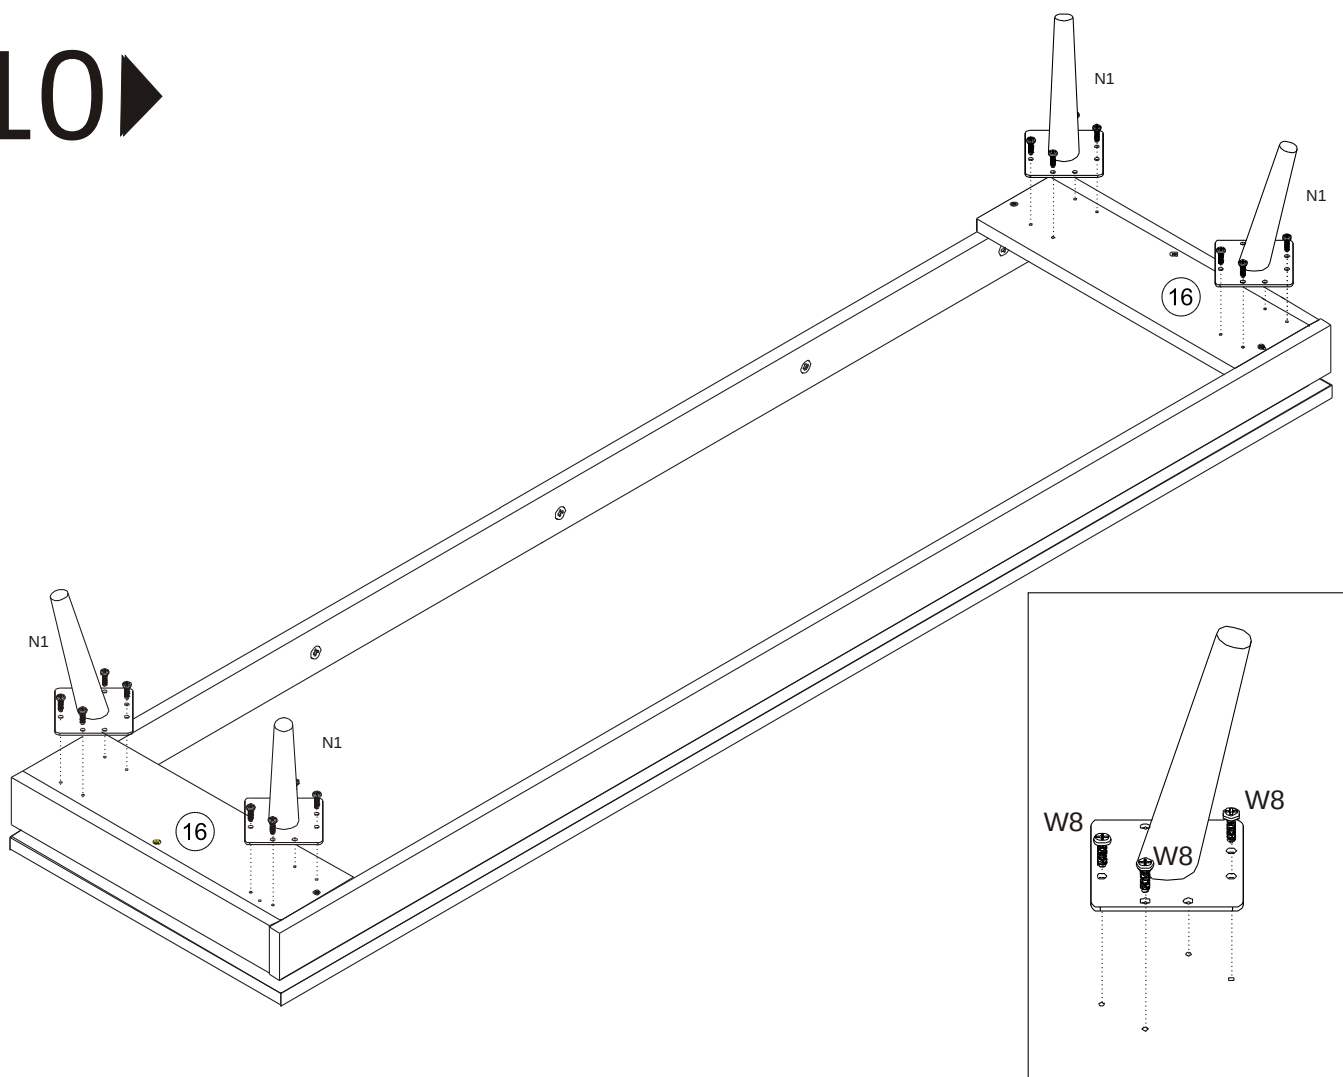









11 ▶

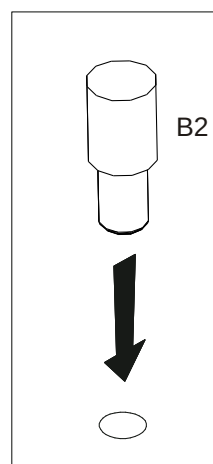
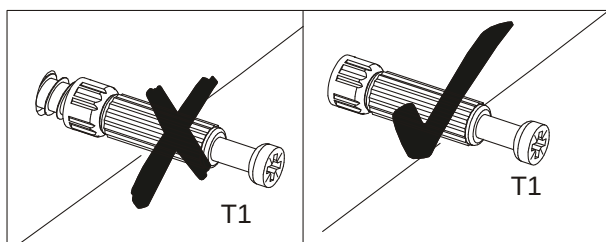
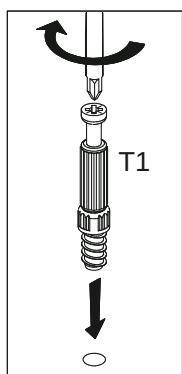
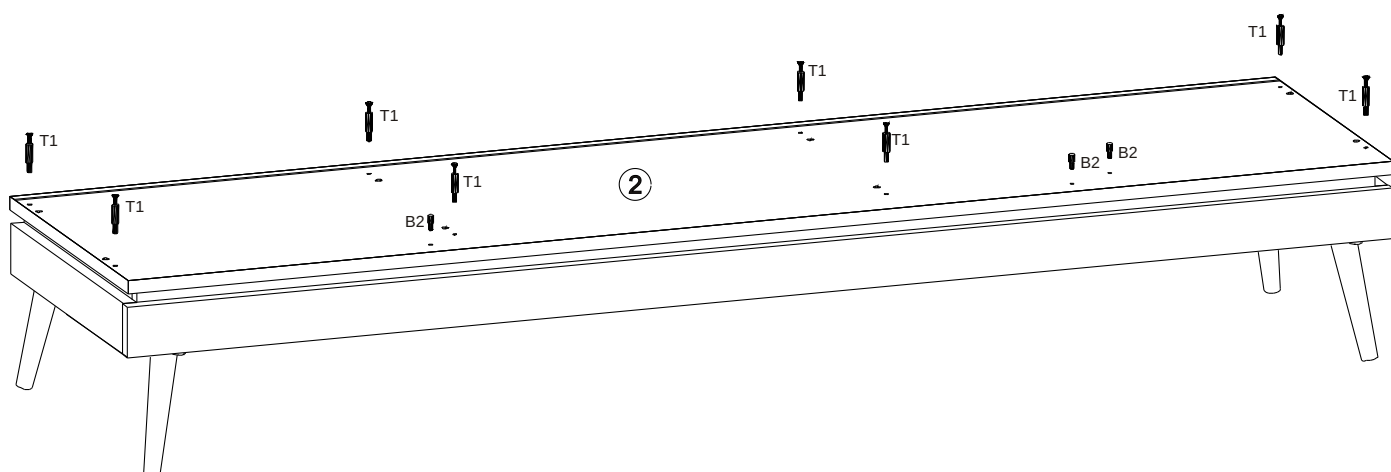


12▶

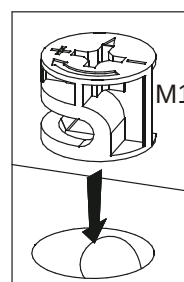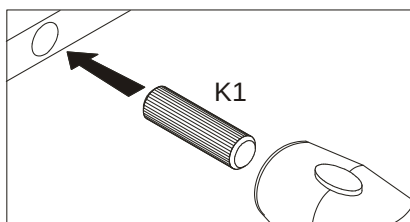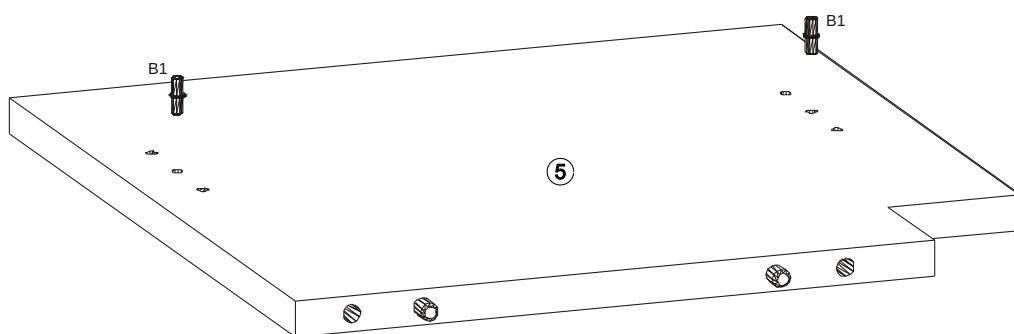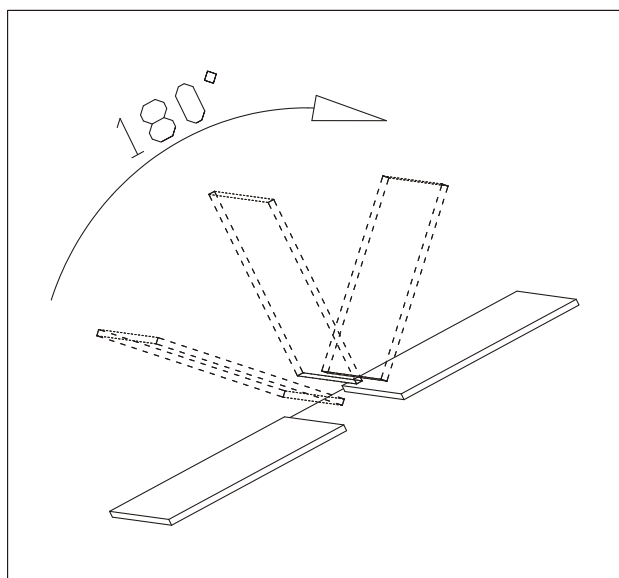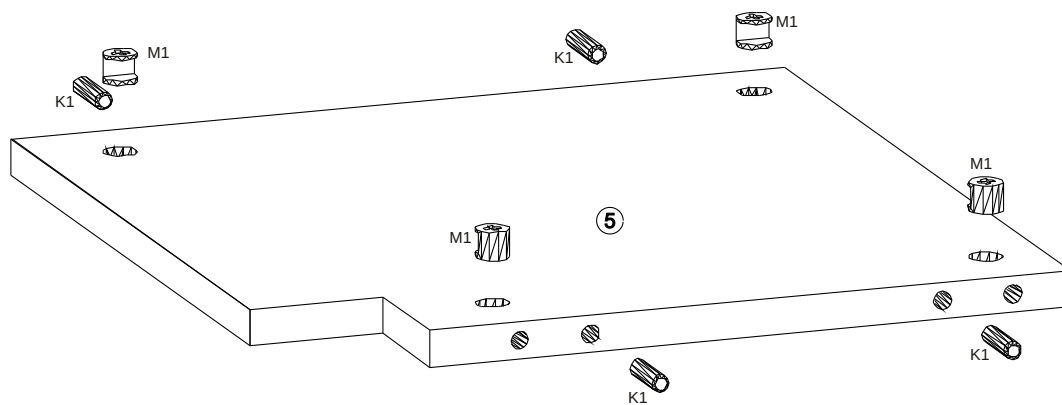


13▶

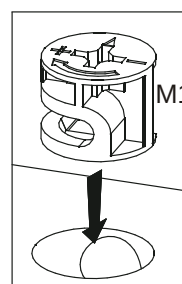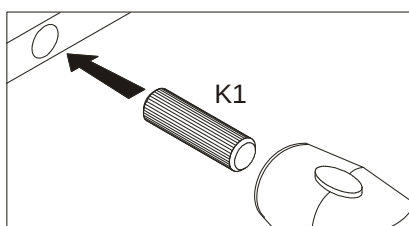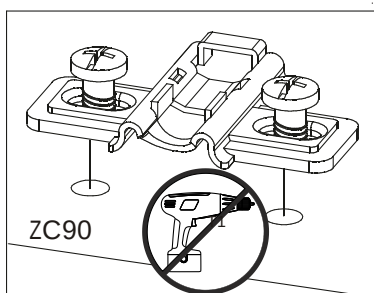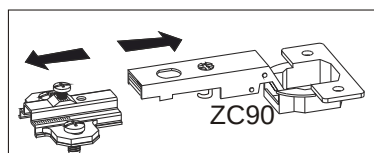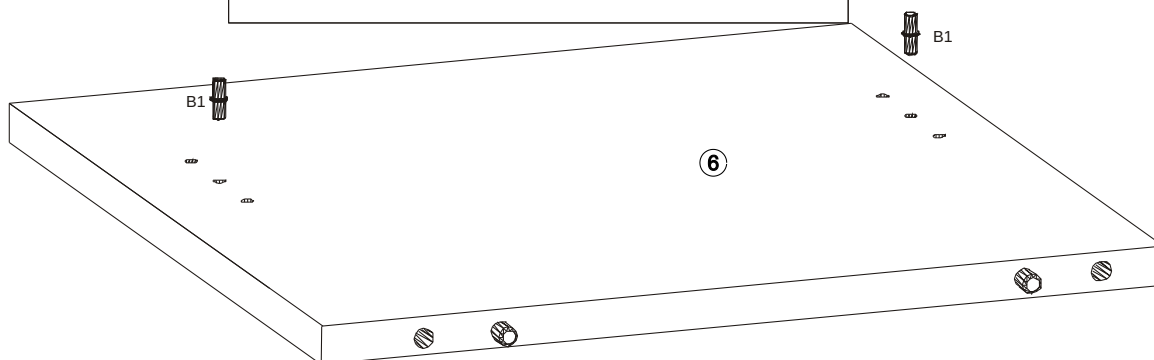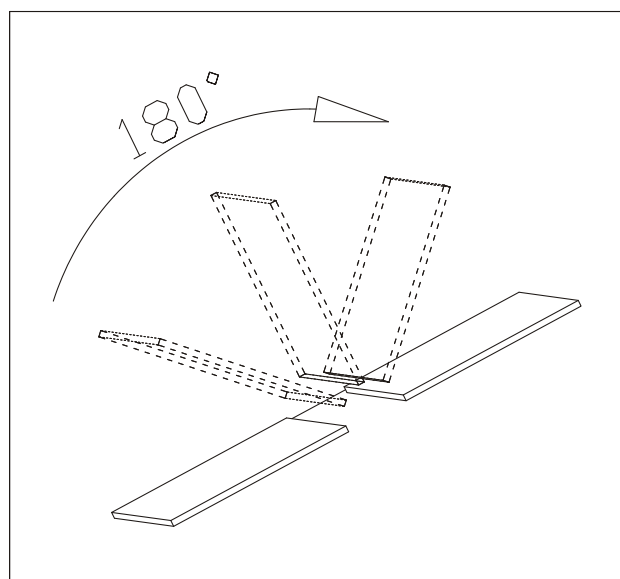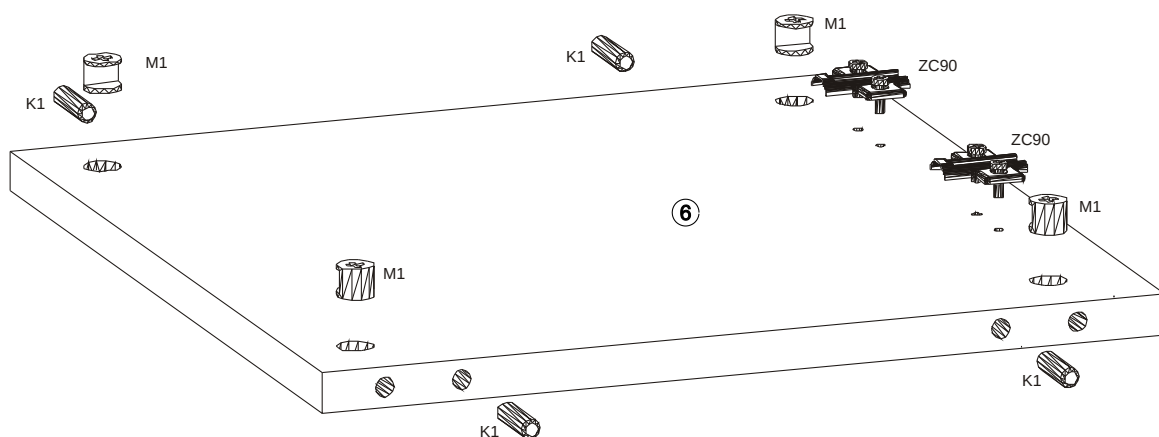

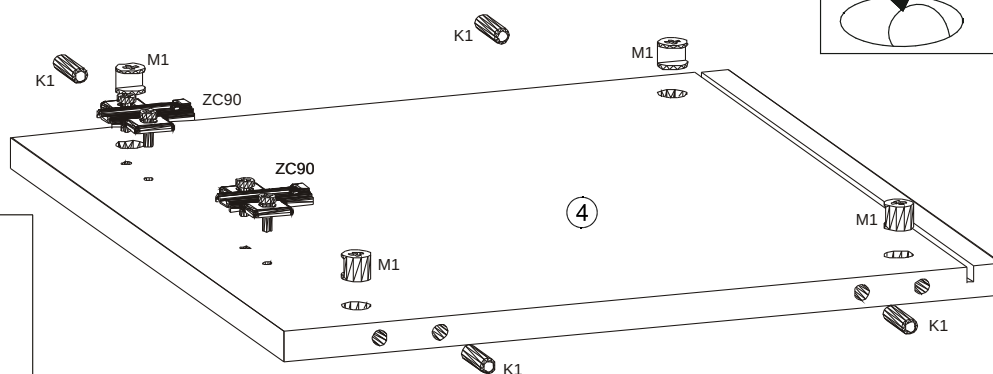
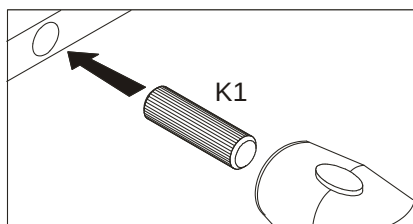
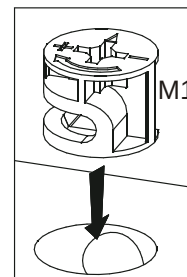
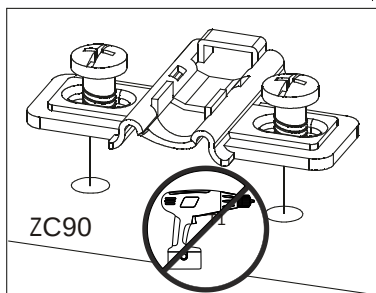


15▶




Diagram 15 illustrates the step of attaching the backrest to the chair frame. The backrest is shown in three positions, labeled 3, 5, and 6, indicating the sequence of assembly. Arrows point to the backrest and the frame, showing the direction of movement. The backrest is being attached to the frame using screws. A detailed inset shows the backrest being secured to the frame using a screwdriver.

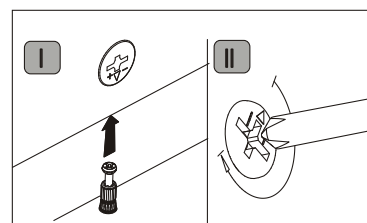







16▶

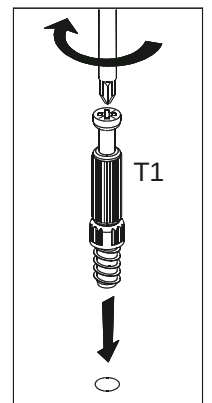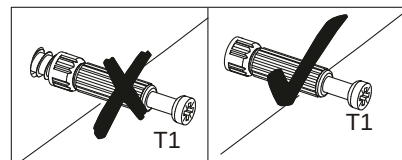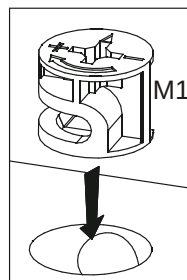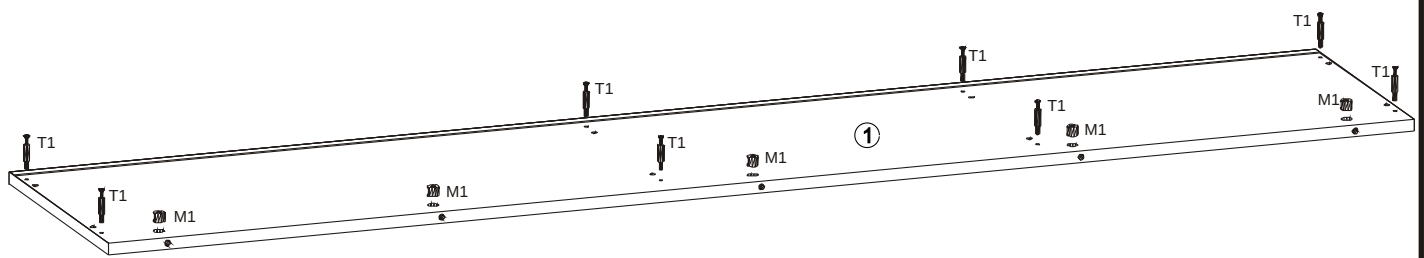


17▶

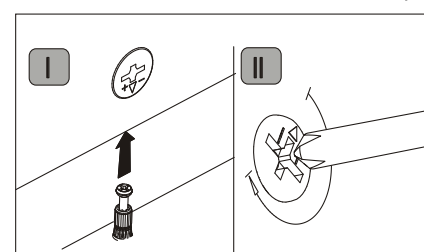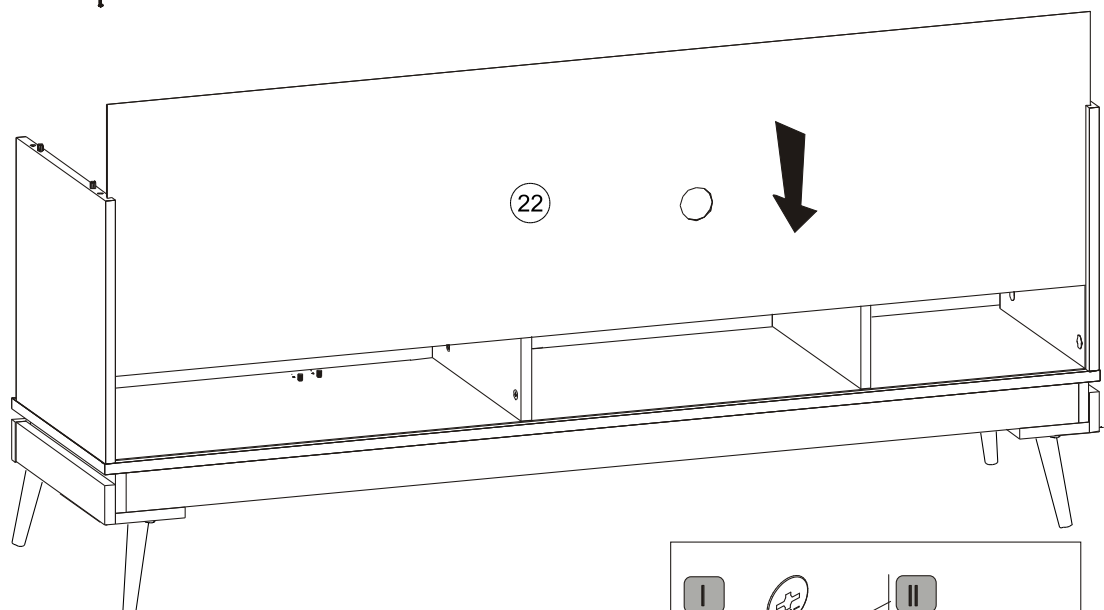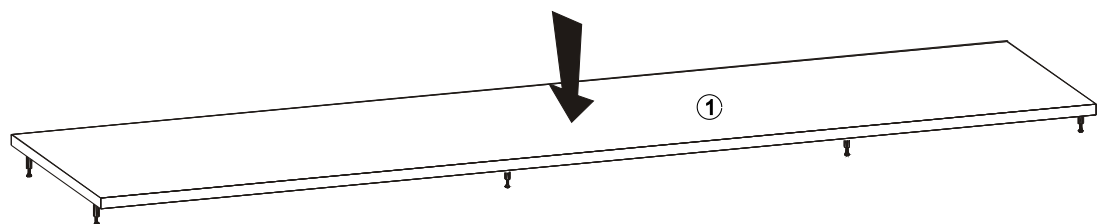


18▶

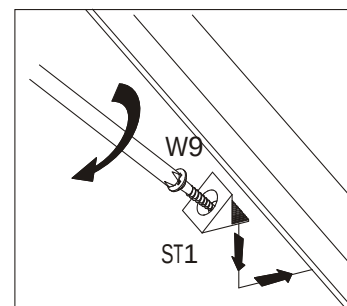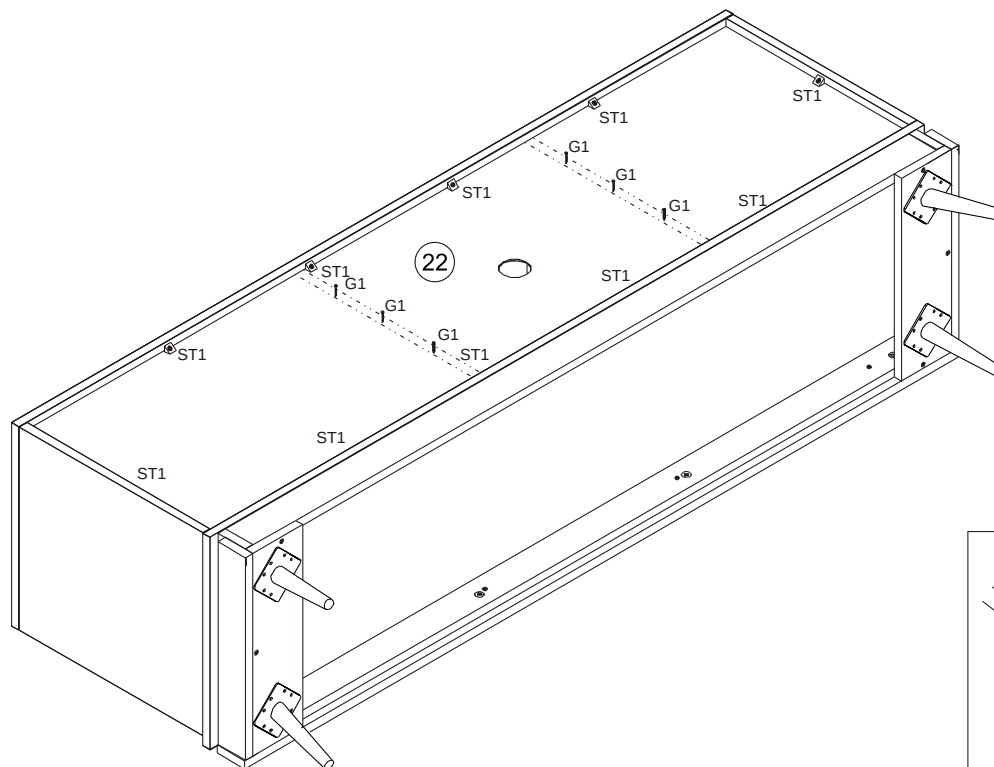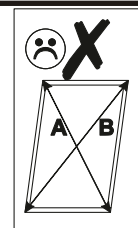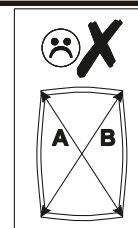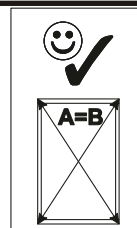


19▶

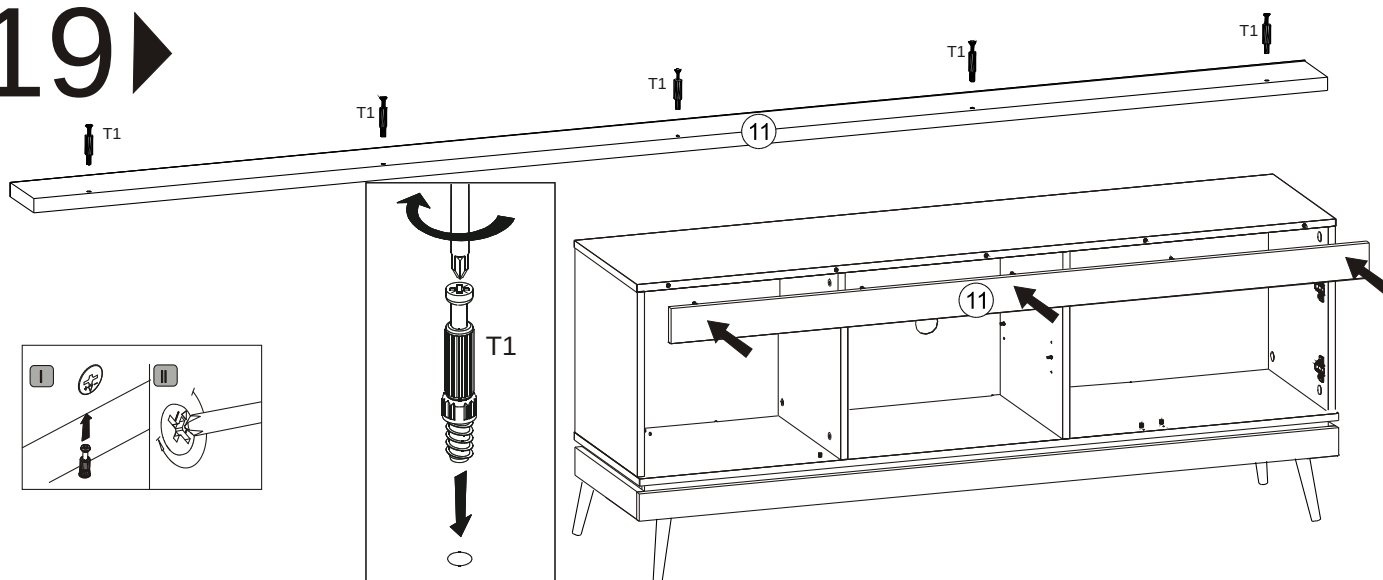

20▶

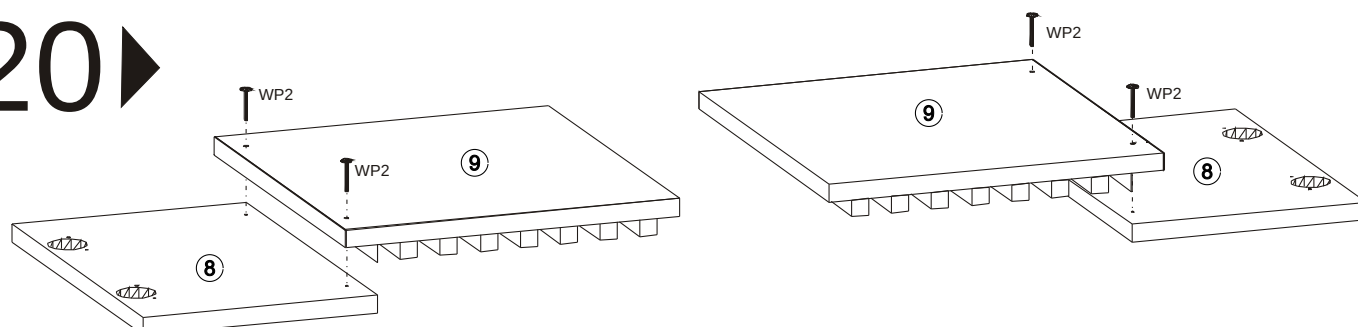

21▶

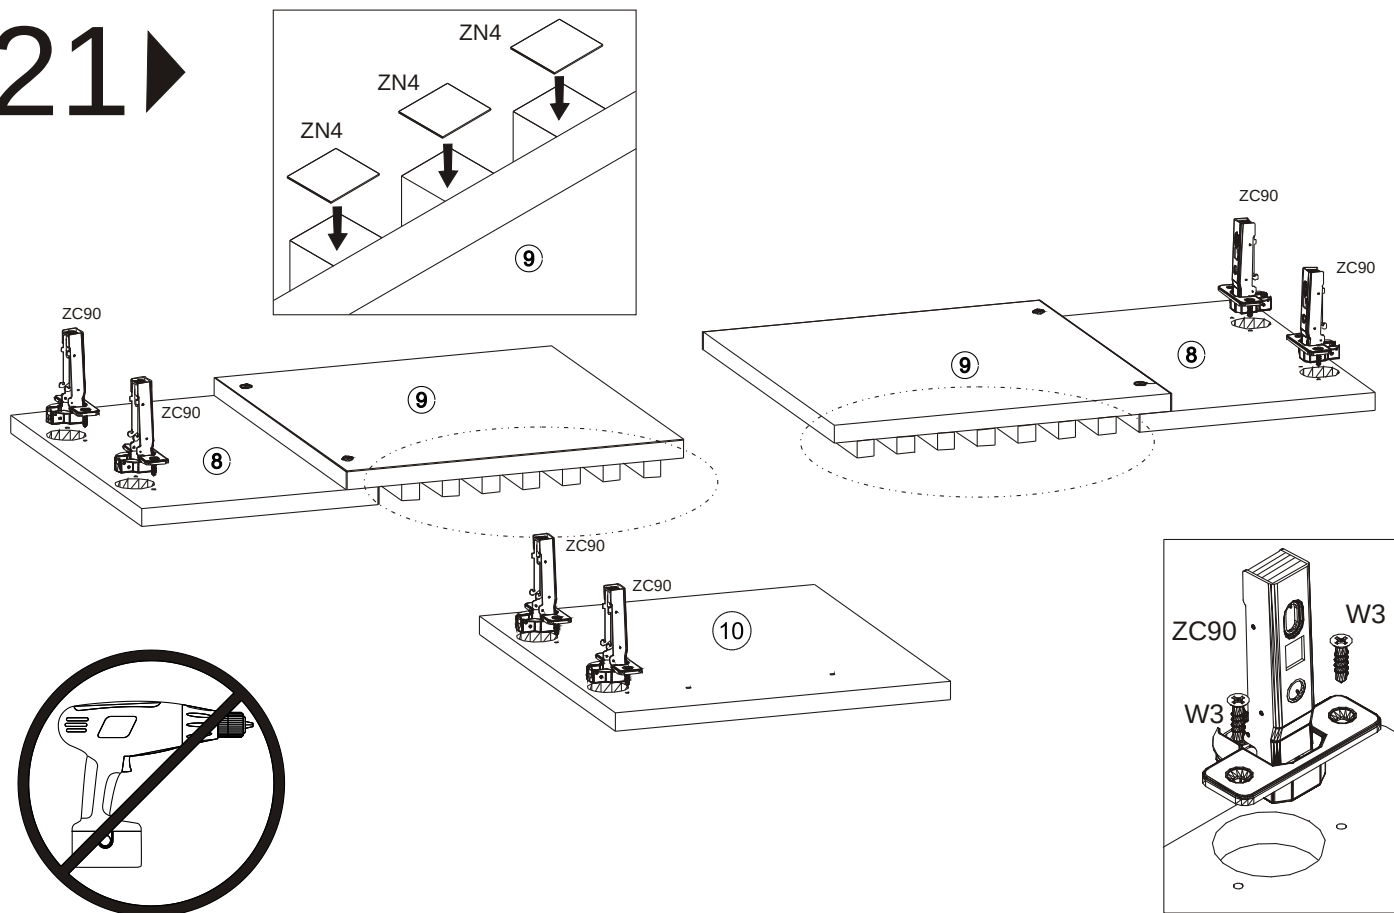

22▶

