
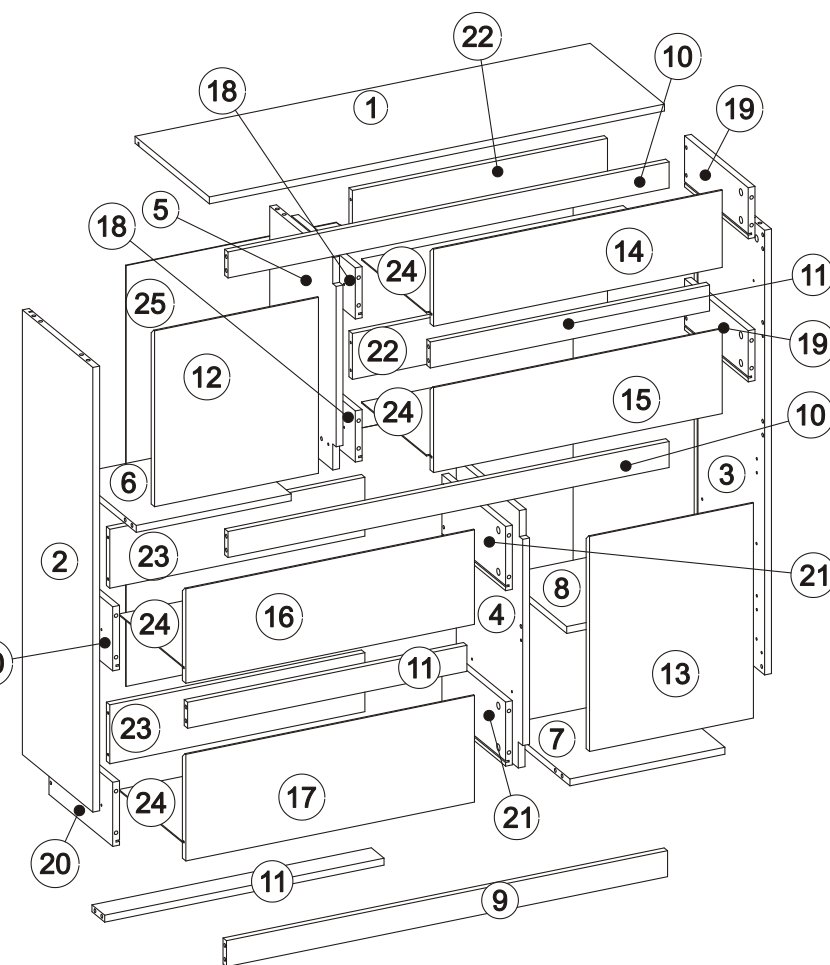

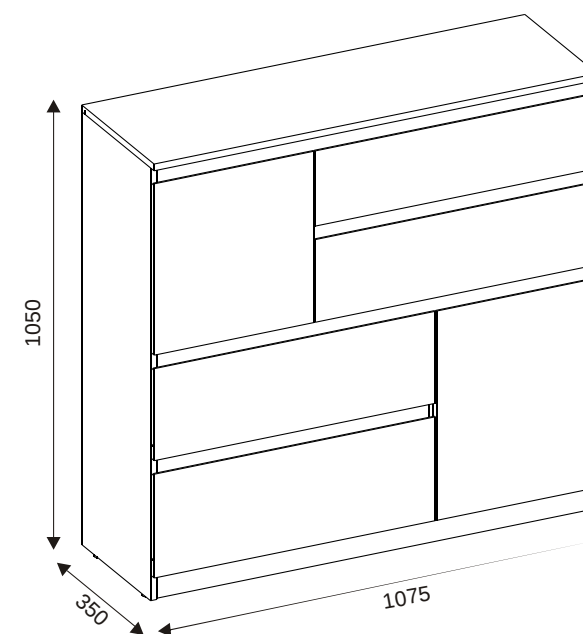
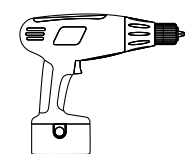
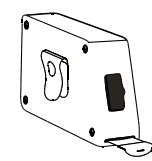
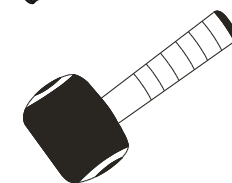
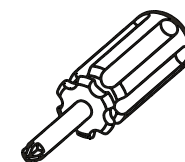


17▶


Diagram 17 illustrates the mounting of the drawer front (labeled 24) to the drawer box. The diagram shows four isometric views of the drawer front being attached to the drawer box. The mounting is done using screws (G1) and a screwdriver (W9). The diagram also shows a detail view of the screw (G1) being inserted into the drawer front.

[illegible]










REMI

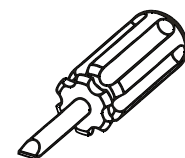






25	1053x971	1/3
24	306x616	1/3
23	601x136	3/3
22	601x106	3/3
21	300x148	3/3
20	300x148	3/3
19	300x118	3/3
18	300x118	3/3
17	680x246	3/3
16	680x218	3/3
15	680x196	3/3
14	680x178	3/3
13	496x386	1/3
12	406x386	1/3
11	658x60	1/3
10	1039x60	1/3
9	1039x60	1/3
8	364x300	2/3
7	365x313	2/3
6	365x296	2/3
5	490x313	2/3
4	596x313	2/3
3	1026x332	1/3
2	1026x332	1/3
1	1072x350	1/3

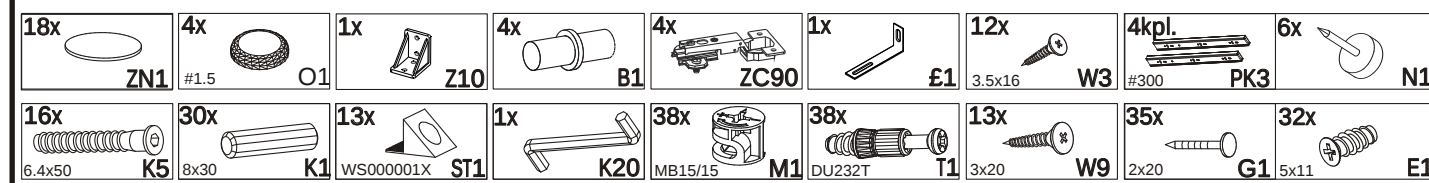





1/12

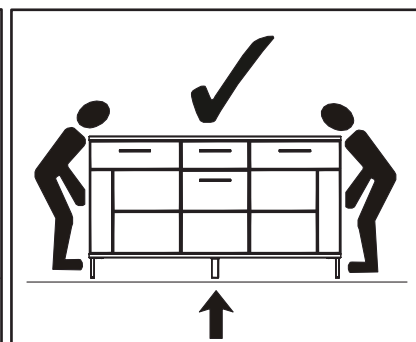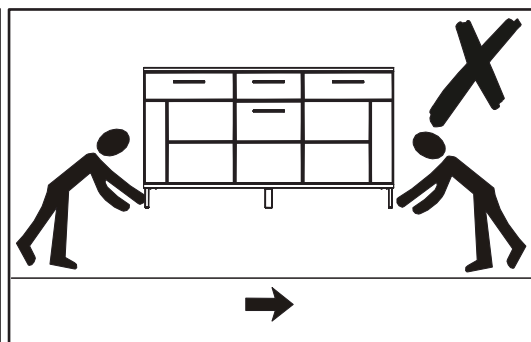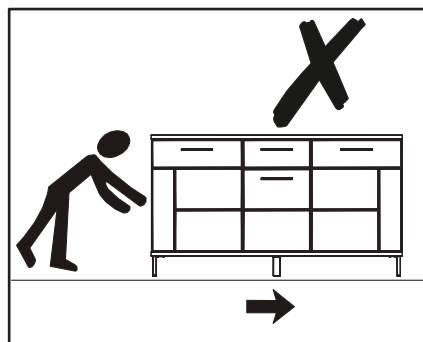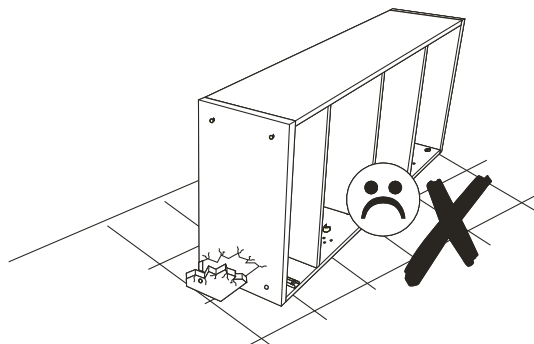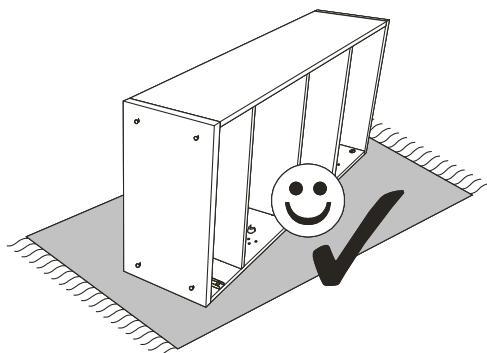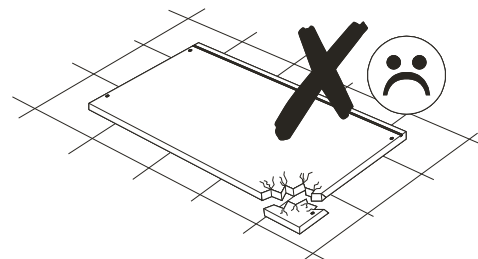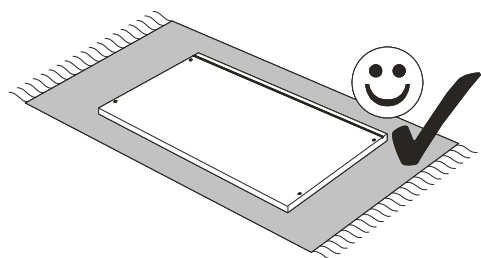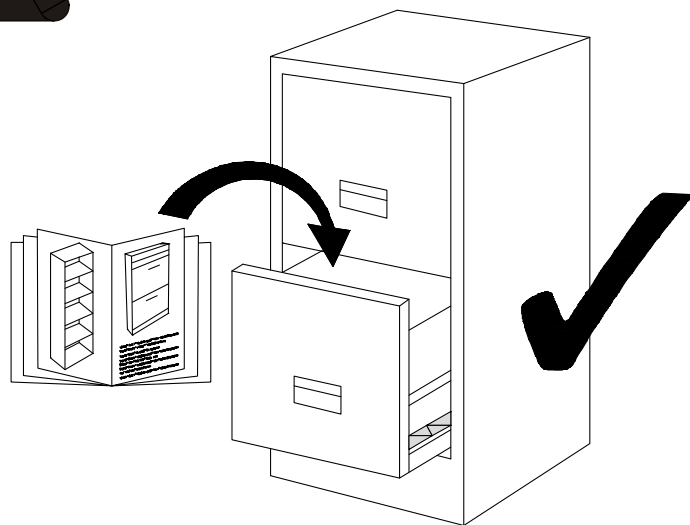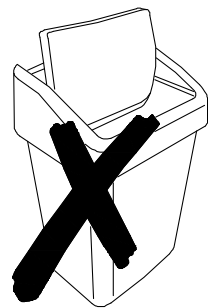




15▶

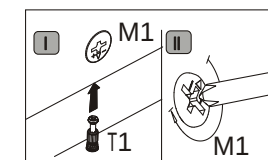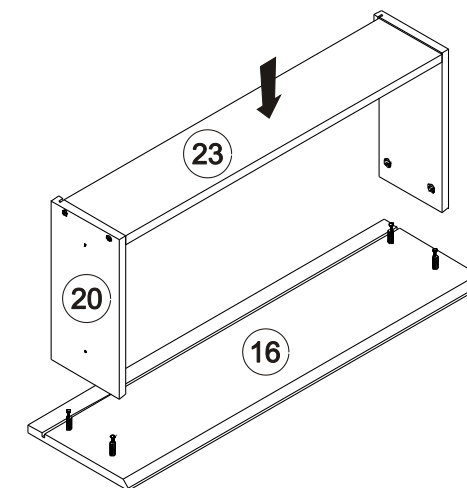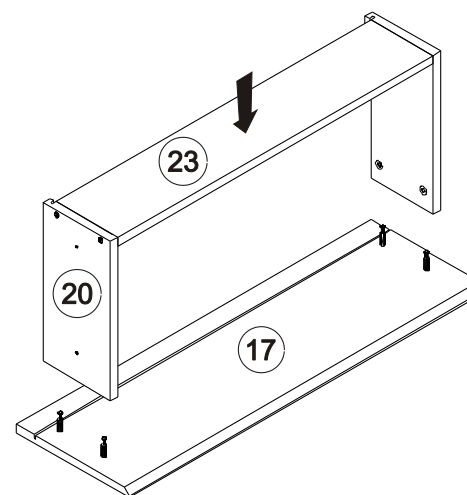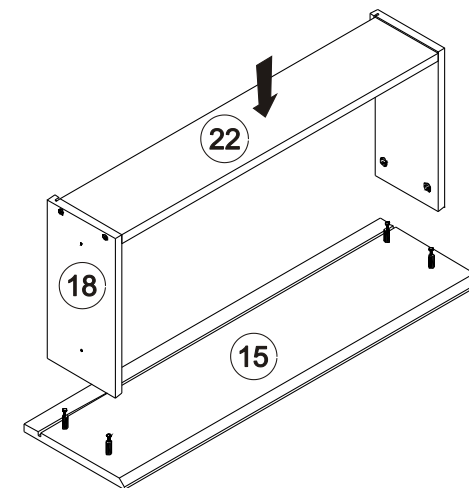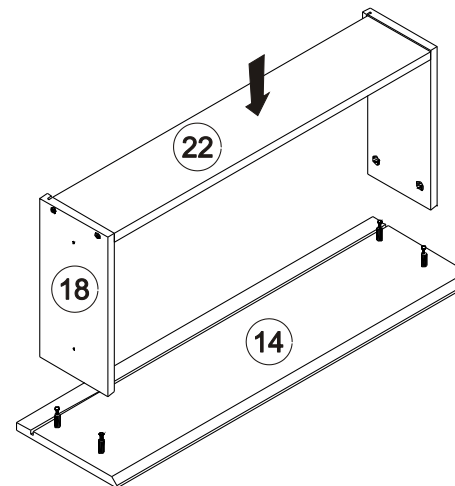

16▶

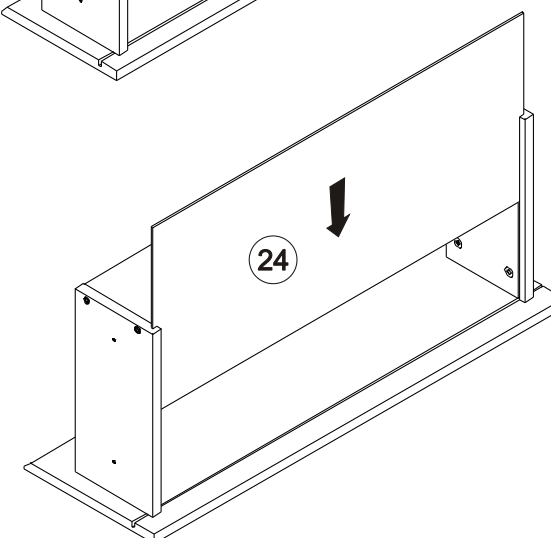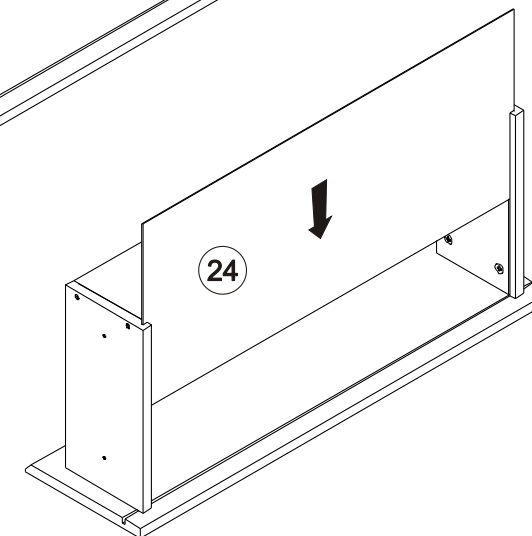
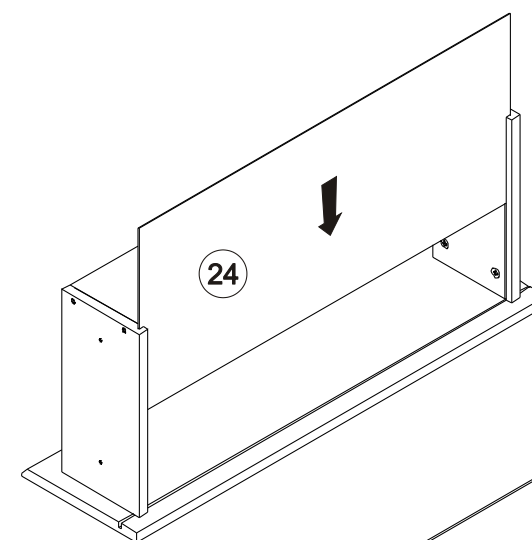
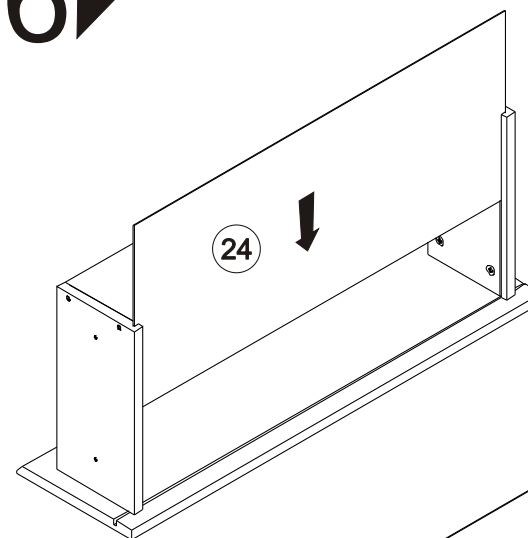


12▶






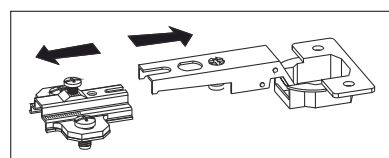
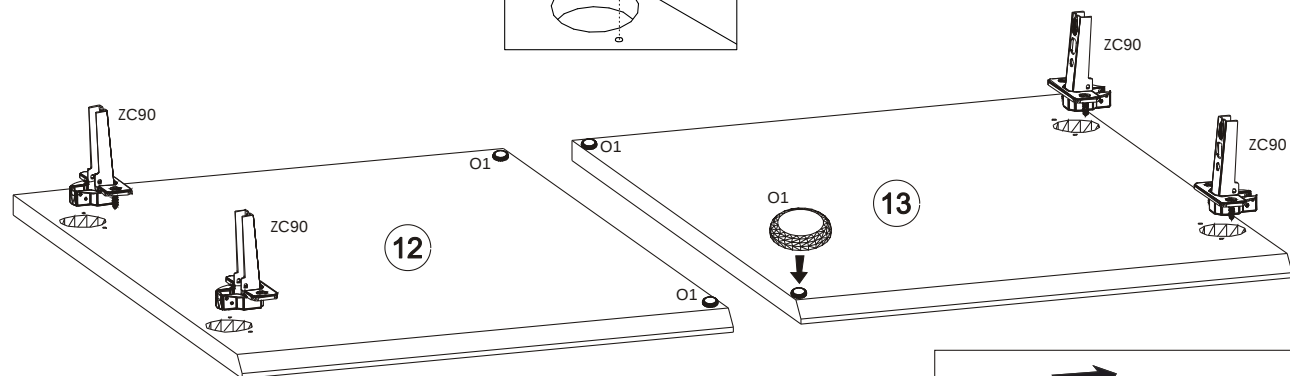
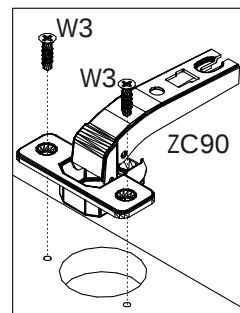



13▶

x2

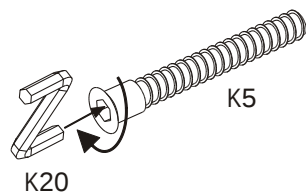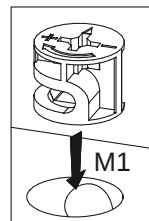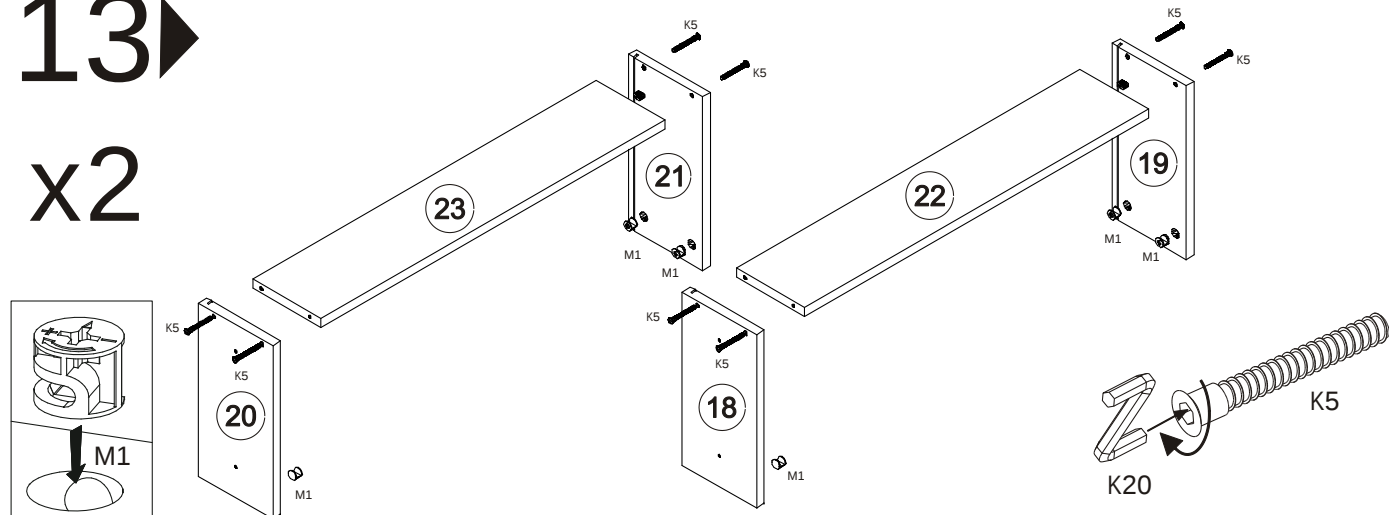


14▶

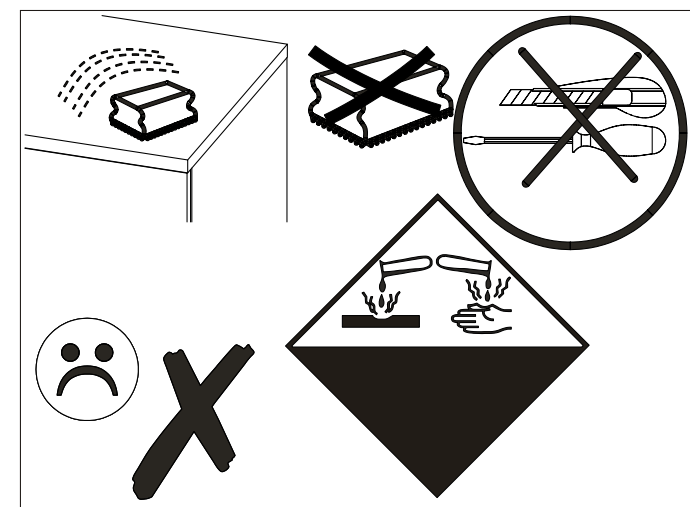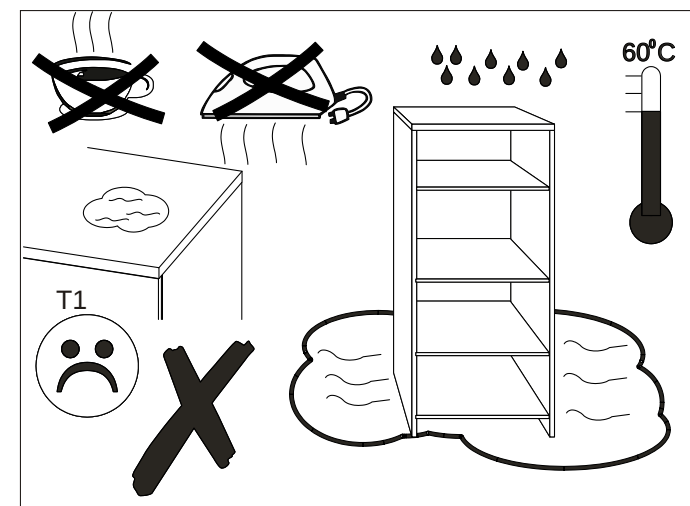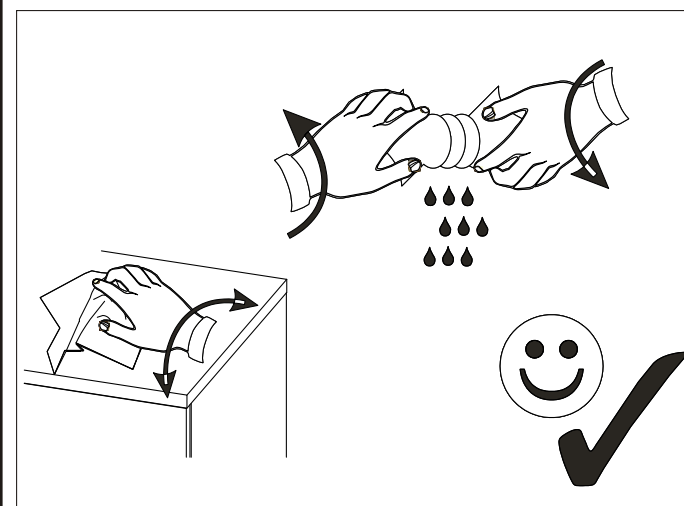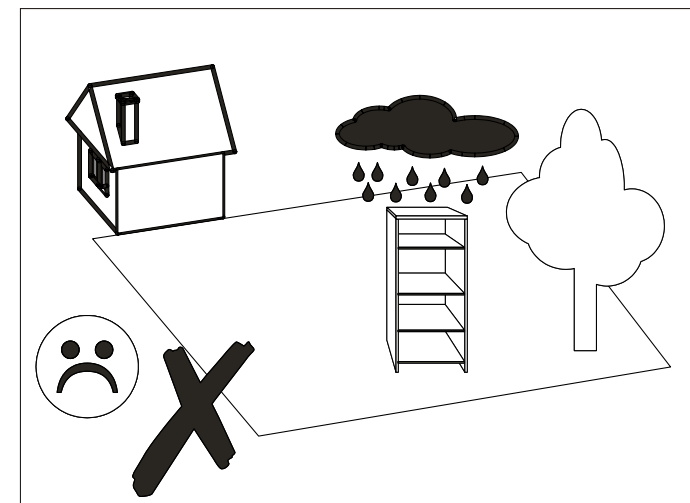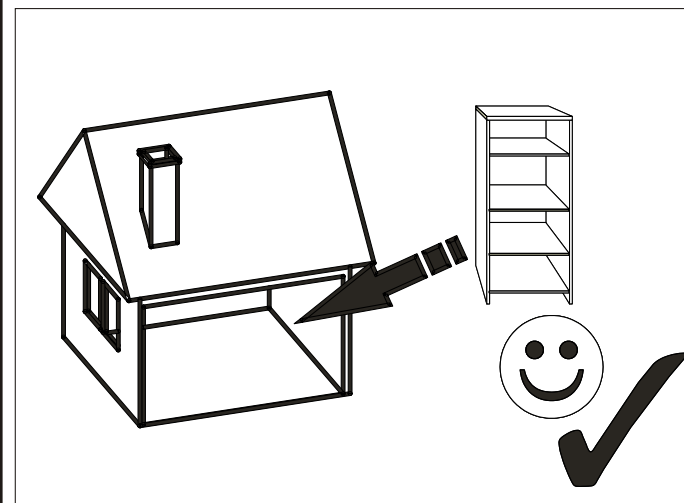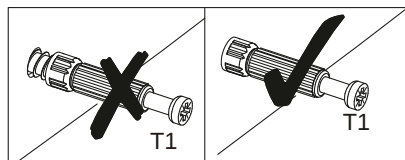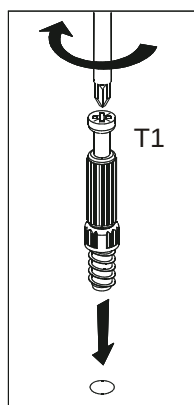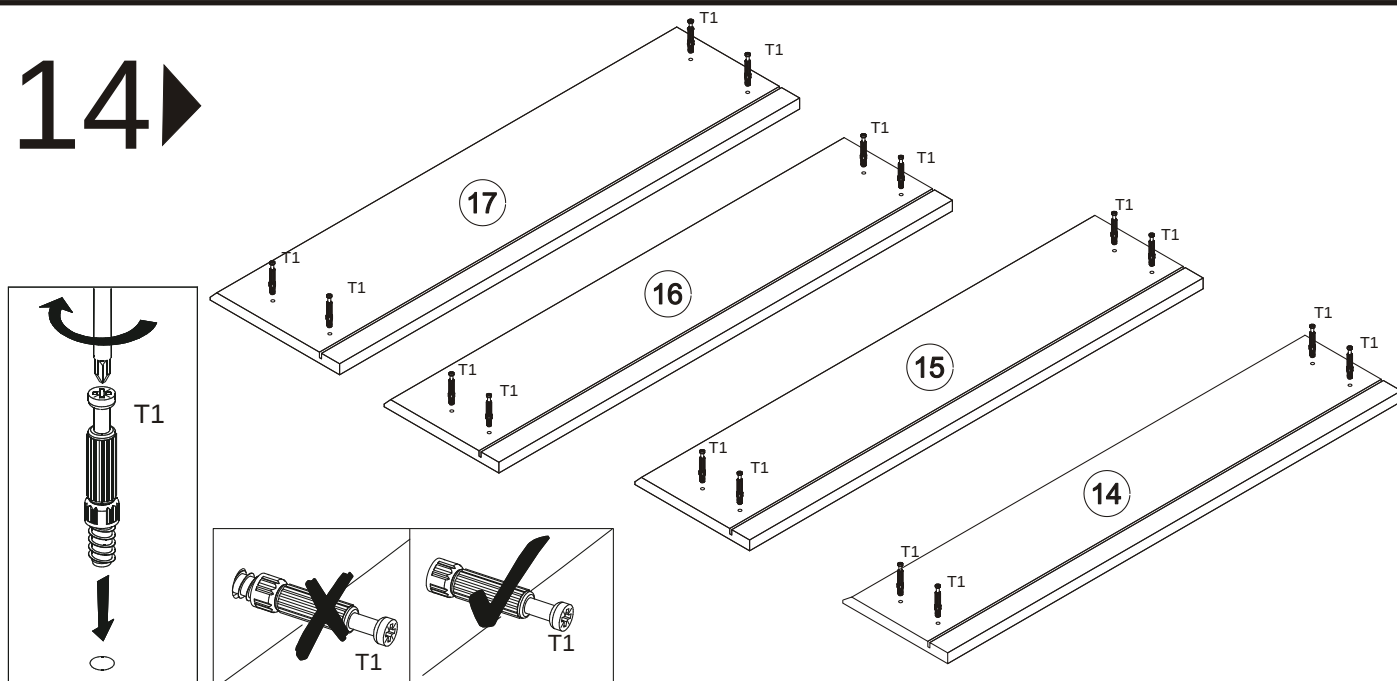

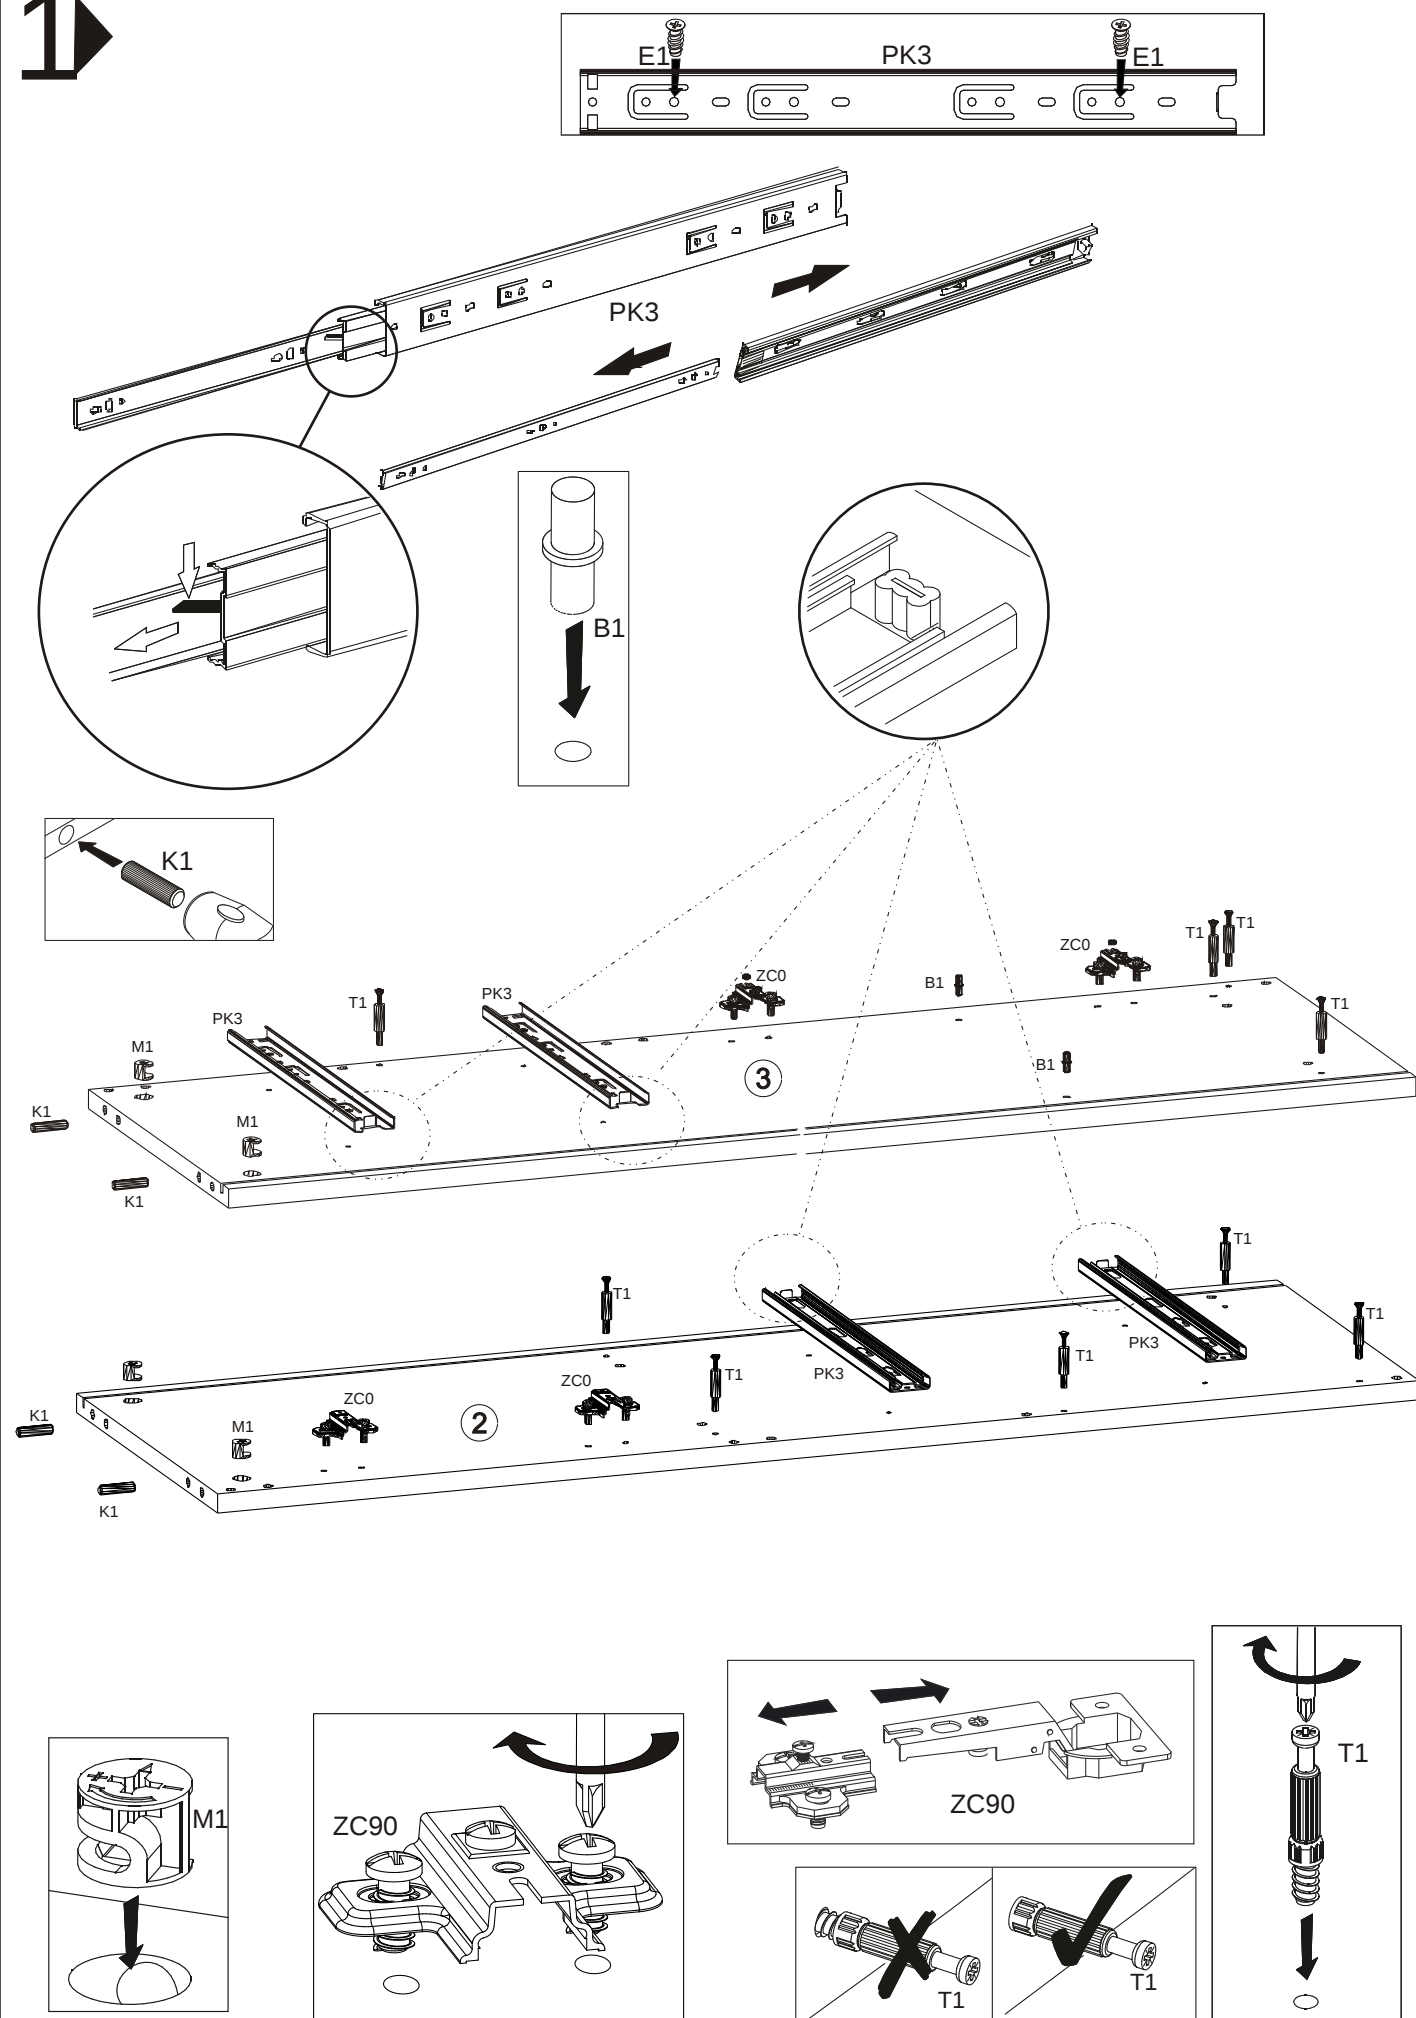


10▶

RM06

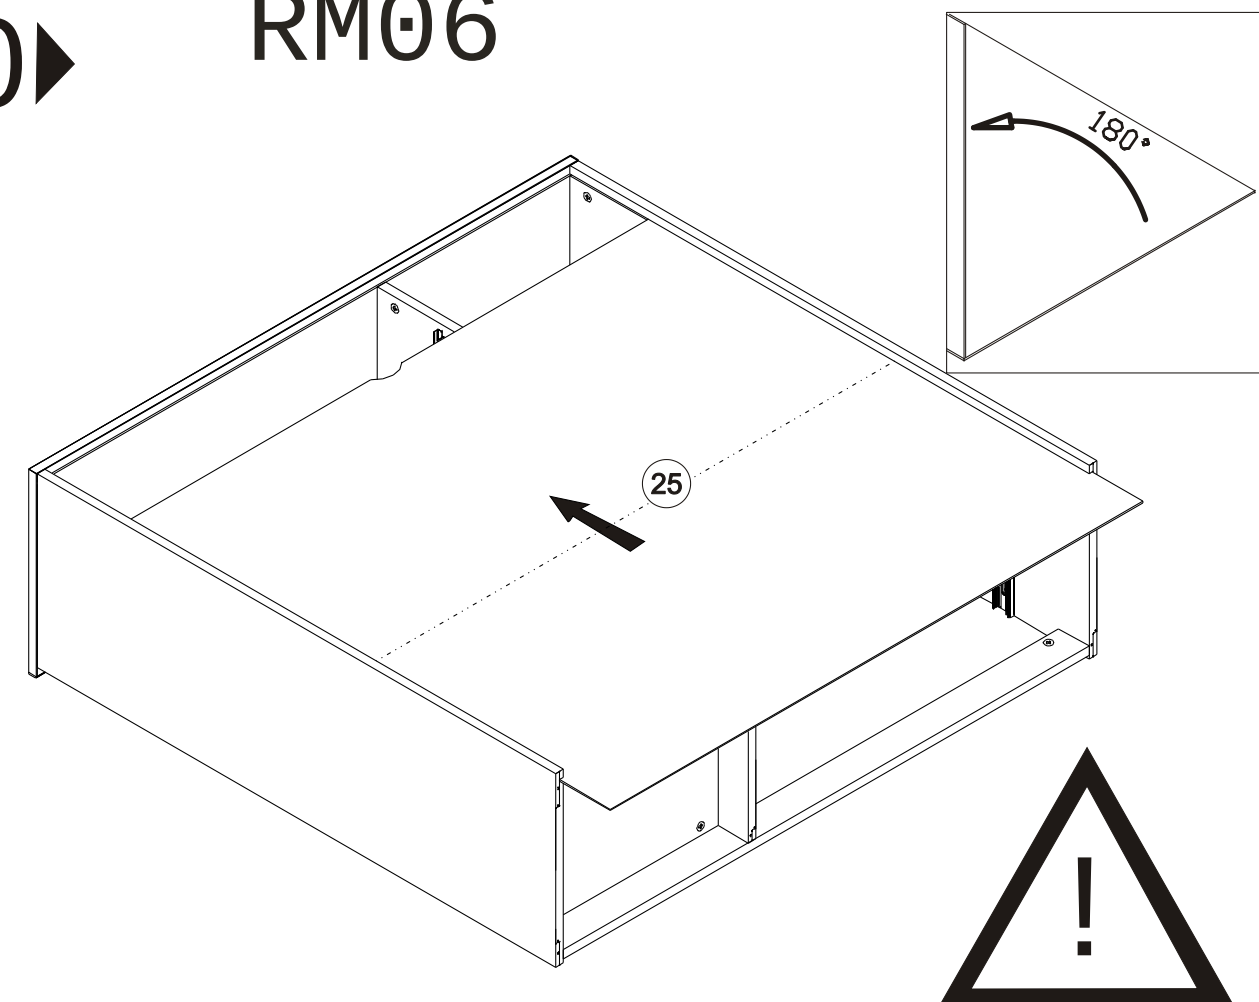


11▶

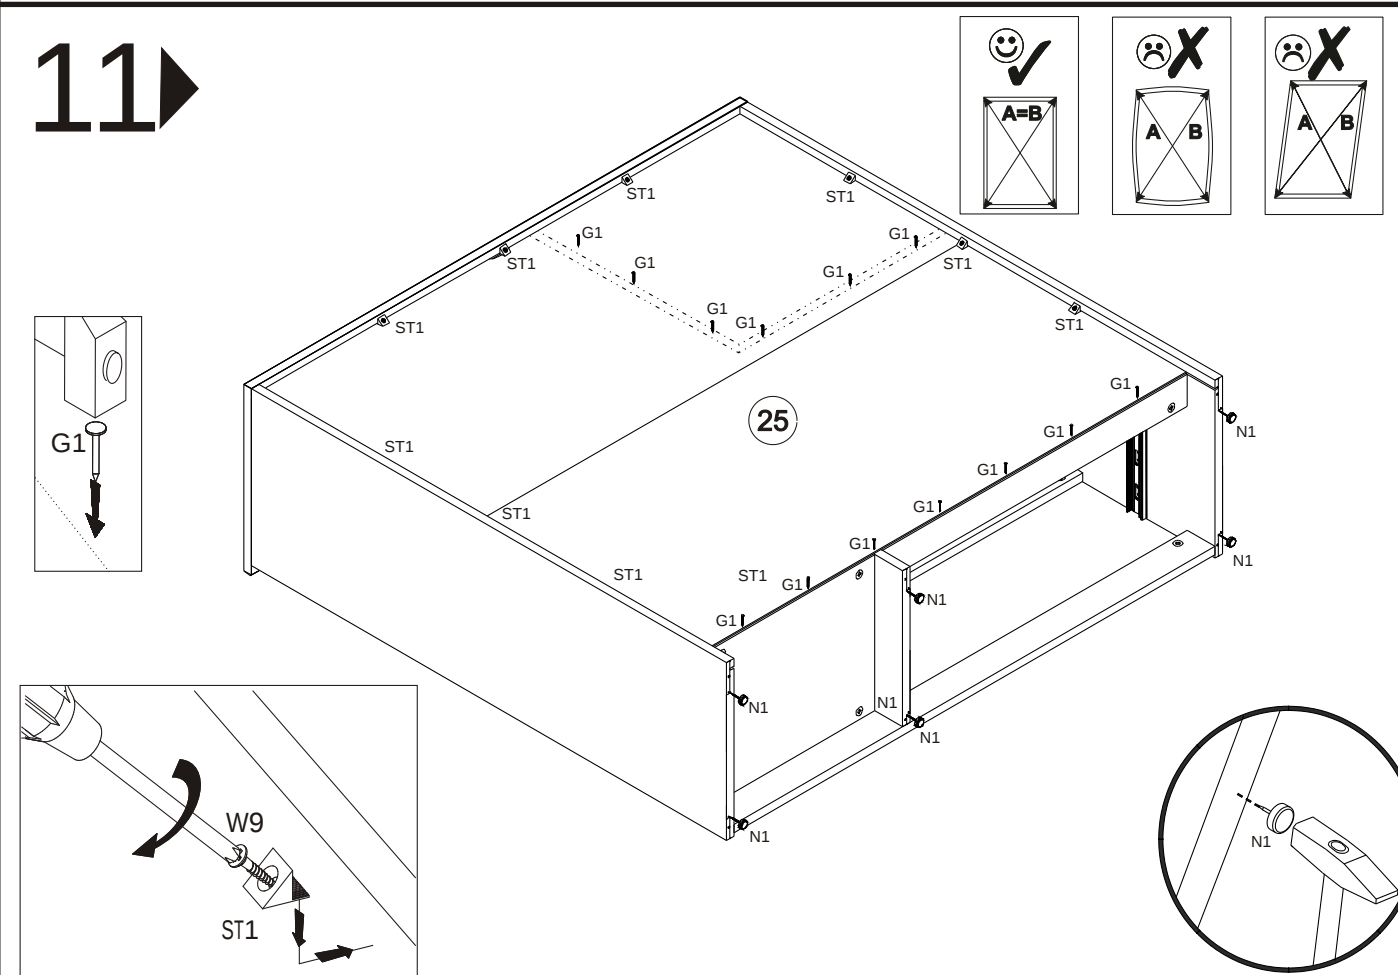


8▶


RM06

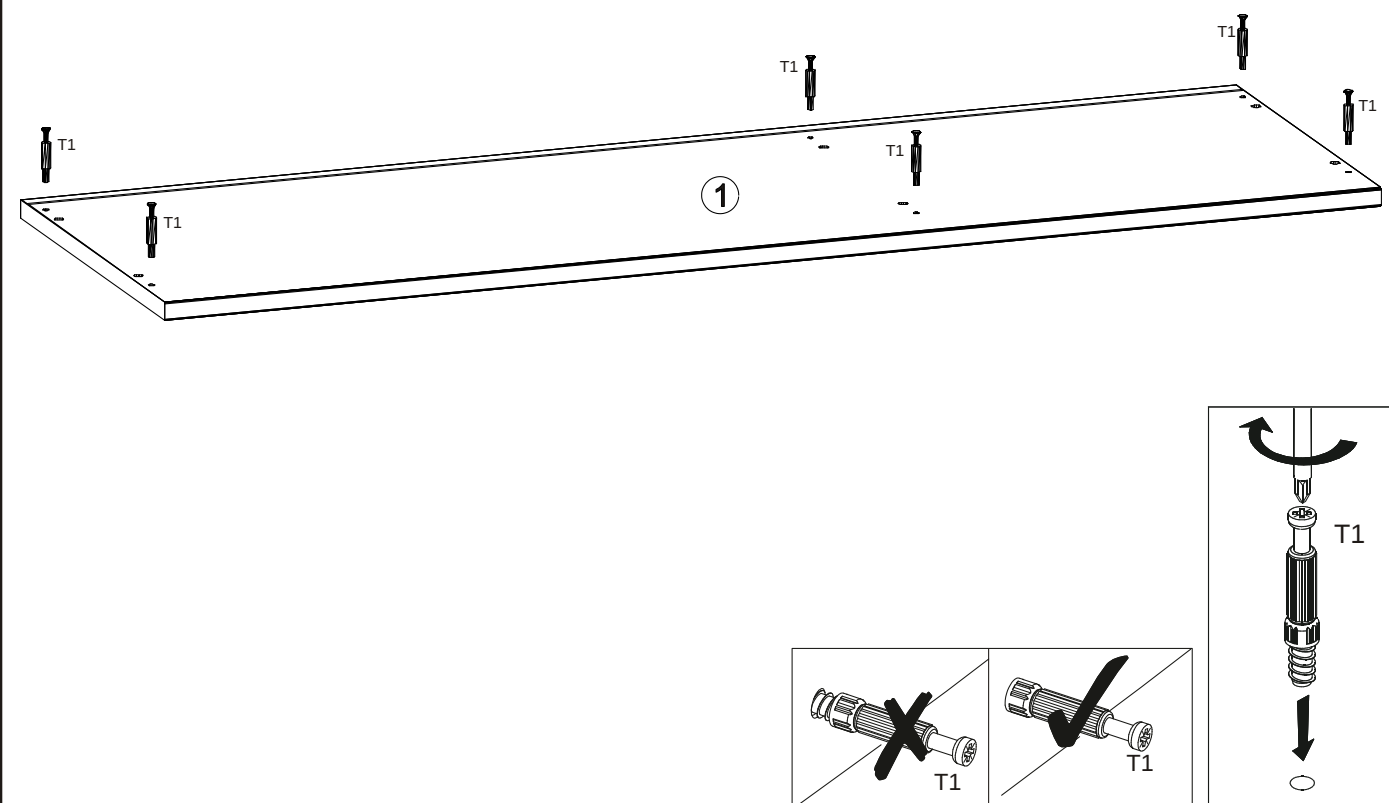


9▶

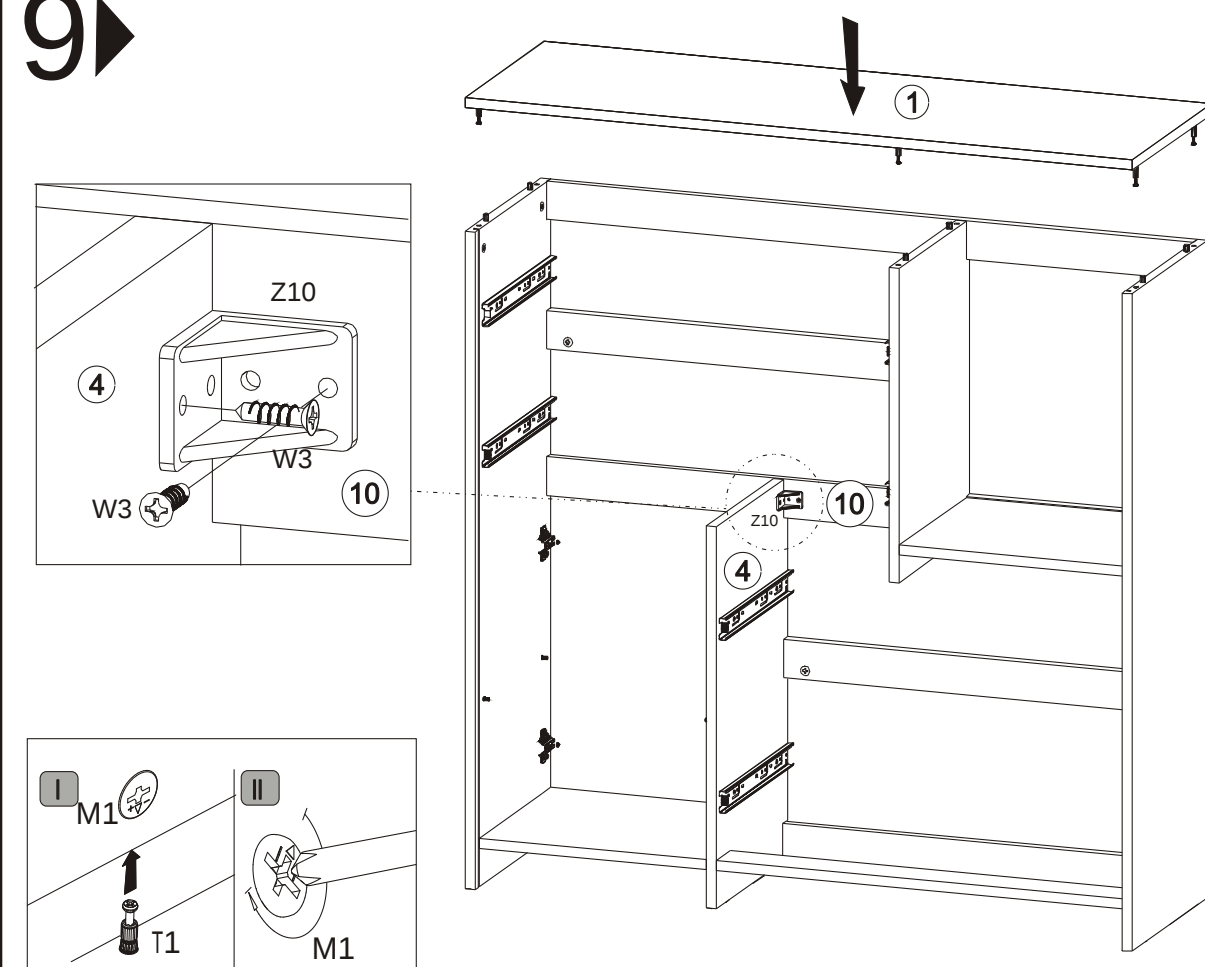


2▶

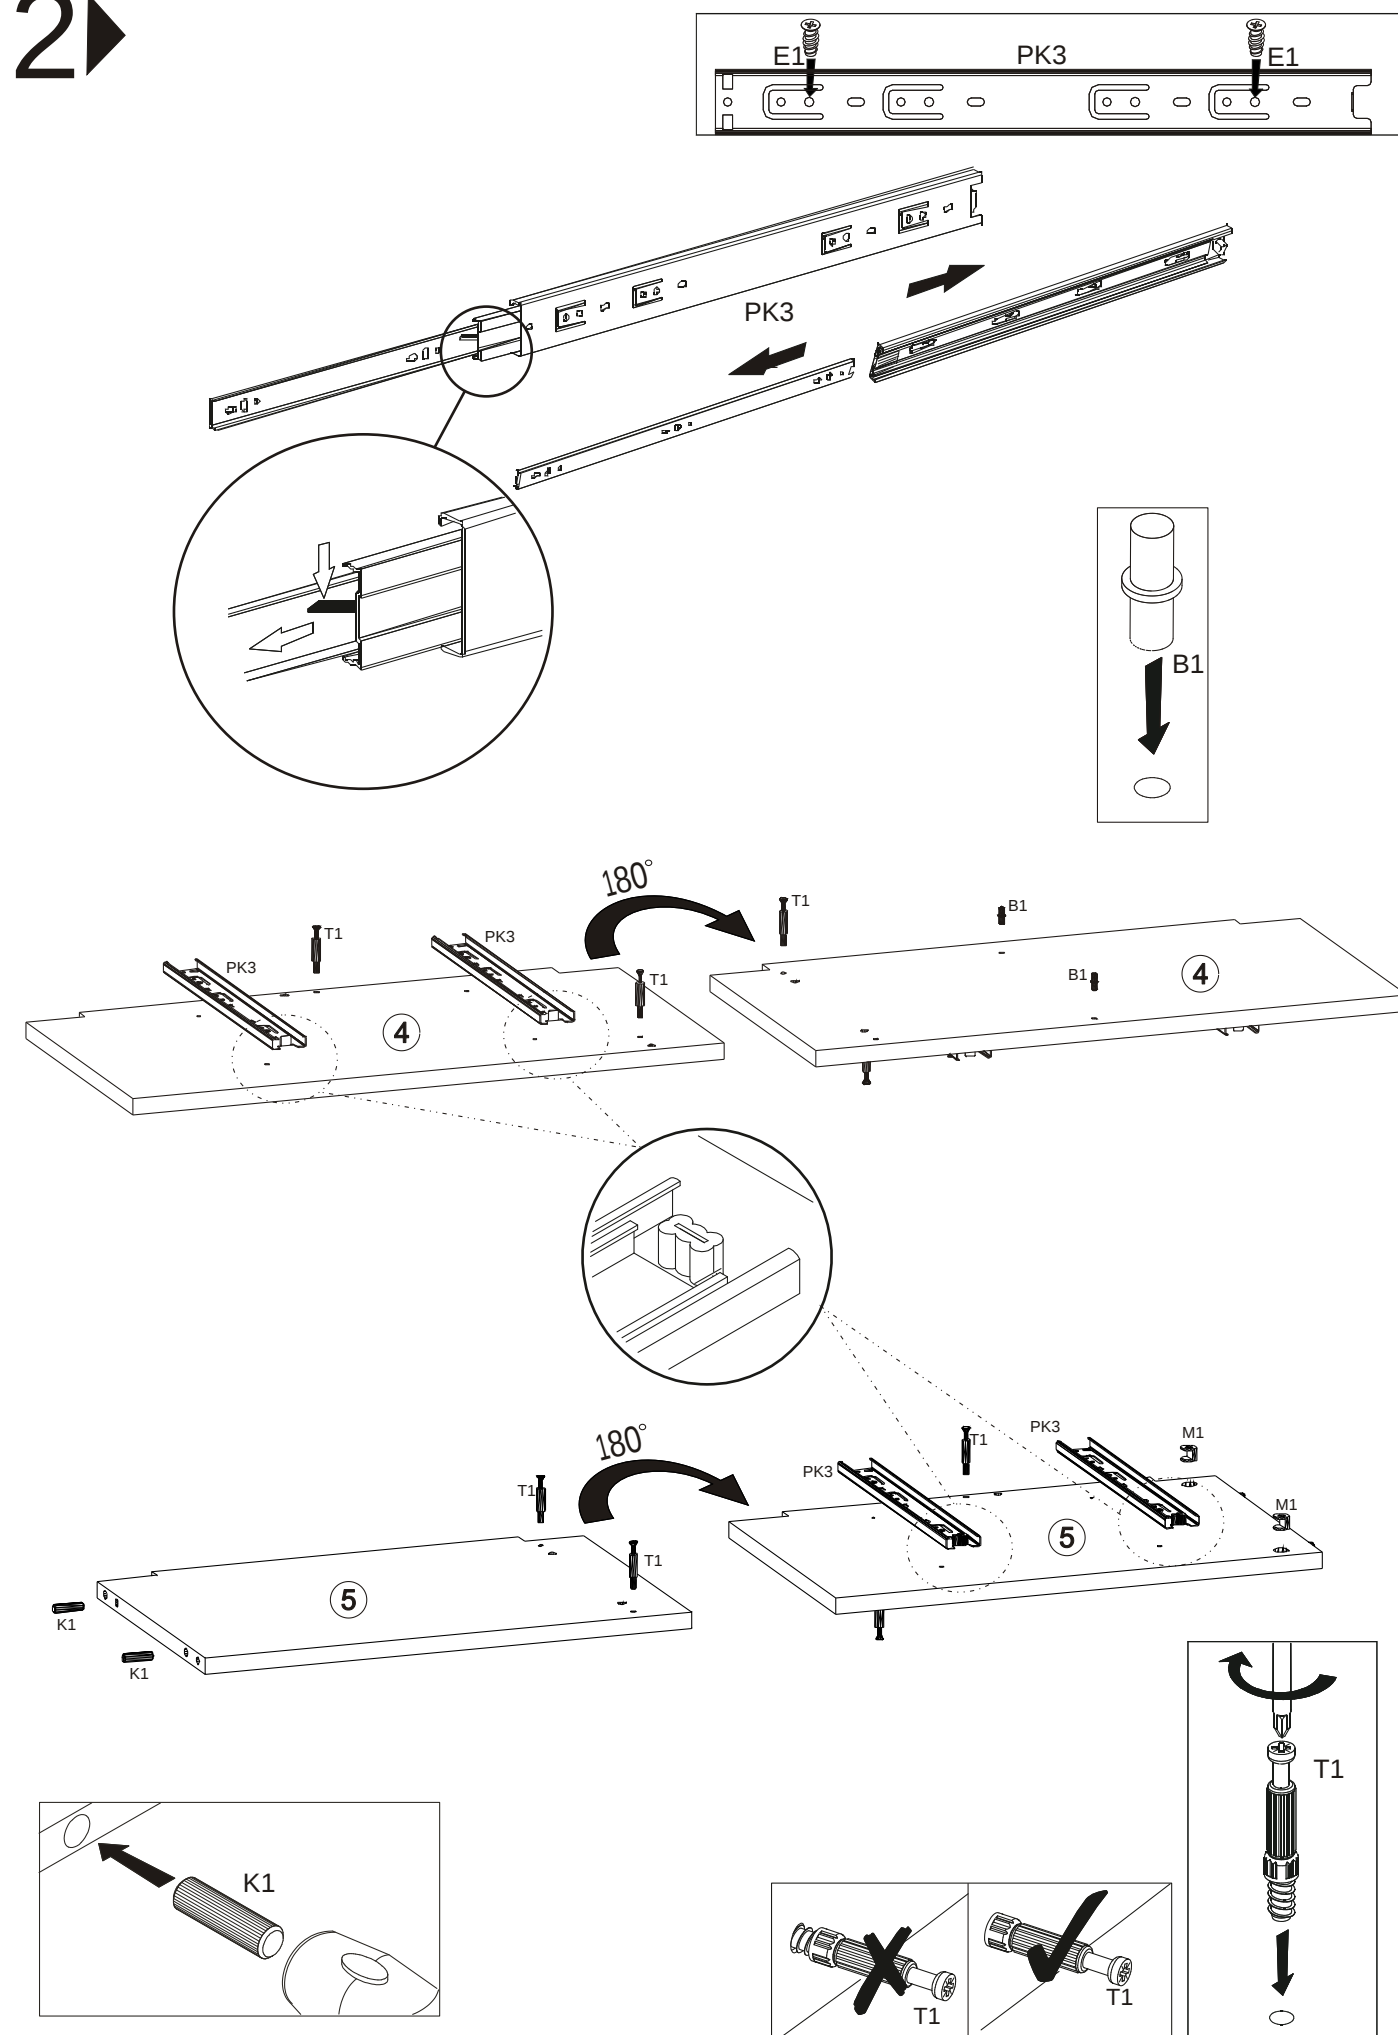


3▶

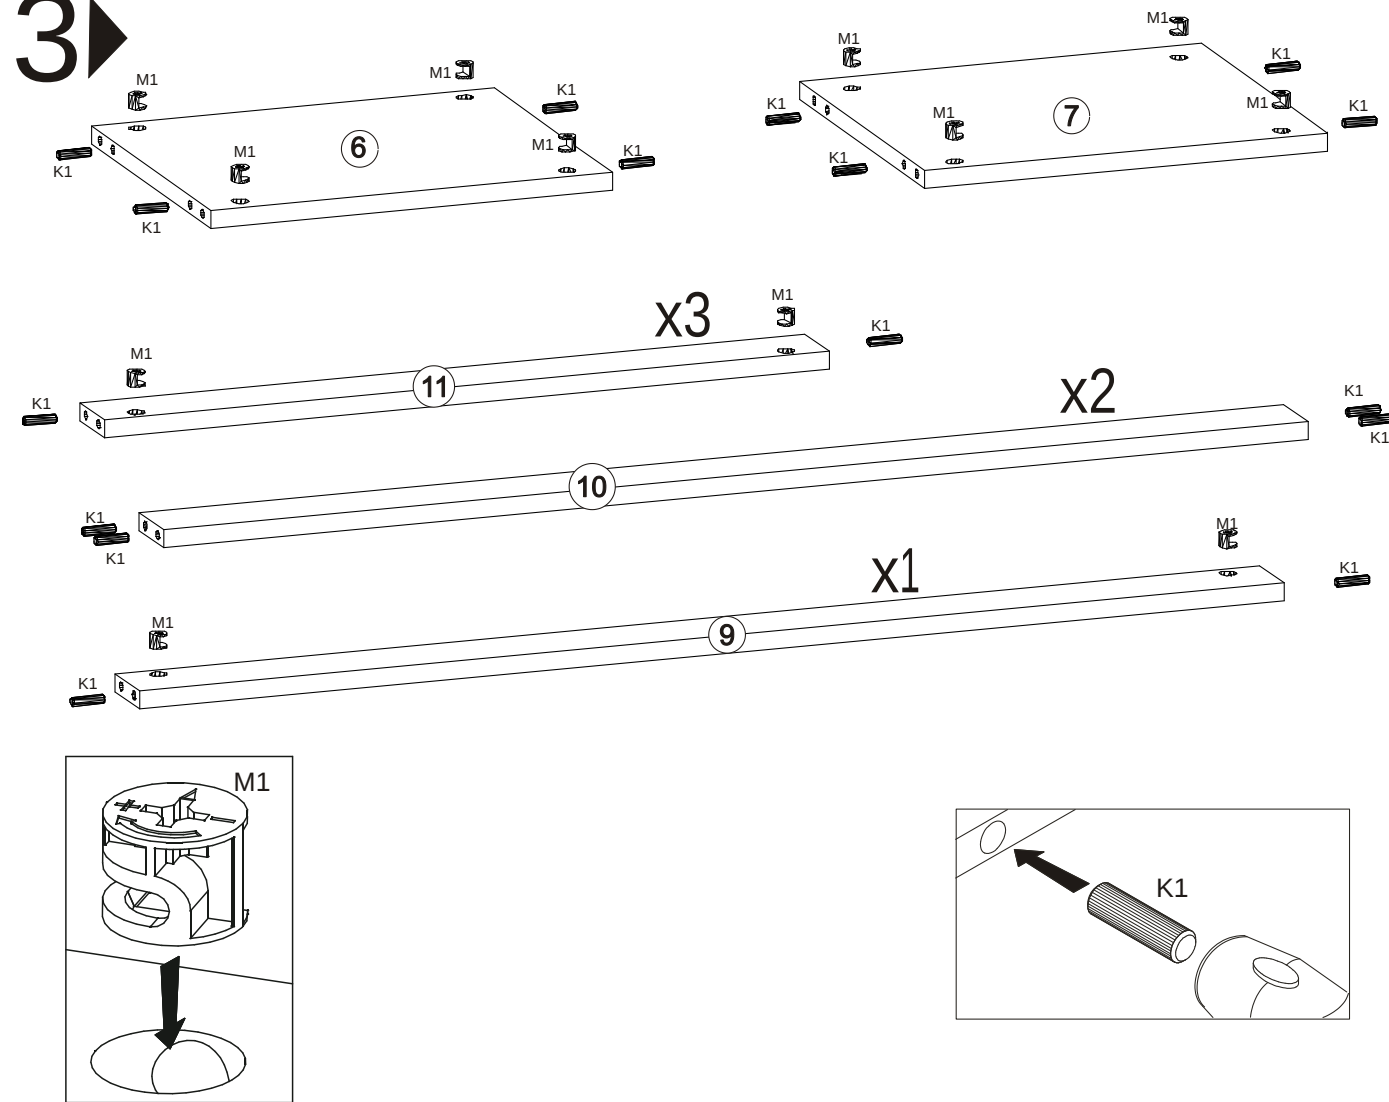


4▶

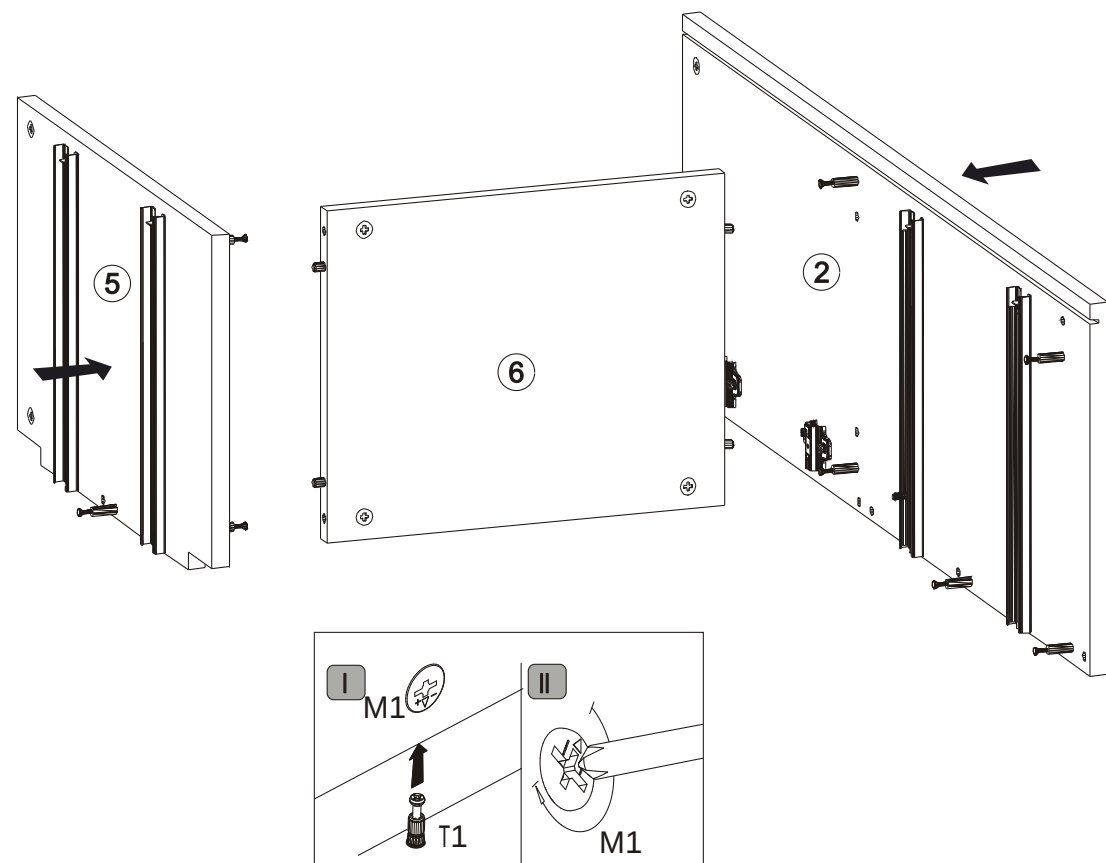

5▶

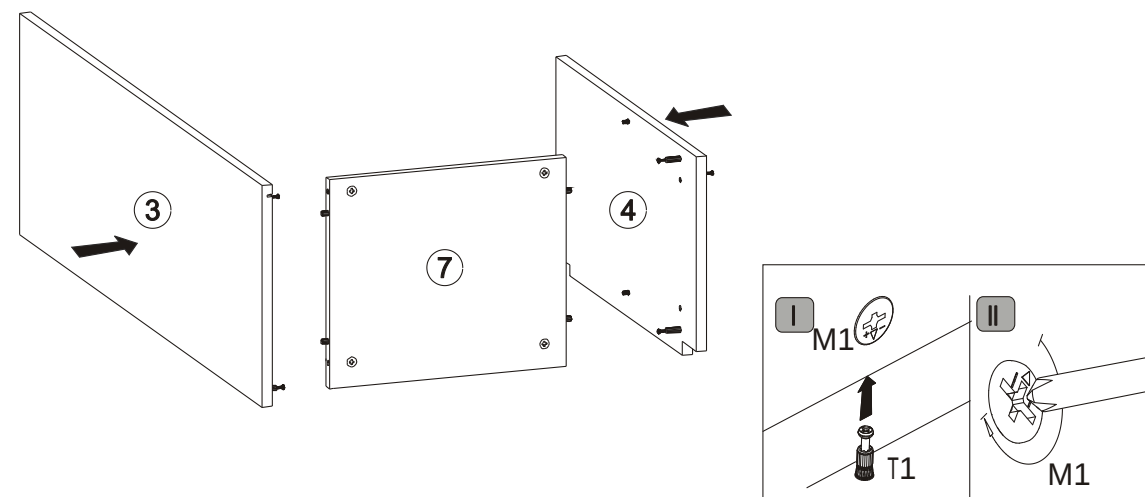

6▶

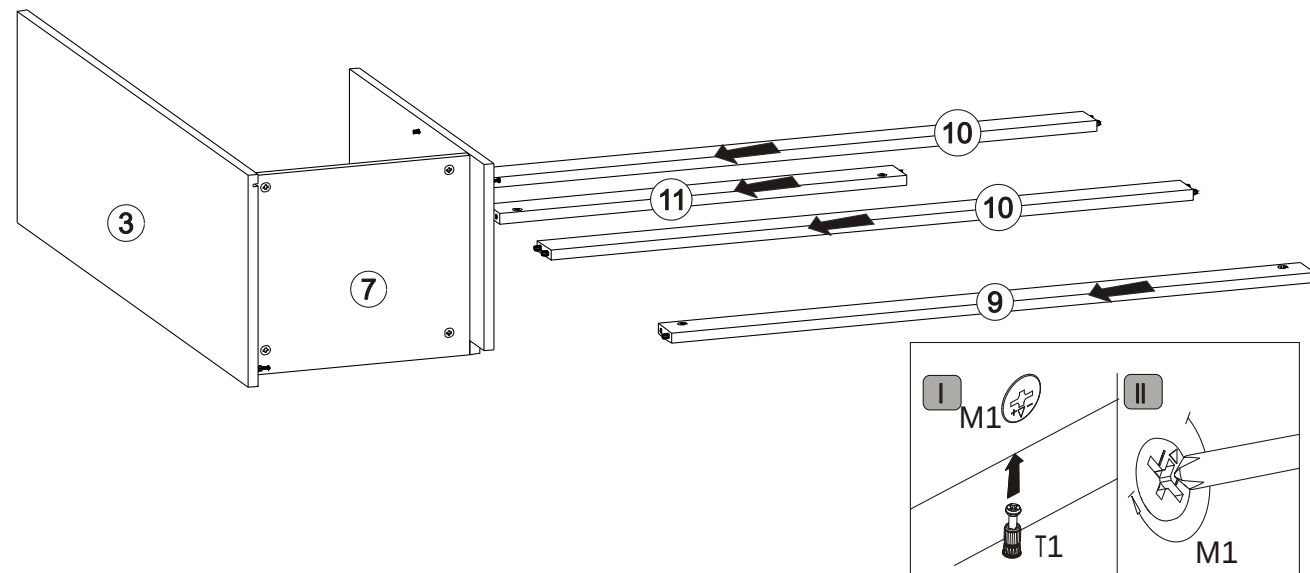

7▶

