

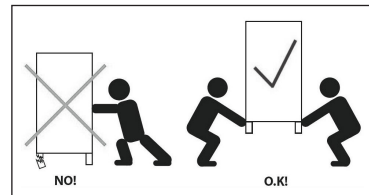
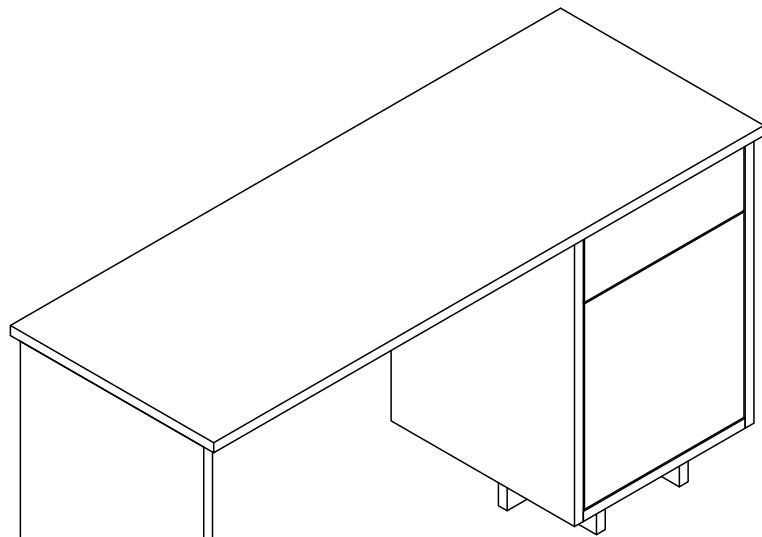


# NOMA N05

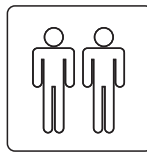


- |   |                                     |
|---|-------------------------------------|
| <b>(D)</b> Montageanleitung             | <b>(GB)</b> Assembly instructions   |
| <b>(FR)</b> Notice de montage           | <b>(IT)</b> Istruzioni di montaggio |
| <b>(NL)</b> Handleiding voor de montage | <b>(PL)</b> Instrukcja montażu      |
| <b>(CZ)</b> Montážní návod              | <b>(SK)</b> Návod na montáž         |
| <b>(HU)</b> Szerelési útmutató          | <b>(RO)</b> Instrucțiuni de montaj  |
| <b>(TR)</b> Montaj talimatı             | <b>(RU)</b> ИНСТРУКЦИЯ ПО МОНТАЖУ   |








2,5 - 3

1

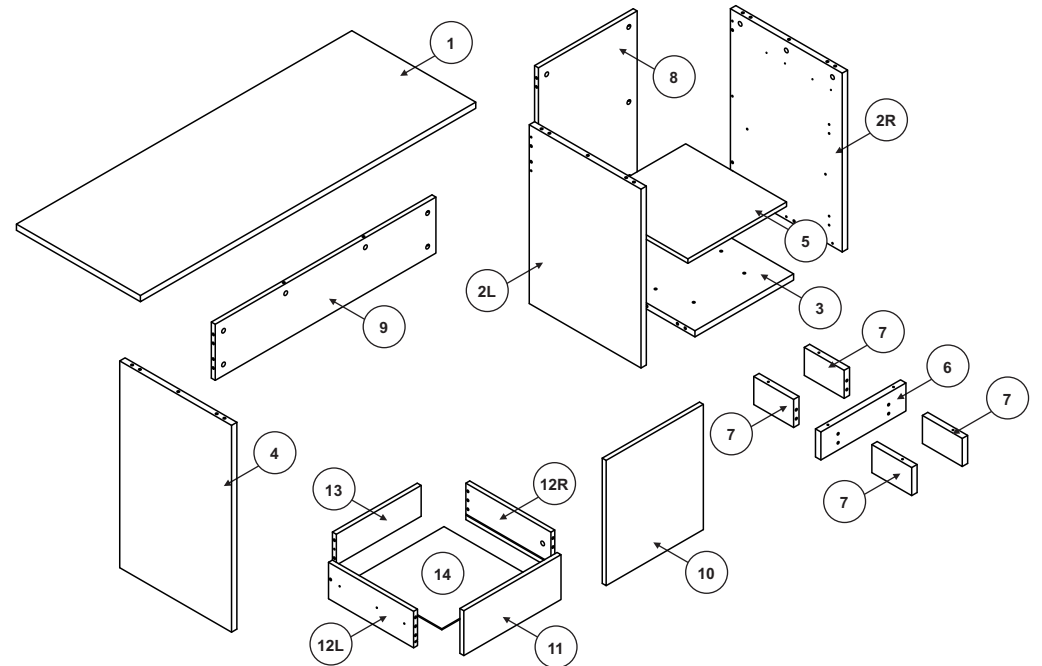


NH 3x13 x3	TD x1	ZE x1	FA L=400 x2	ZF x8	TE x1	TF x1
A 8x35 x36	B x29	CA 15x15 x15	C 15x12 x14	N 3,5x16 x18	Y 7x50 x8	X x4
SB x1	PA x2	R H=0 x2	H 6,3x13 x4	ZK 20mm x29	ZM 10mm x8	ZB x4
						NS 3,5x13 x2

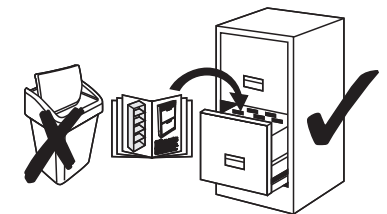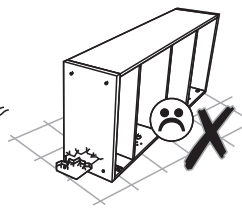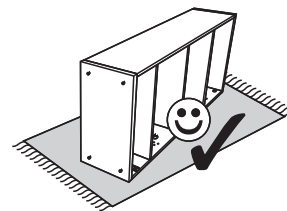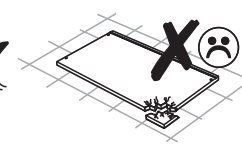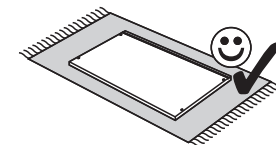

2

FA L=400  
x2

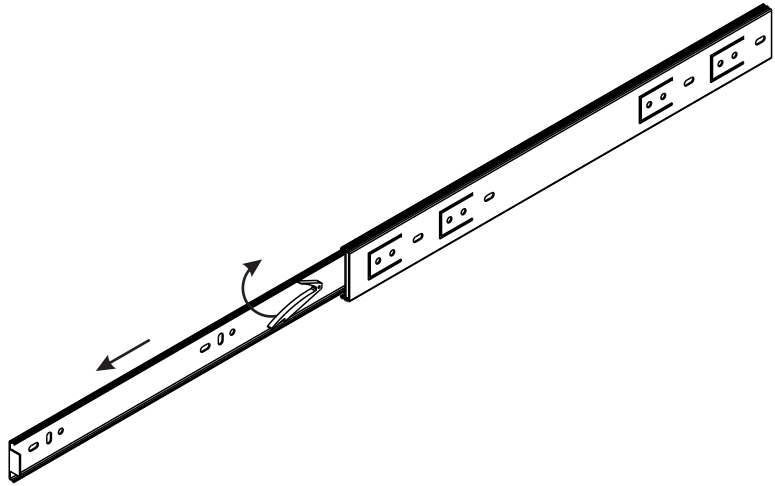


3



R H=0 x2  
H 6,3x13 x4  
B x14  
NL 3,5x25 x2

A 8x35 x4  
FA L=400 x2  
TE x1


N 3,5x16 x8

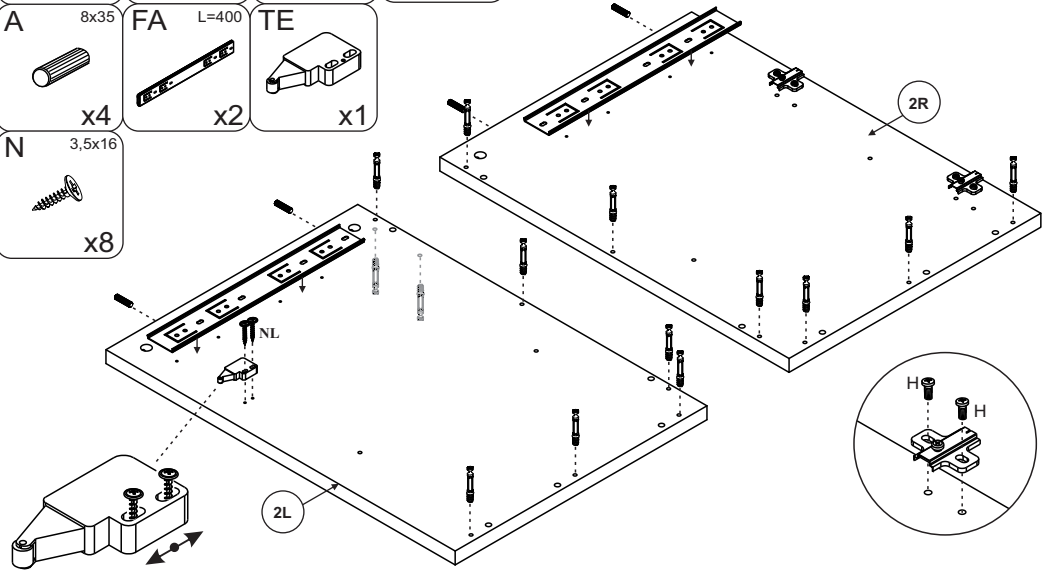

4

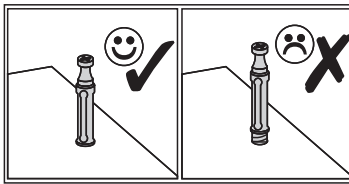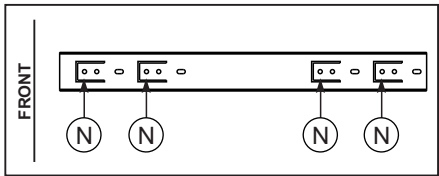


A 8x35 x6  
B x2

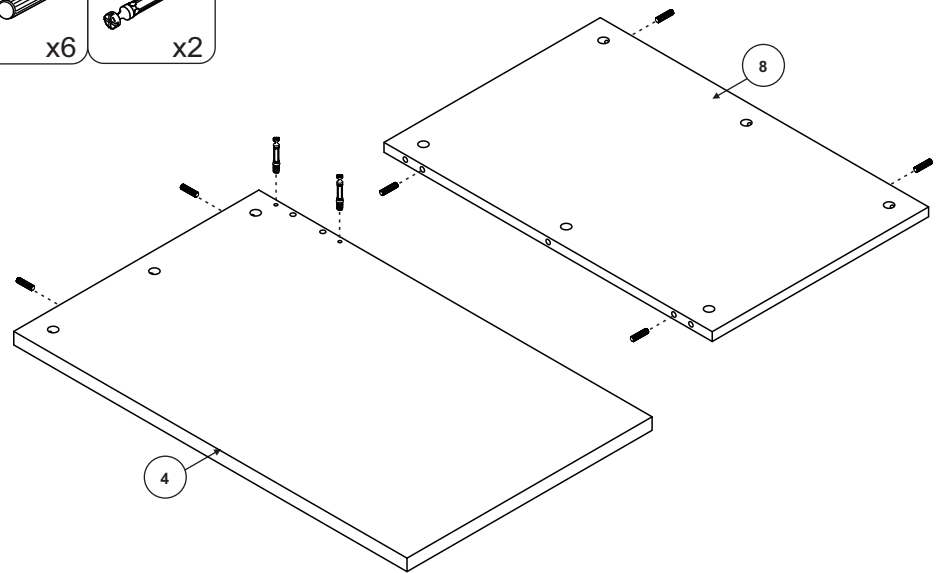


5

A 8x35 x18  
B x11  
NH 3x13 x2


TD x1

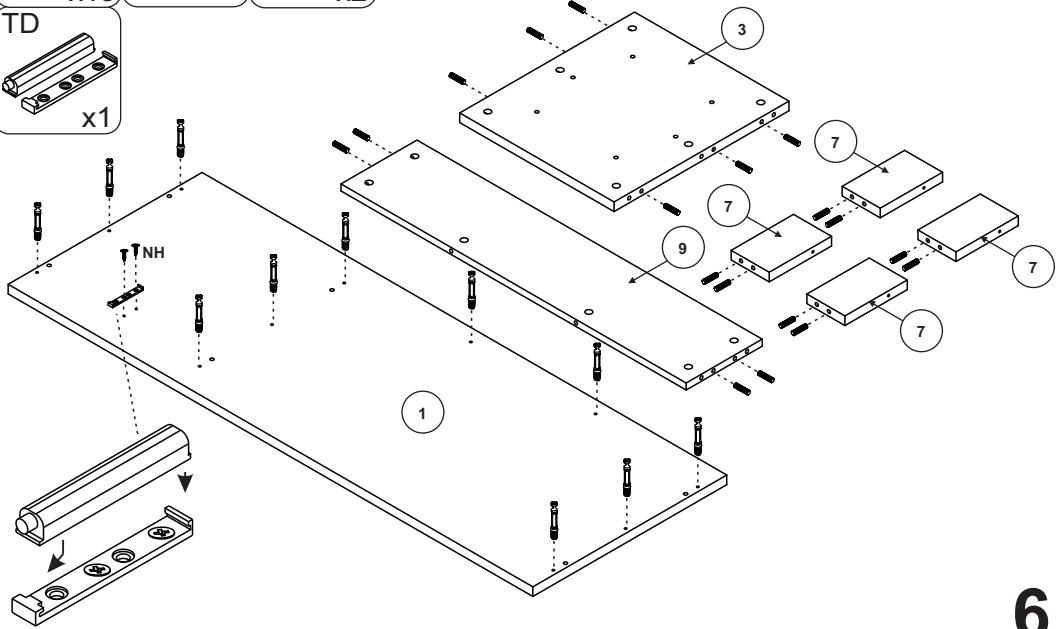



6

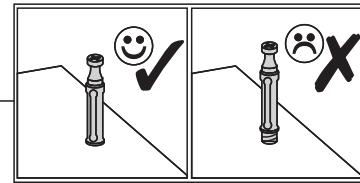



7

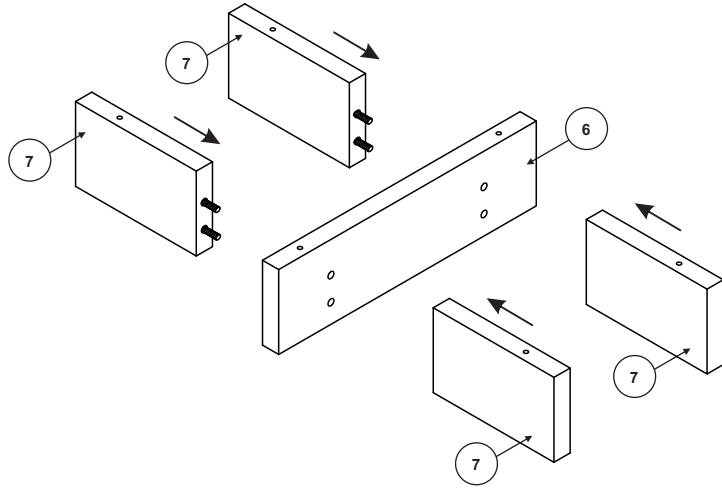



9



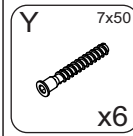
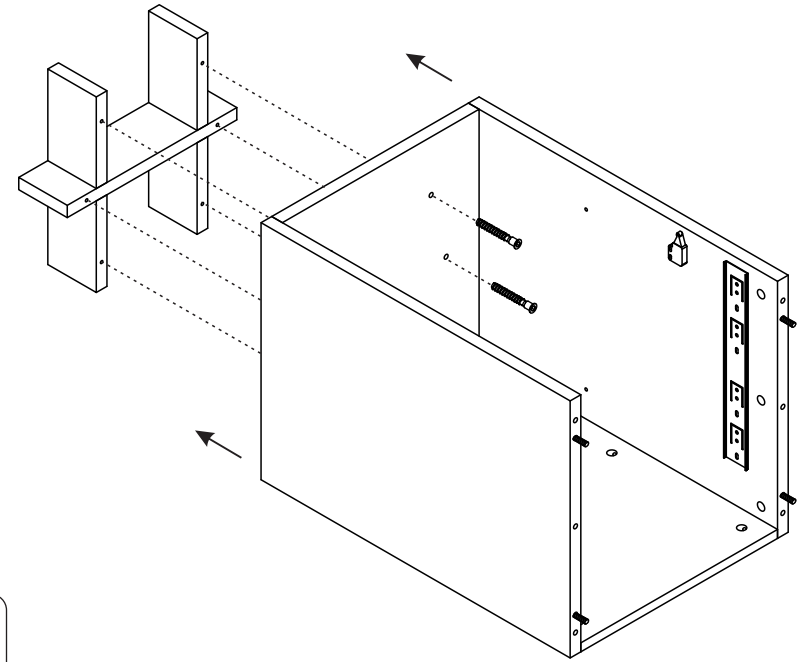


8

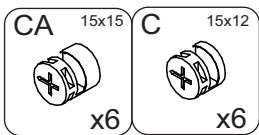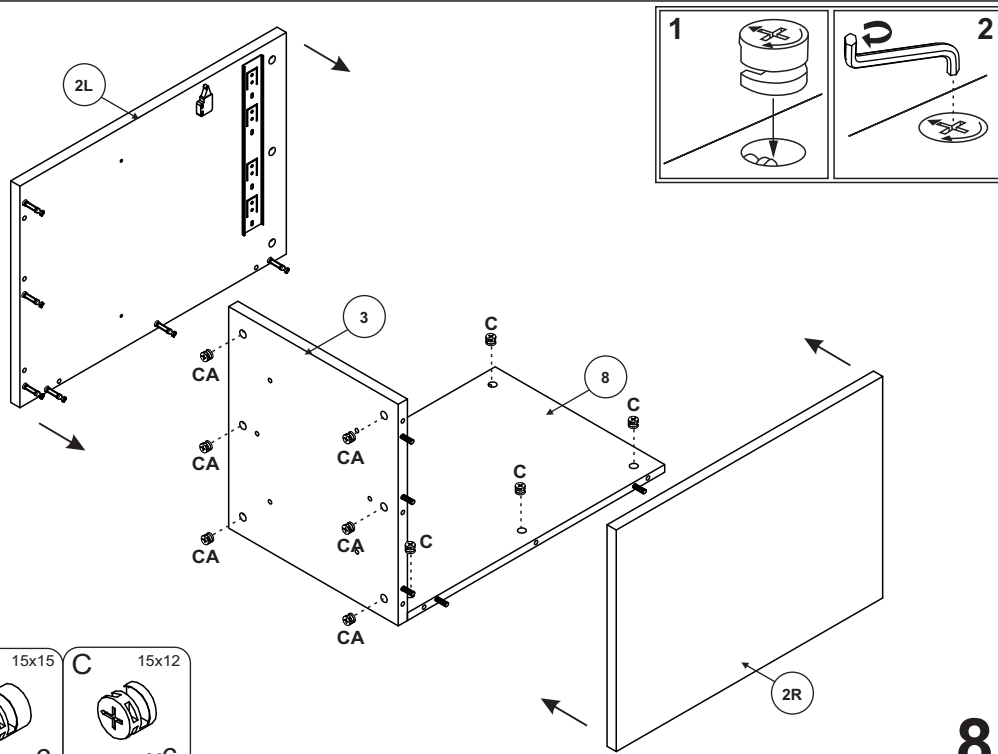


10

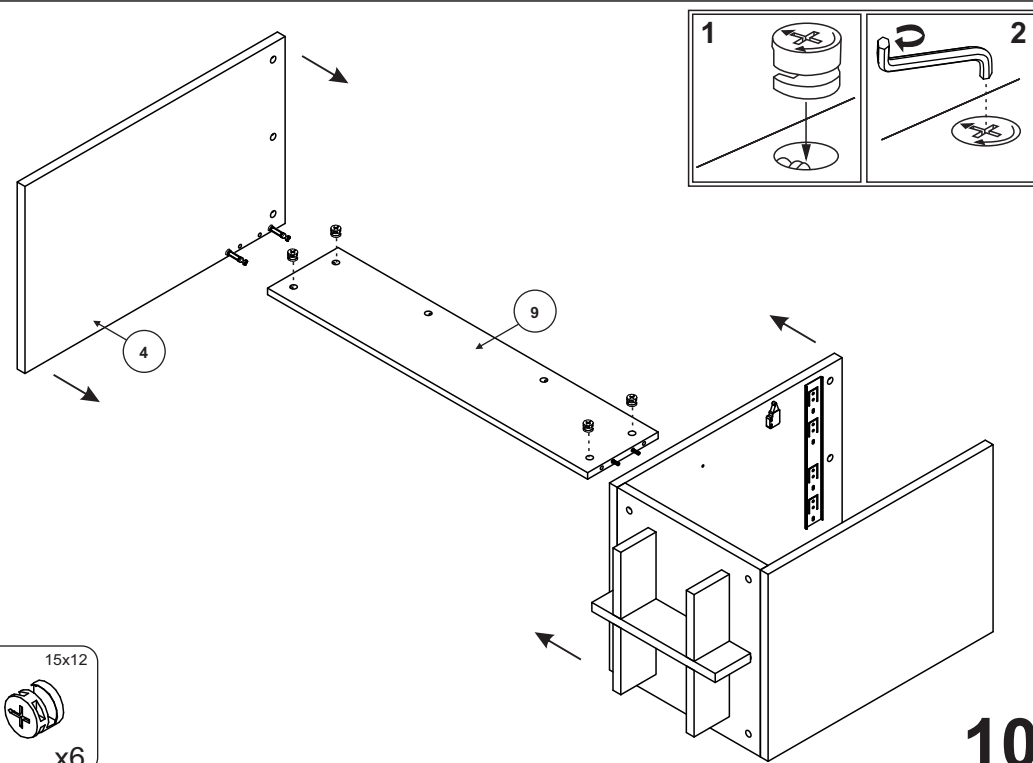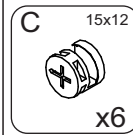

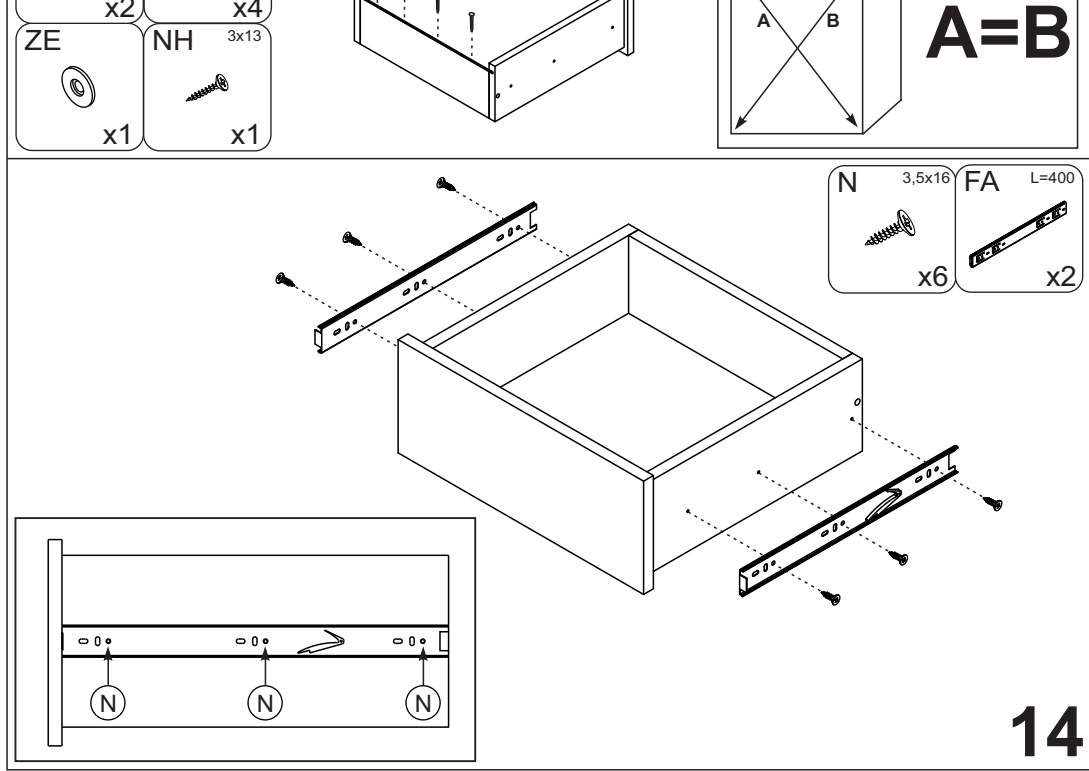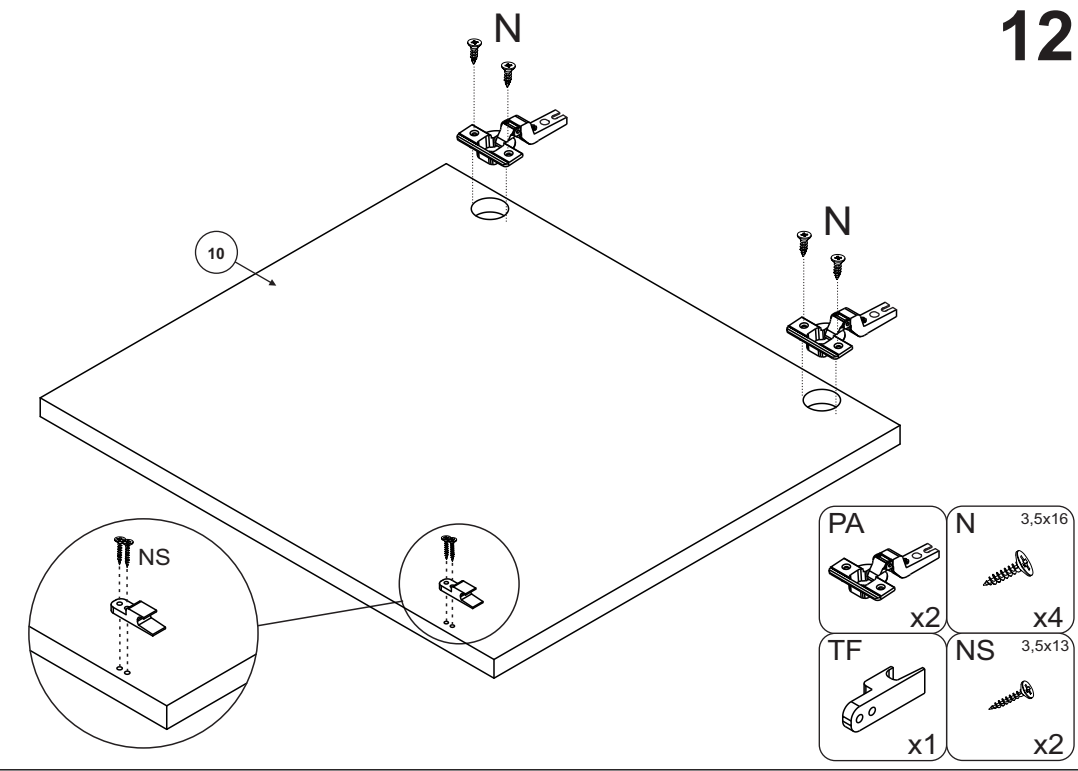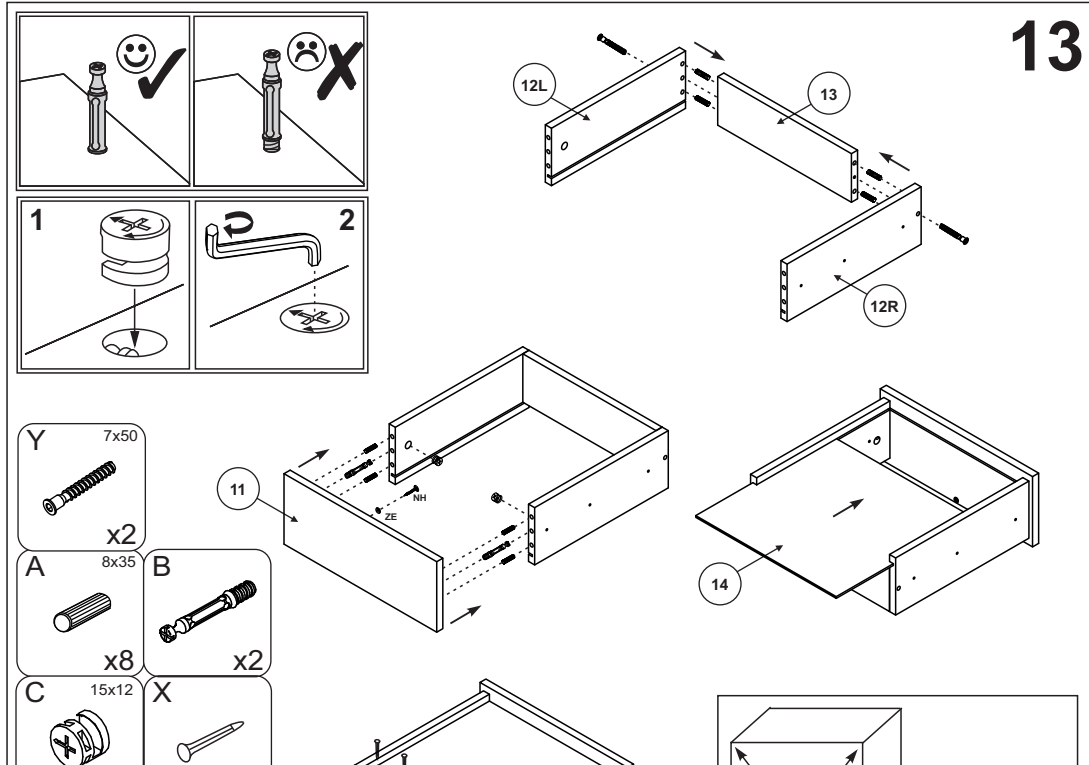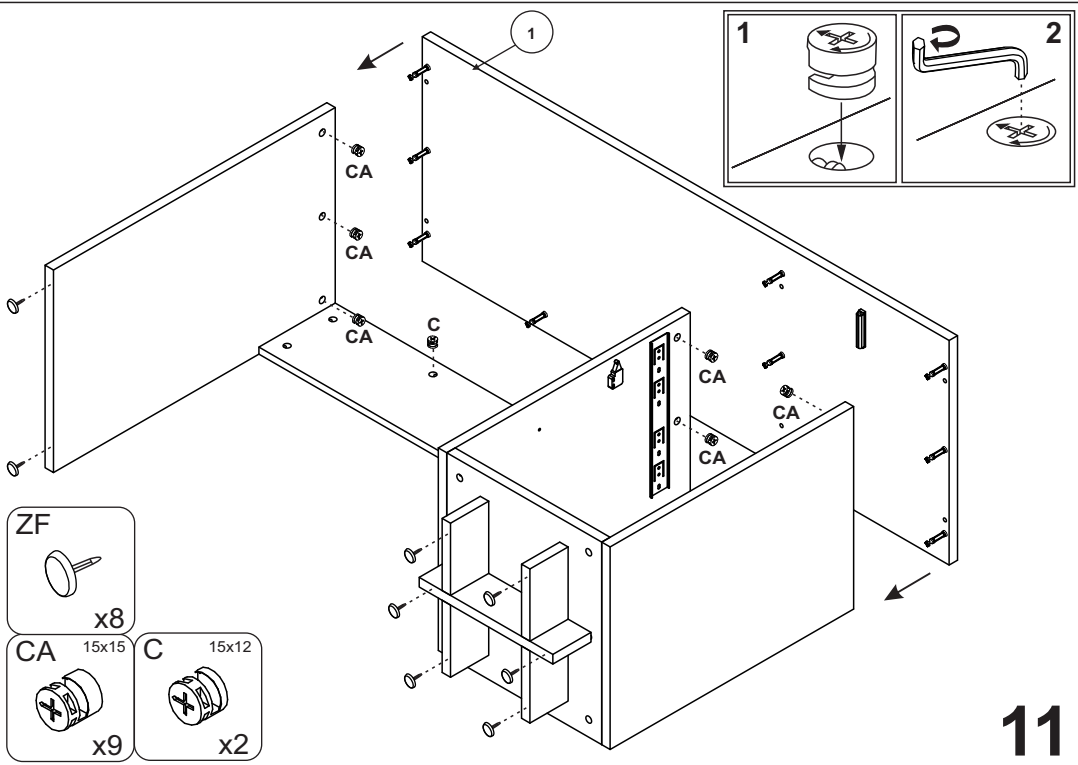

- ZF x8
- CA 15x15 x9
- C 15x12 x2

- Y 7x50 x2
- A 8x35 x8
- B x2
- C 15x12 x2
- X x4
- ZE x1
- NH 3x13 x1

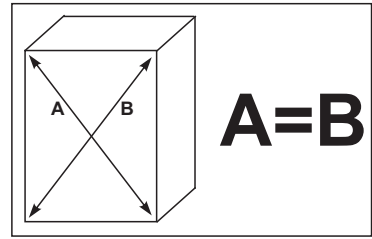


- N 3,5x16 x6
- FA L=400 x2


- PA x2
- N 3,5x16 x4
- TF x1
- NS 3,5x13 x2

- ZK 20mm x29
- ZM 10mm x8
- ZB x4


15

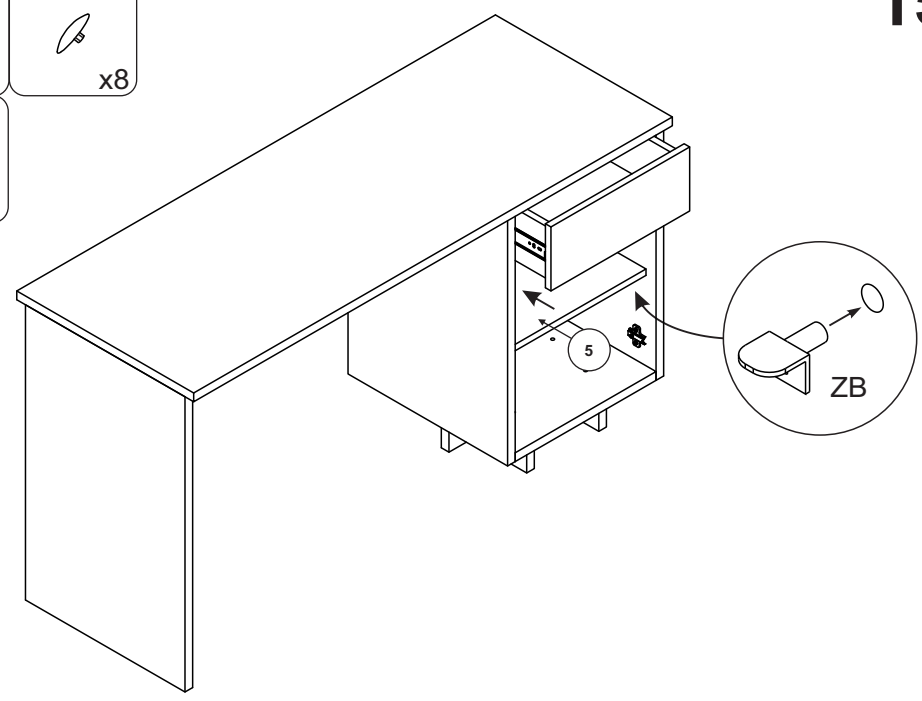

17

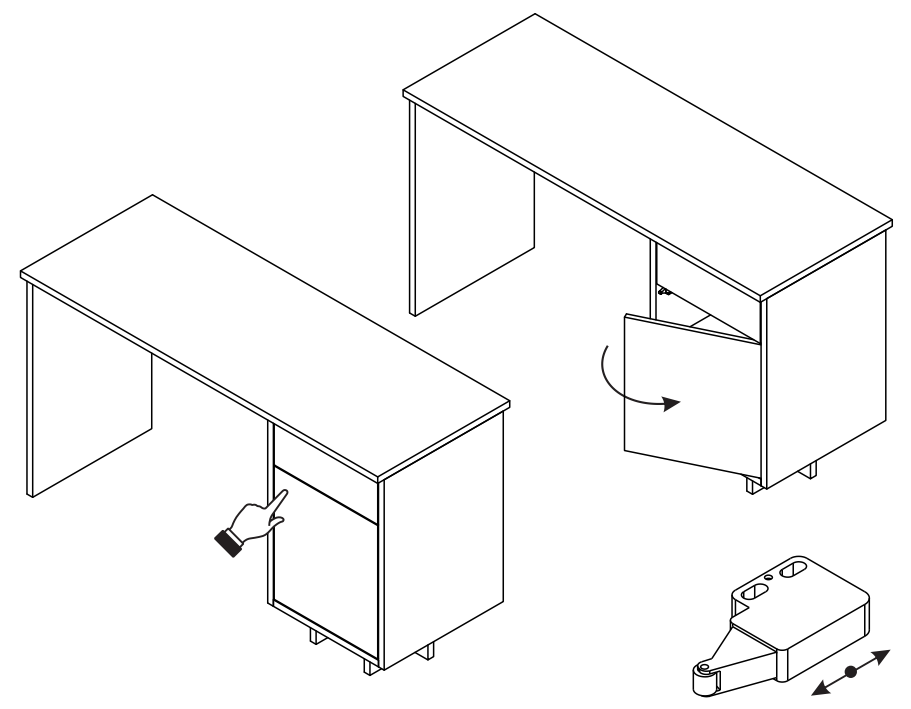

16

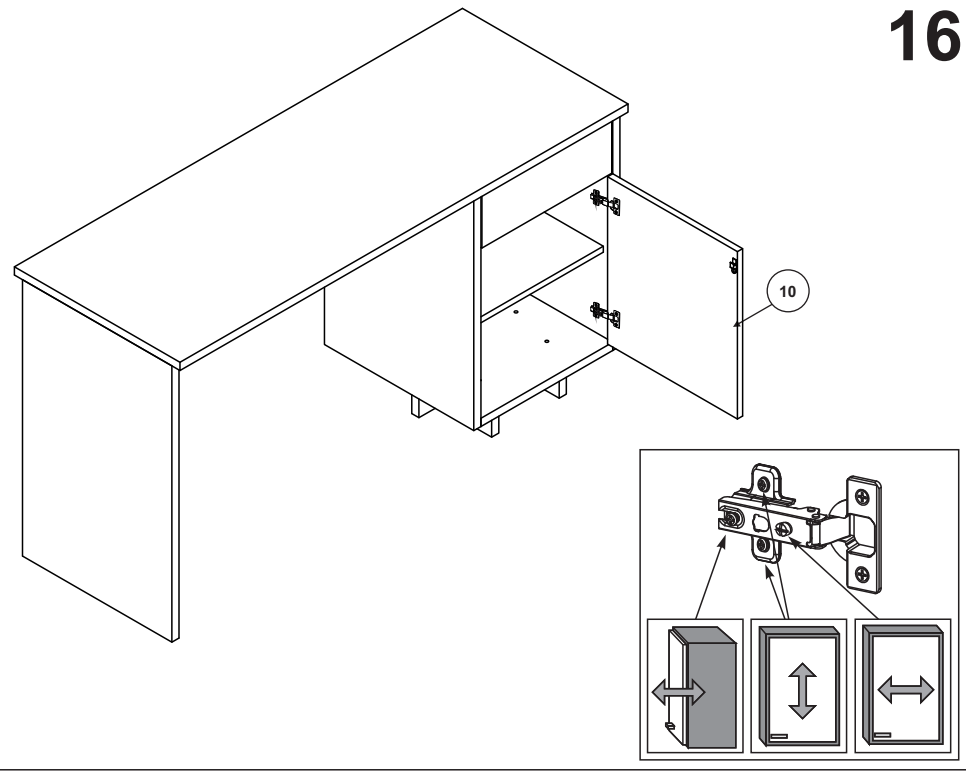

18

