

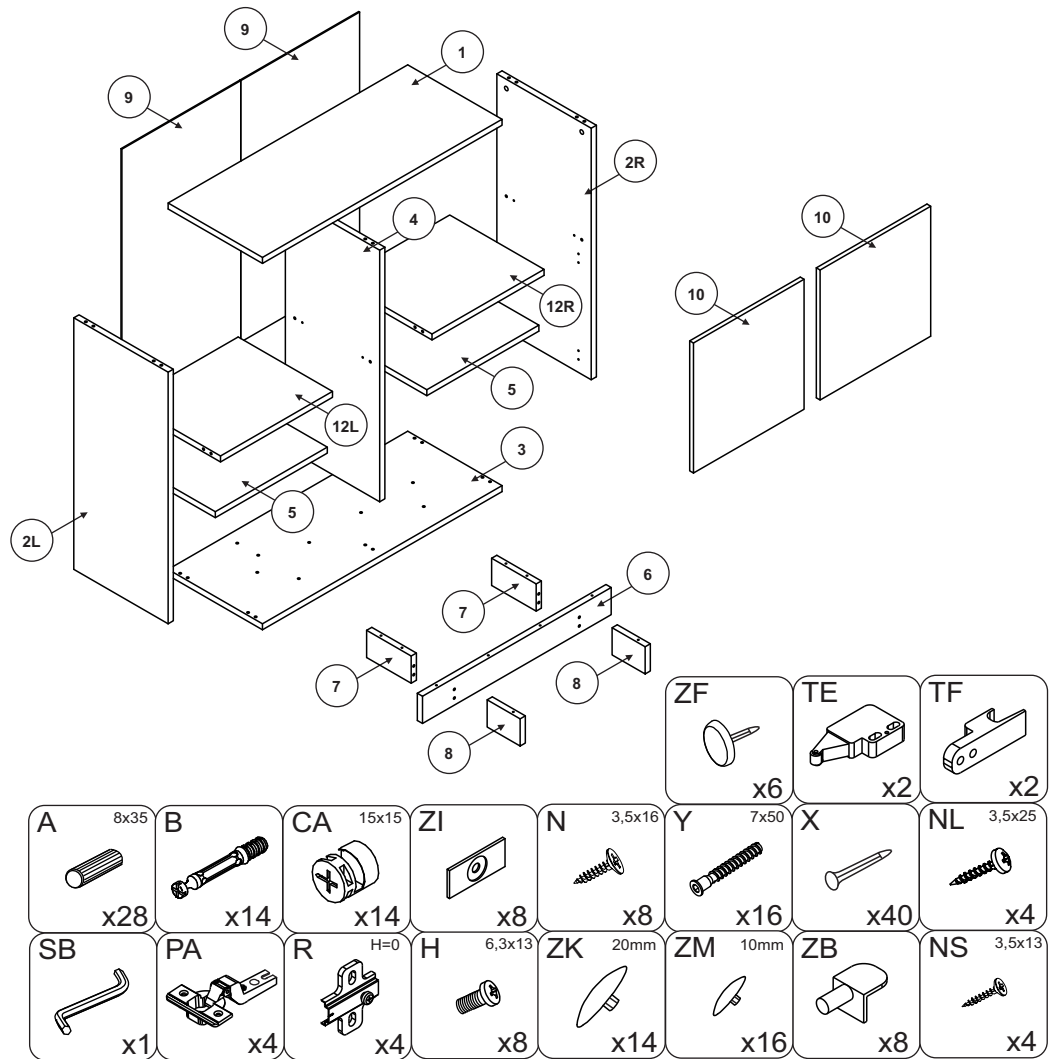
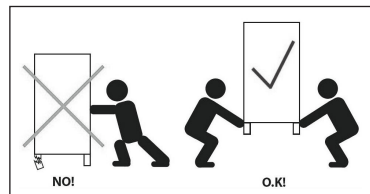
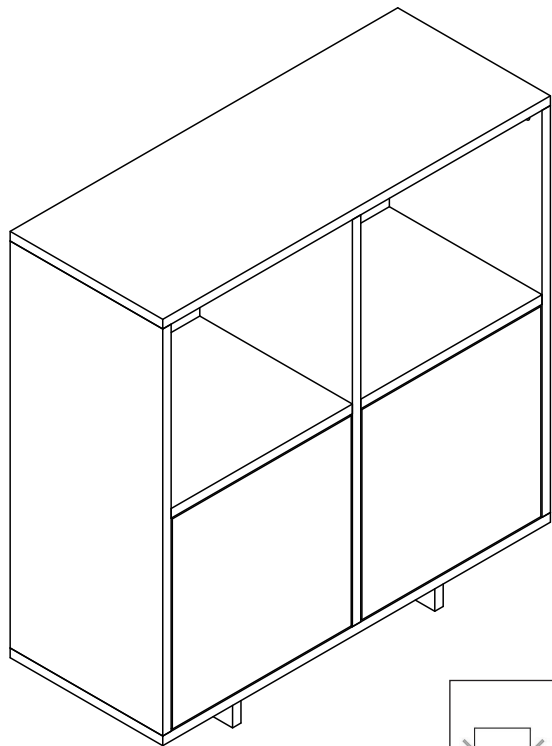


# NOMA N06



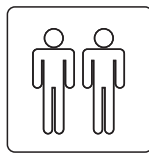


- |   |                                     |
|---|-------------------------------------|
| <b>(D)</b> Montageanleitung             | <b>(GB)</b> Assembly instructions   |
| <b>(FR)</b> Notice de montage           | <b>(IT)</b> Istruzioni di montaggio |
| <b>(NL)</b> Handleiding voor de montage | <b>(PL)</b> Instrukcja montażu      |
| <b>(CZ)</b> Montážní návod              | <b>(SK)</b> Návod na montáž         |
| <b>(HU)</b> Szerelési útmutató          | <b>(RO)</b> Instrucțiuni de montaj  |
| <b>(TR)</b> Montaj talimatı             | <b>(RU)</b> ИНСТРУКЦИЯ ПО МОНТАЖУ   |







2 - 2,5

1

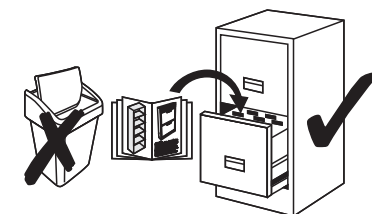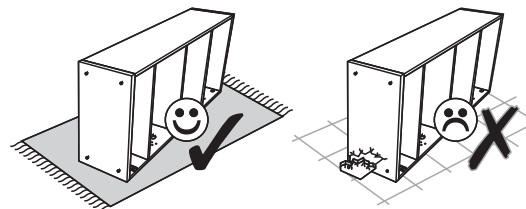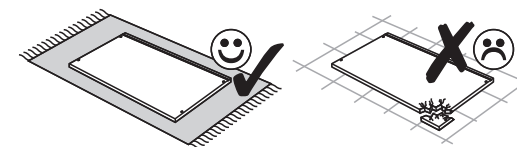


2

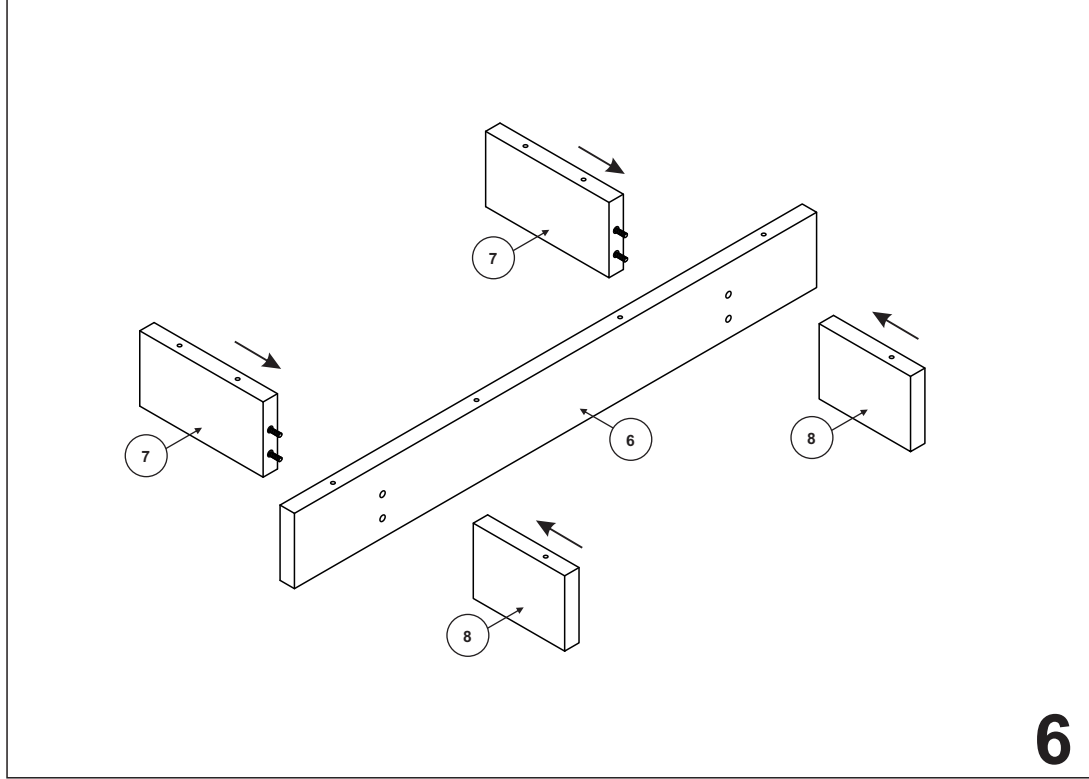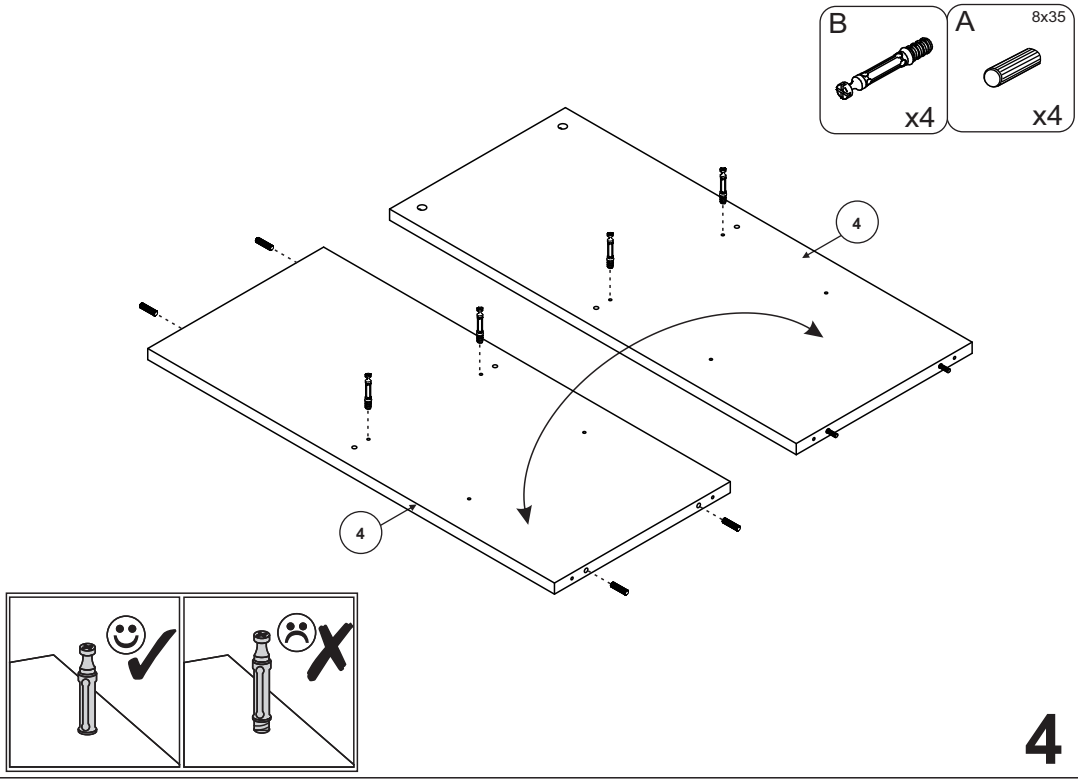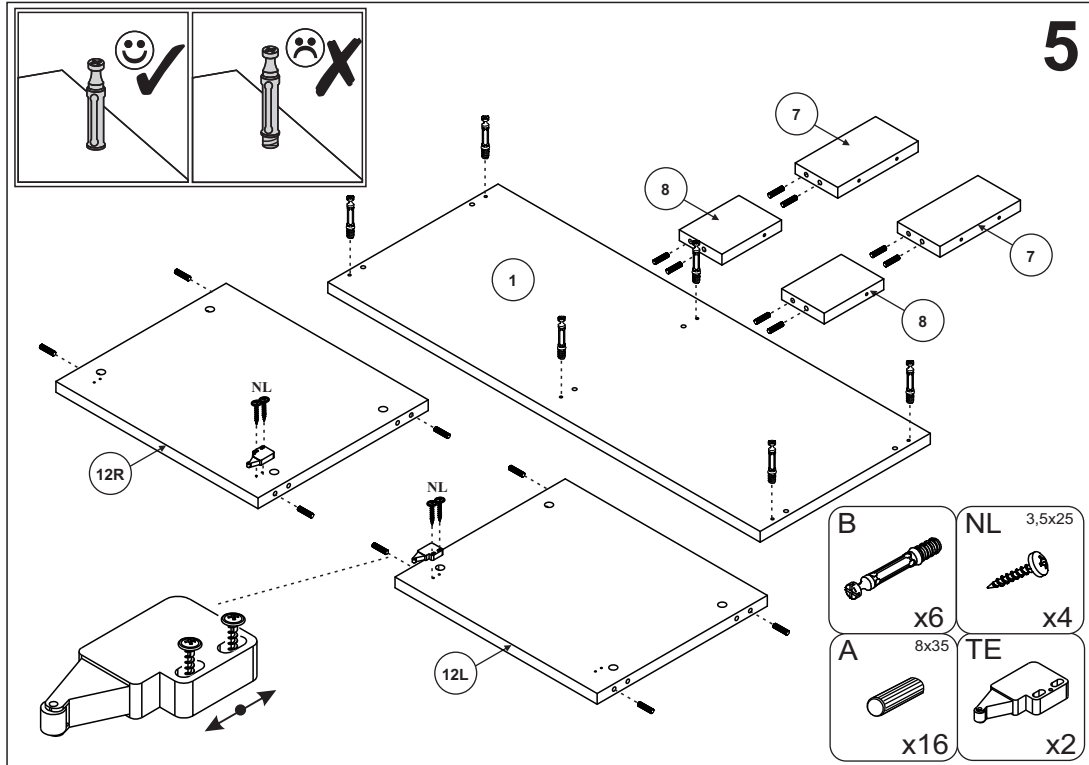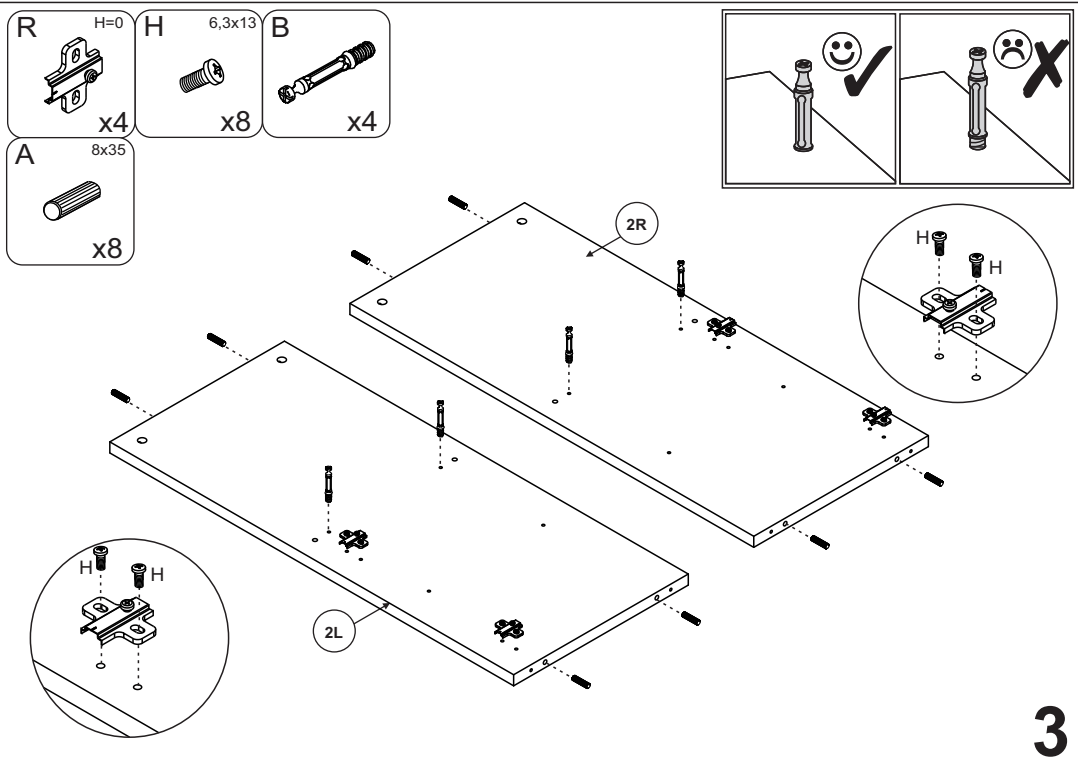



Y 7x50  
x10

7

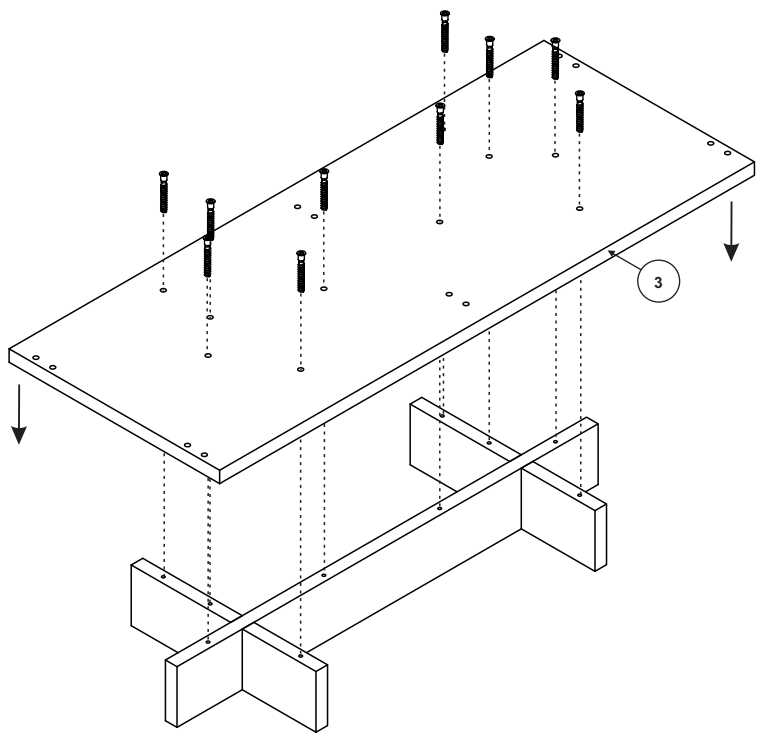


Y 7x50  
x6

9

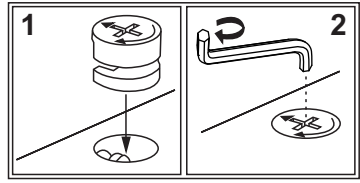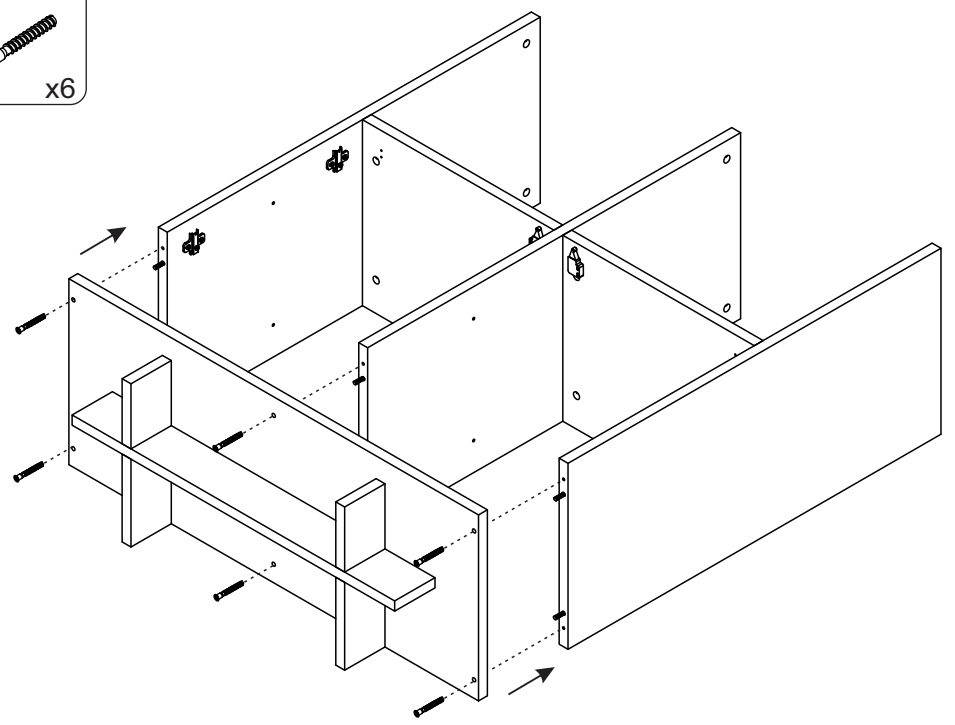



8

CA 15x15  
x8

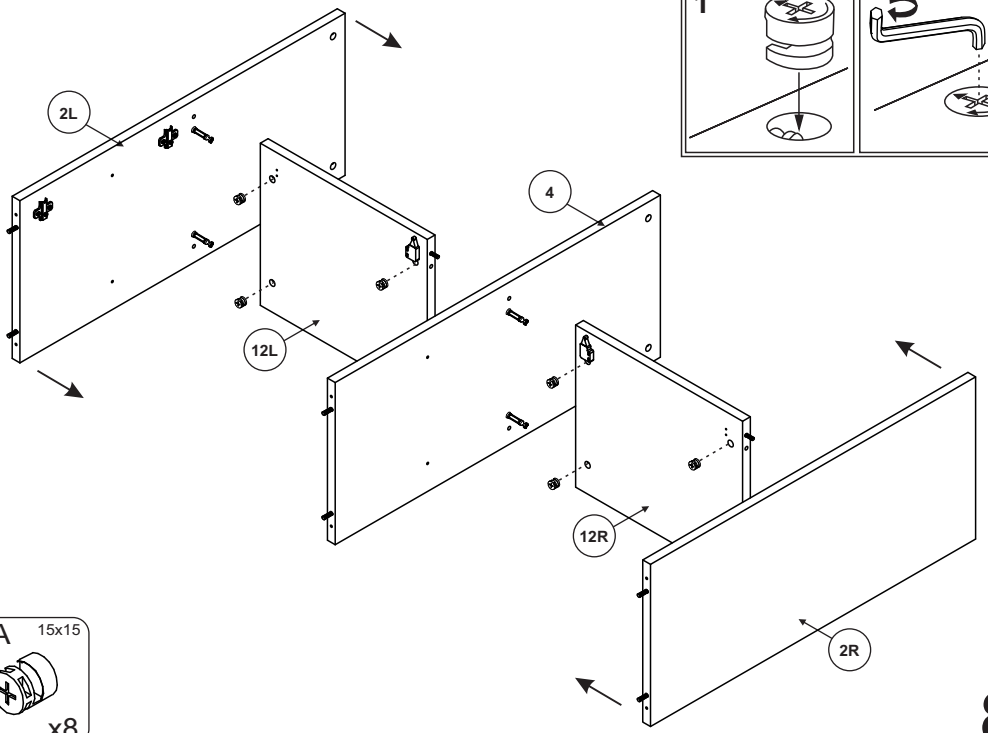



CA 15x15 ZF  
x6 x6

10

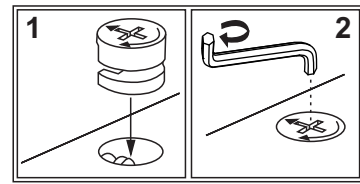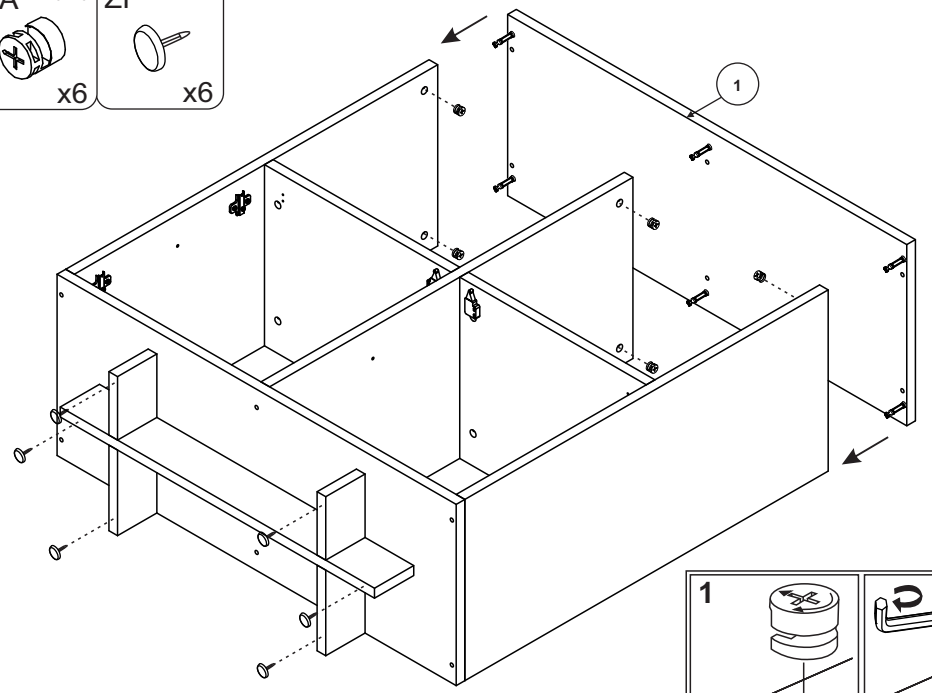


- X x40
- ZI x8

11

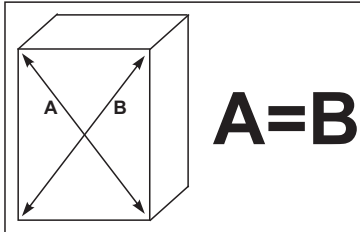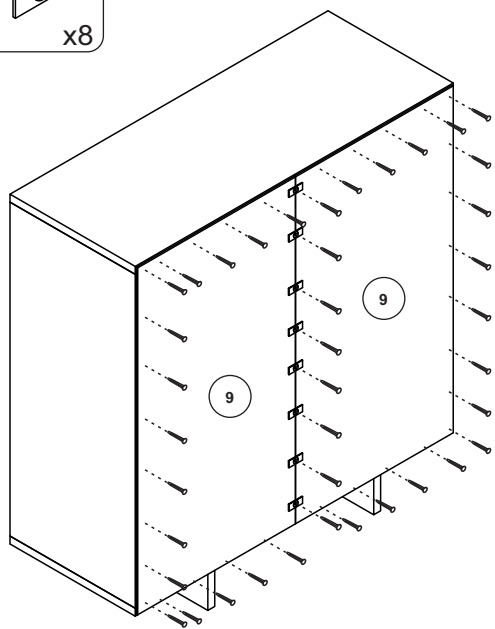


- PA x4
- N 3,5x16 x8
- TF x2
- NS 3,5x13 x4

13

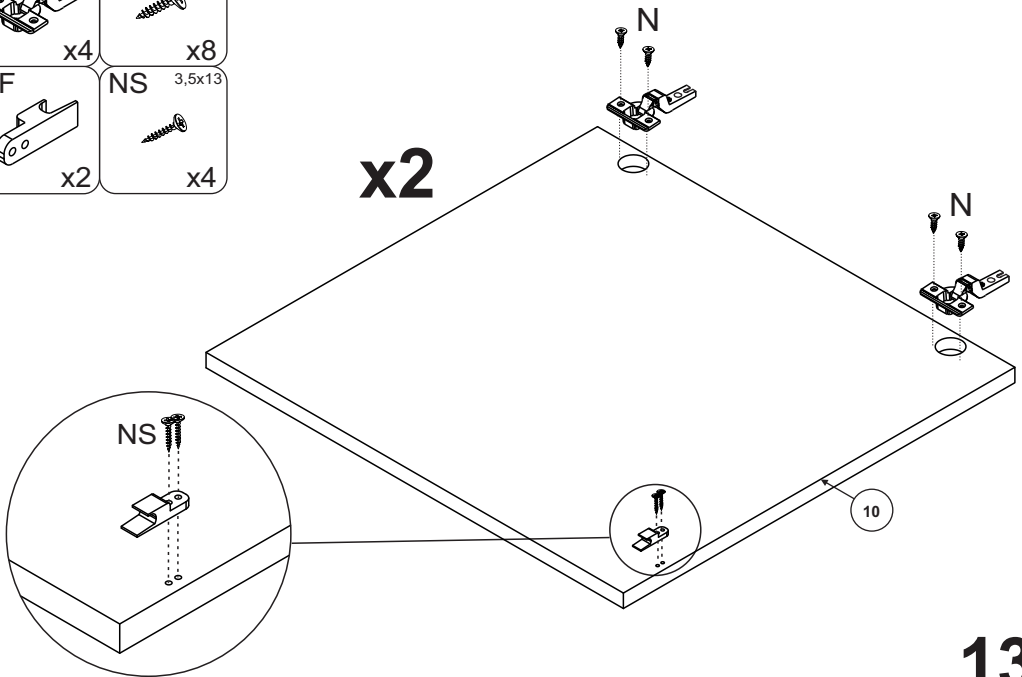

- ZK 20mm x14
- ZM 10mm x16
- ZB x8

12

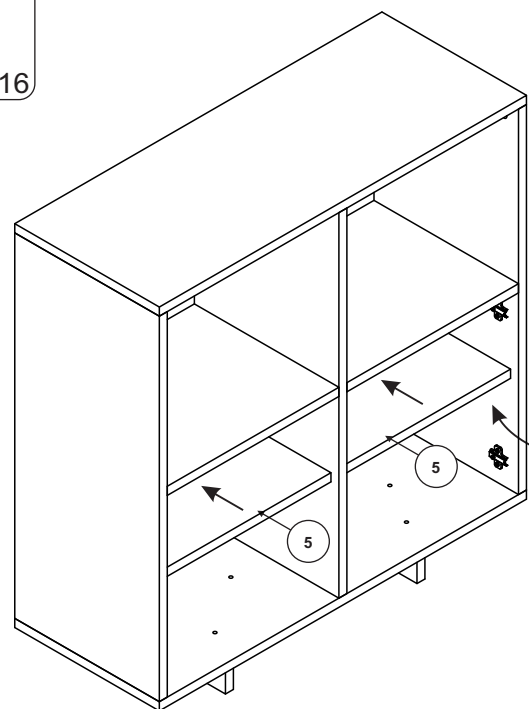

14

