
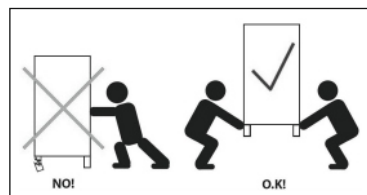


DORIAN

Wardrobe

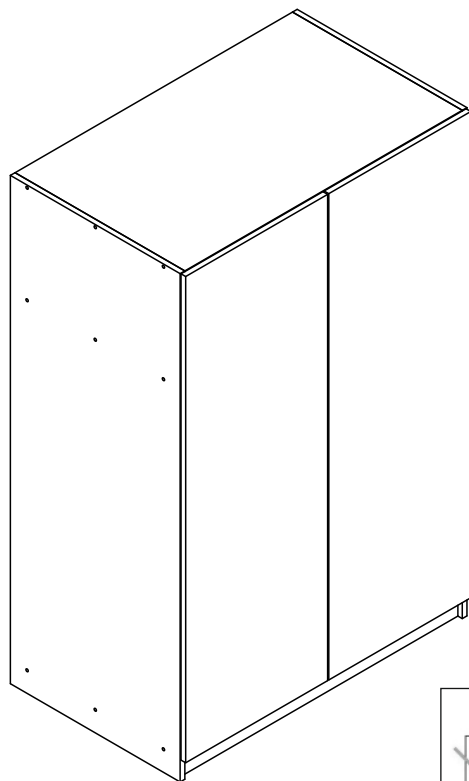

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatı

(GB) Assembly instructions



(IT) Istruzioni di montaggio

(PL) Instrukcja montażu

(SK) Návod na montáž


(RO) Instrucțiuni de montaj

(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ

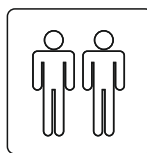



1,5 - 2

1

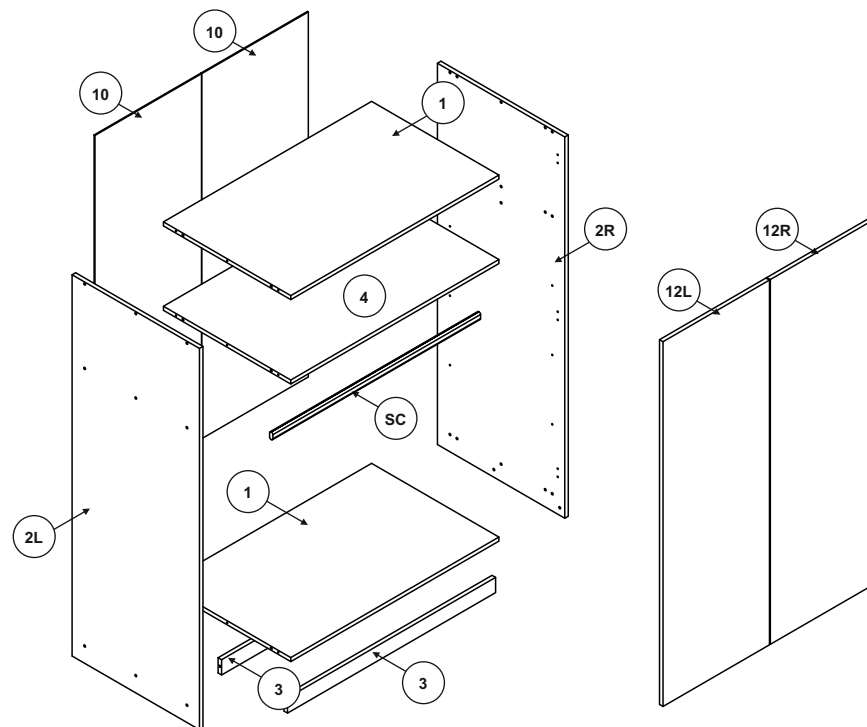

A 8x35 x16	TN x2	S L=1405 x1	Z x18	N 3,5x16 x18	Y 7x50 x18	X x50
ZF x4	P x6	RA H=2 x6	H 6,3x13 x12	SB x1	T x2	SC L=940 x1

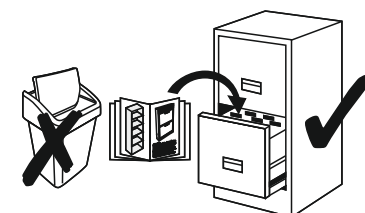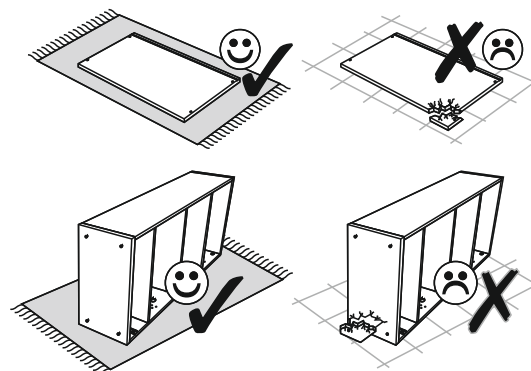

2

